

Paracipse[®] **Mosquito** **Eliminator**


REPLACEMENT LAMP PROCEDURES

Remove Access Door

To install a replacement lamp you must first remove access door. To remove access door, with the door facing you, grab the middle edge of the door, push towards back of unit and pull towards you (Fig. 1). The door will come completely off the unit (Fig.2).

Remove Cartridge

Remove the cartridge by gently pulling out of unit towards you.

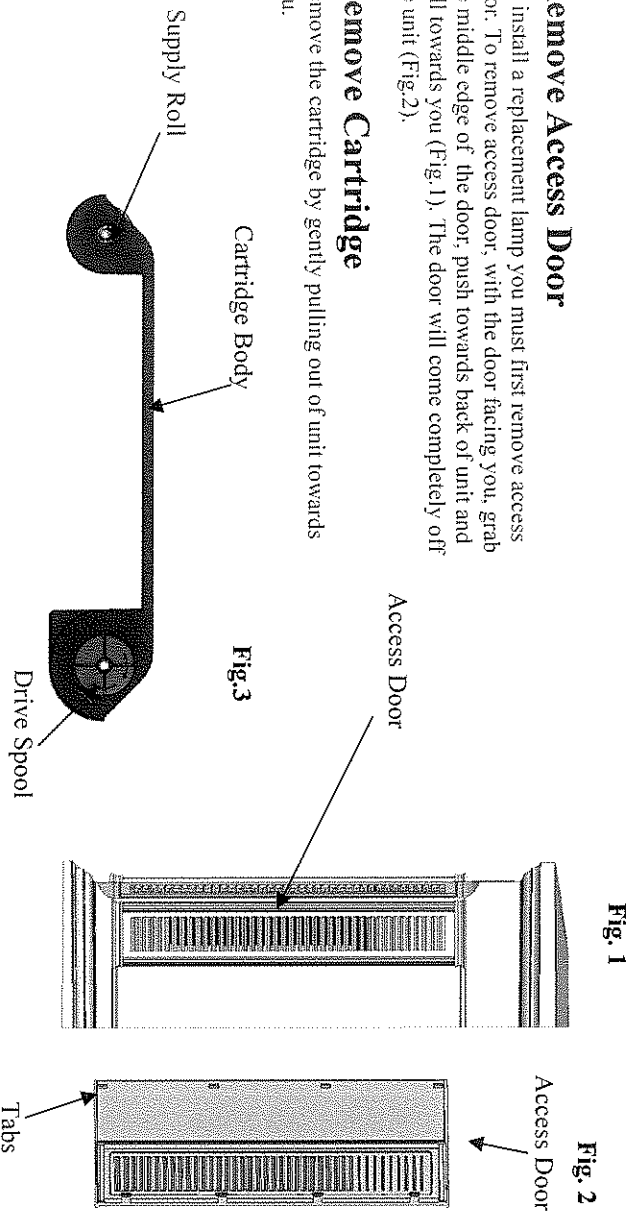

Remove Old Lamp

Remove old lamp by pushing upwards and turning clockwise on the base of the lamp (Fig.4).

Install New Lamp


Install new lamp by pushing upwards and turning counter clockwise on the base of the lamp (Fig.4).

Install Cartridge

Hold the cartridge body in your hand (Fig.3) with the drive spool knob facing you. Slide the cartridge into place making sure the drive spindle is engaged with the motor drive shaft (located towards top of unit) and the supply roll placed on the guide pin (located towards bottom of unit).

Install Access Door

To put the access door back on simply line up the four tabs (Fig. 2) on the door with the back plate of the unit. Once the tabs are lined up push the front of the door closed. The door will firmly snap into place.


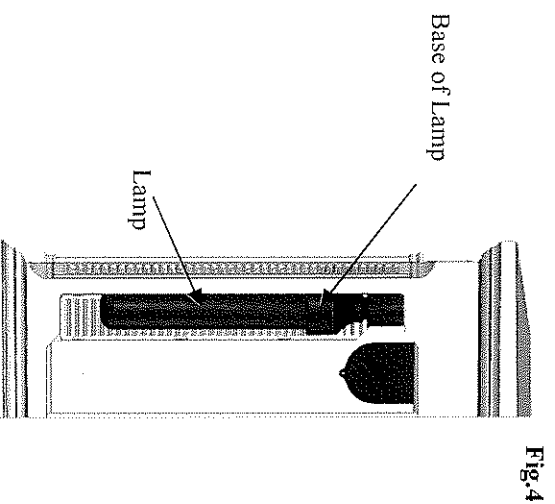


Paracipse[®] Mosquito **Eliminator**


REPLACEMENT CARTRIDGE PROCEDURES

Remove Access Door

To install a replacement cartridge you must first remove access door. To remove access door, with the door facing you, grab the middle edge of the door, push towards back of unit and pull towards you. (Fig.1) The door will come completely off the unit.(Fig.2)

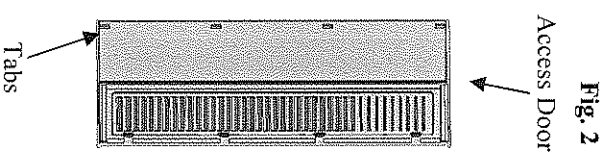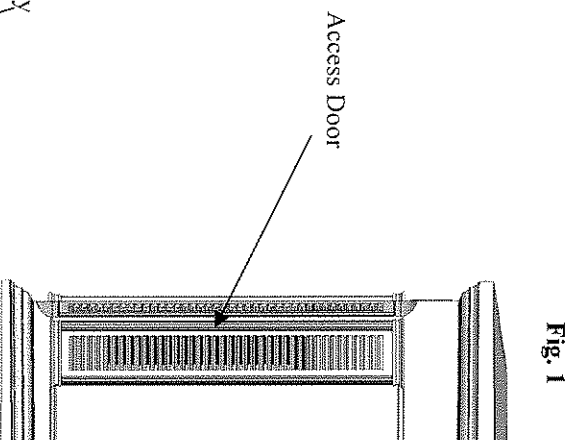


Remove old Cartridge
Remove the cartridge by gently pulling out of unit towards you (Fig.4).

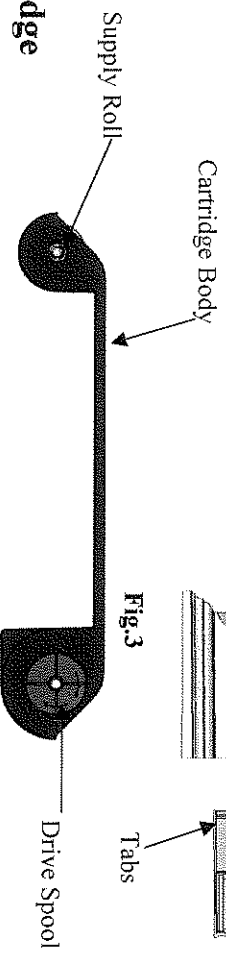

Install New Cartridge

Hold the cartridge body in your hand (Fig.3) with the drive spool knob facing you. Slide the cartridge into place (Fig.4) making sure the drive spindle is engaged with the motor drive shaft (located towards top of unit) and the supply roll placed on the guide pin (located towards bottom of unit). Once cartridge is in place rotate the drive spool in the direction of the arrow shown until glue surface reaches the drive spool. This will require 7 to 8 rotations.

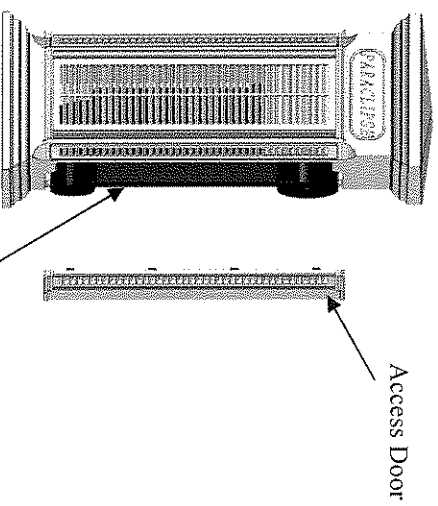

Install Access Door

To put the access door back on simply line up the four tabs (Fig.2) on the door with the back plate of the unit. Once the tabs are lined up push the front of the door closed. The door will firmly snap into place.