# PHILIPS ADVANCE


## RL-140-TP

Brand Name	MAGNETIC-NPF					
Ballast Type	Magnetic					
Starting Method	Rapid Start					
Lamp Connection	Series					
Input Voltage	120					
Input Frequency	60 HZ					
Status	Active					

## **Electrical Specifications**

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F
25W/48T12	1	25	50/10	0.53	31	0.91	15	0.49	1.5	2.90
F30T12	1	30	50/10	0.60	33	0.71	10	0.45	1.5	2.16
F40T12	1	40	50/10	0.53	32	0.63	15	0.55	1.4	2.01
* FC12T9	1	32	50/10	0.59	32	0.68	15	0.45	1.5	2.13
FC16T9	1	40	50/10	0.46	29	0.55	15	0.53	1.5	1.88

### **Wiring Diagram**

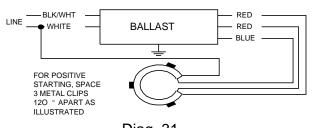


Diag. 31

The wiring diagram that appears above is for the lamp type denoted by the asterisk (\*)

#### Standard Lead Length (inches)

 			1	-	in.	cm.
	in.	cm.		Yellow/Blue		
Black				Blue/White		
White	36					
Blue	36		1	Brown		
				Orange		
Red	25					
Yellow				Orange/Black		
			i	Black/White	10	
Gray				Red/White		
Violet						





#### **Enclosure Dimensions**

OverAll (L)	Width (W)	Height (H)	Mounting (M)
6.50 "	1.9375 "	1.375 "	6 "
6 1/2	1 15/16	1 3/8	6
16.5 cm	4.9 cm	3.5 cm	15.2 cm

Revised 07/01/1999



Data is based upon tests performed by Philips Lighting Electronics N.A. in a controlled environment and is representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

PHILIPS LIGHTING ELECTRONICS N.A. 10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018 Tel: 800-322-2086 · Fax: 888-423-1882 · www.philips.com/advance Customer Support/Technical Service: 800-372-3331 · OEM Support: 866-915-5886