


Specification Sheet : HH-MH-MLT4-450P


450W M144 60 Hz CWA Core & Coil Ballast Status: Active

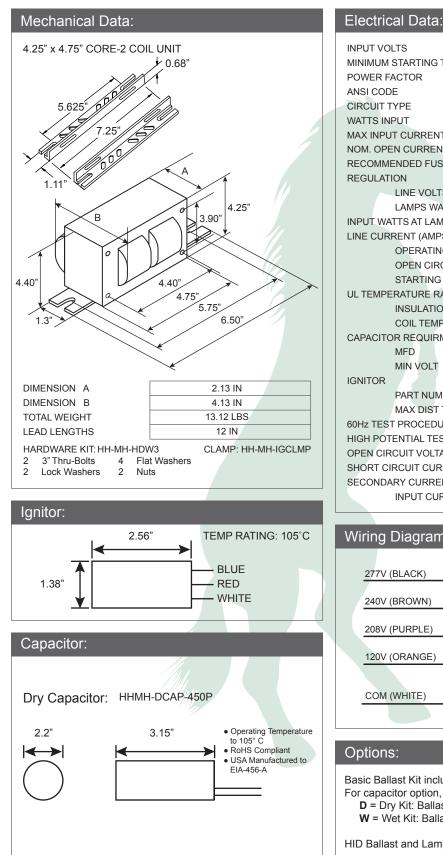



120	208	240	277
-20°F or -30°C			
90%			
450 WATTS LAMP, M-144			
CWA			
504			
4.269	2.458	2.136	1.845
285			
10	6	5	4
±10%			
±10%			
72	117	127	148
4.269	2.458	2.136	1.845
2.402	1.395	1.207	1.054
3.120	1.872	1.631	1.418
D	E	E	E
H(180)			
1029			
26uF			
400			
HH-MH-IG450			
2 FT			
1 MIN: 2000, 2 SEC: 2500			
3.84-4.69			
3.402	1.966	1.696	1.481
	4.269 4.269 10 72 4.269 2.402 3.120 D	-20°F o 90 450 WATTS CV 50 4.269 2.458 28 10 6 ±11 ±11 72 117 4.269 2.458 2.402 1.395 3.120 1.872 D E H(1 10 0 260 40 1 MIN: 2000, 260 3.84	$\begin{array}{c c c c c } -20^{\circ} \text{F or } -30^{\circ} \text{C} \\ & 90^{\circ} \\ \hline & 90^{\circ} \\ \hline & 450 \text{ WATTS LAMP, M} \\ \hline & & 504 \\ \hline & & 504 \\ \hline & & & 504 \\ \hline & & & & & & & \\ \hline & & & & & & & \\ \hline & & & &$

Wiring Diagram:

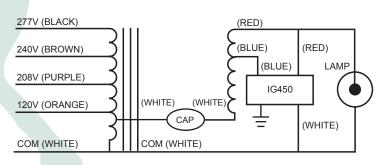

Basic Ballast Kit includes Ballast, Ignitor and Mounting Hardware only. For capacitor option, add Base Model No. and one Capacitor code: **D** = Dry Kit: Ballast + Ignitor + Dry Capacitor + Mounting Hardware W = Wet Kit: Ballast + Ignitor + Wet Capacitor + Mounting Hardware

HID Ballast and Lamp Kits also available; please see website www.fulham.com.

Fulham extends a limited warranty only to the original purchaser or to the first user for a period of 2 years for the ballast and 1 year for the capacitor and ignitor from the date of manufacture when properly installed and operated under normal conditions of use. For complete terms and conditions, please reference the Fulham product catalog (www.fulham.com)