

Can Compatibility* – LR6/LR6C

Capri

| Part Number | Compatible as is | Compatible with modifications | Not compatible | Recommended modifications |
|-------------|------------------|-------------------------------|----------------|--|
| CIND6 | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| CR1 | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| CR1NB | ✓ | | | |
| CR1NBQP | ✓ | | | |
| CR1QP | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| CRR1 | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| CRR1NB | ✓ | | | |
| CRR1NBQP | ✓ | | | |
| CRR1QP | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| PR1 | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| PR75ASIC | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| PR75IC | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| QL1 | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| QL1NB | ✓ | | | |
| QL1NBQP | ✓ | | | |
| QL1QP | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| R150ASIC | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |

*Compatibility was determined based on whether the LR6 would fit within the identified can when appropriately modified. The presence of a can on the compatibility chart is not a guaranty or warranty of the compatibility of the LR6 in any particular installation. The absence of a can from the compatibility chart does not indicate that the LR6 is not compatible with a particular can. In any install, the installer should make sure that the LR6 is securely retained in the fixture at the time of install.

Can Compatibility* – LR6/LR6C

Halo

| Part Number | Compatible as is | Compatible with modifications | Not compatible | Recommended modifications |
|-------------|------------------|-------------------------------|----------------|---|
| H7ICAT | | ✓ | | Remove "L" bracket and backing plate. Unclip socket from backing plate. |
| H7ICATNB | ✓ | | | |
| H7ICT | | ✓ | | Remove "L" bracket and backing plate. Unclip socket from backing plate. |
| H7ICTNB | ✓ | | | |
| H7RICAT | | ✓ | | Remove "L" bracket and backing plate. Unclip socket from backing plate. |
| H7RICT | | ✓ | | Remove "L" bracket and backing plate. Unclip socket from backing plate. |
| H7RT | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |
| H7T | ✓ | | | |
| H7TNB | | | ✓ | |
| H7UICAT | | | ✓ | |
| H7UICT | | | ✓ | |

*Compatibility was determined based on whether the LR6 would fit within the identified can when appropriately modified. The presence of a can on the compatibility chart is not a guaranty or warranty of the compatibility of the LR6 in any particular installation. The absence of a can from the compatibility chart does not indicate that the LR6 is not compatible with a particular can. In any install, the installer should make sure that the LR6 is securely retained in the fixture at the time of install.

Can Compatibility* – LR6/LR6C

Juno

| Part Number | Compatible as is | Compatible with modifications | Not compatible | Recommended modifications |
|-------------|------------------|-------------------------------|----------------|--|
| IC2 | | ✓ | | Loosen two socket bracket screws and turn socket bracket to free it. Bend side tabs down slightly. |
| IC22 | | ✓ | | Must remove socket bracket by removing the two mounting screws. |
| IC22R | | ✓ | | Loosen socket bracket screw and turn socket bracket to free it. Bend side tabs down slightly. Loosen backing plate slide nuts. Pry backing plate slide over slide stops. Bottom out backing plate. |
| IC22W | | ✓ | | Loosen socket bracket screw and turn socket bracket to free it. Bend side tabs down slightly. Loosen backing plate slide nuts. Pry backing plate slide over slide stops. Bottom out backing plate. |
| IC23 | | ✓ | | Loosen socket bracket screw and turn socket bracket to free it. Bend side tabs down slightly. |
| IC2W | | ✓ | | Loosen two socket bracket screws and turn socket bracket to free it. Bend side tabs down slightly. |
| TC2 | | ✓ | | Loosen two socket bracket screws and turn socket bracket to free it. Bend side tabs down slightly. |
| TC2R | | ✓ | | Loosen socket bracket screw and turn socket bracket to free it. Bend side tabs down slightly. Can depth must be set > 6" . |
| TC2W | | ✓ | | Loosen two socket bracket screws and turn socket bracket to free it. Bend side tabs down slightly. |

*Compatibility was determined based on whether the LR6 would fit within the identified can when appropriately modified. The presence of a can on the compatibility chart is not a guaranty or warranty of the compatibility of the LR6 in any particular installation. The absence of a can from the compatibility chart does not indicate that the LR6 is not compatible with a particular can. In any install, the installer should make sure that the LR6 is securely retained in the fixture at the time of install.

Can Compatibility* – LR6/LR6C

Lightolier

| Part Number | Compatible as is | Compatible with modifications | Not compatible | Recommended modifications |
|-------------|------------------|-------------------------------|----------------|---|
| 1102P1 | | | ✓ | |
| 1104IC | | ✓ | | Remove socket assembly from can. Bend short clips back. Leave the long clips as is. Screw LLF fixture into Edison socket and fully extend LLF retaining clips. Push assembly into can and turn 1/4 turn. To remove fixture, unscrew from Edison socket. |
| 1104ICN | | ✓ | | Remove socket assembly from can. Bend short clips back. Leave the long clips as is. Screw LLF fixture into Edison socket and fully extend LLF retaining clips. Push assembly into can and turn 1/4 turn. To remove fixture, unscrew from Edison socket. |
| 1104ICR | | ✓ | | Remove socket assembly from can. Bend short clips back. Leave the long clips as is. Screw LLF fixture into Edison socket and fully extend LLF retaining clips. Push assembly into can and turn 1/4 turn. To remove fixture, unscrew from Edison socket. |
| 1104ICX | | | ✓ | |
| 1104ICXN | | | ✓ | |

Lithonia

| Part Number | Compatible as is | Compatible with modifications | Not compatible | Recommended modifications |
|-------------|------------------|-------------------------------|----------------|---------------------------|
| L7X | ✓ | | | |
| L7XR | ✓ | | | |
| LC6 | ✓ | | | |
| LP6 | | | ✓ | |

*Compatibility was determined based on whether the LR6 would fit within the identified can when appropriately modified. The presence of a can on the compatibility chart is not a guaranty or warranty of the compatibility of the LR6 in any particular installation. The absence of a can from the compatibility chart does not indicate that the LR6 is not compatible with a particular can. In any install, the installer should make sure that the LR6 is securely retained in the fixture at the time of install.

Can Compatibility* – LR6/LR6C

Liton Lighting

| Part Number | Compatible as is | Compatible with modifications | Not compatible | Recommended modifications |
|-------------|------------------|-------------------------------|----------------|---|
| LH7IC-LLF | | ✓ | | Remove "L" bracket and backing plate. Unclip socket from backing plate. |
| LH7-LLF | ✓ | | | |
| LH7R-LLF | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |

Progress

| Part Number | Compatible as is | Compatible with modifications | Not compatible | Recommended modifications |
|-------------|------------------|-------------------------------|----------------|--|
| P187-TG | | | ✓ | |
| P821-AT | | ✓ | | Must remove Edison socket from spring clips. Spring clips must then be bent back into the can. Cutting spring clips is another option. Reflector can be left in place. |
| P87-AT | | | ✓ | |
| P87-ATQC | | ✓ | | Must remove Edison socket from spring clips. Spring clips must then be bent back into the can. Cutting spring clips is another option. |

*Compatibility was determined based on whether the LR6 would fit within the identified can when appropriately modified. The presence of a can on the compatibility chart is not a guaranty or warranty of the compatibility of the LR6 in any particular installation. The absence of a can from the compatibility chart does not indicate that the LR6 is not compatible with a particular can. In any install, the installer should make sure that the LR6 is securely retained in the fixture at the time of install.

Can Compatibility* – LR6/LR6C

Seagull

| Part Number | Compatible as is | Compatible with modifications | Not compatible | Recommended modifications |
|-------------|------------------|-------------------------------|----------------|---|
| 1107 | | ✓ | | Remove socket bracket wingnut and screw. Remove socket bracket. Unclip socket from bracket. |
| 1108 | | ✓ | | Remove socket bracket wingnut and screw. Remove socket bracket. Unclip socket from bracket. |
| 1118 | | ✓ | | Remove socket bracket wingnut and screw. Remove socket bracket. Unclip socket from bracket. |
| 1119 | | | ✓ | |
| 1128 | | ✓ | | Remove socket bracket wingnut and screw. Remove socket bracket. Unclip socket from bracket. |
| 1128QC | | ✓ | | Remove socket bracket wingnut and screw. Remove socket bracket. Unclip socket from bracket. |

Quorum International

| Part Number | Compatible as is | Compatible with modifications | Not compatible | Recommended modifications |
|-------------|------------------|-------------------------------|----------------|--|
| 903 | | ✓ | | Remove "L" bracket. Unclip Edison socket from bracket. |

*Compatibility was determined based on whether the LR6 would fit within the identified can when appropriately modified. The presence of a can on the compatibility chart is not a guaranty or warranty of the compatibility of the LR6 in any particular installation. The absence of a can from the compatibility chart does not indicate that the LR6 is not compatible with a particular can. In any install, the installer should make sure that the LR6 is securely retained in the fixture at the time of install.