



LTT-T5 OPERATION-INSTALLATION-PARTS MANUAL

Measure the length of connecting cord before installation. The distance between the fixtures should not exceed the length of the connecting cord.

CONNECTING CORD(TO BE ORDERED SEPERATELY)


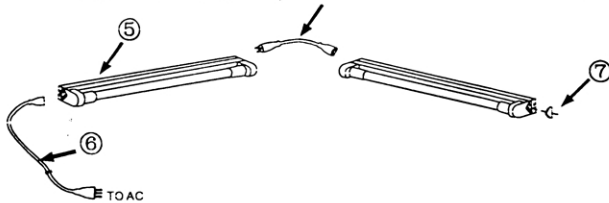


| ITEM | DESCRIPTION | QTY |
|------|-----------------|-----|
| ① | MOUNTING CLIP A | 2 |
| ② | MOUNTING CLIP B | 2 |
| ③ | MOUNTING CLIP C | 2 |
| ④ | SCREW | 4 |
| ⑤ | FIXTURE | 1 |
| ⑥ | CORDSET | 1 |
| ⑦ | END CAP | 1 |

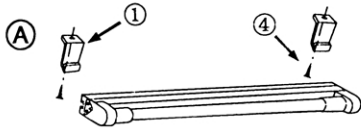

CLIP ① OR ②:

 1. Fix one of the mounting clip (A or B) with a screw at proper position.
2. Slide the Fixture on to the middlemost, and fix the other mounting clip with a screw at proper distance.
3. Slide the Fixture to the other mounting clip and keep the two mounting clips at the middle of the slots both ends.

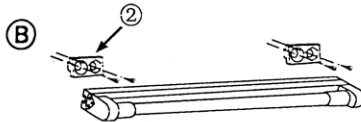

CLIP ③:

1. Fix the two mounting clips (C) at proper distance with screws.
2. Insert the Fixture into the mounting clips and keep the fixture at the center evenly.

| Model No. | Applicable | Voltage | Frequency | Rated Power | Rated Current | Maximum Connectable Quantity |
|------------|------------|---------|-----------|-------------|---------------|------------------------------|
| | | AC (V) | (Hz) | (W) | (mA) | (pcs) |
| LTT-T5 6W | T5 6W | 120 | 50/60 | 6 | 100 | 40 |
| LTT-T5 8W | T5 8W | 120 | 50/60 | 8 | 140 | 30 |
| LTT-T5 13W | T5 13W | 120 | 50/60 | 13 | 280 | 15 |
| LTT-T5 14W | T5 14W | 120 | 50/60 | 14 | 280 | 15 |
| LTT-T5 21W | T5 21W | 120 | 50/60 | 21 | 340 | 12 |
| LTT-T5 24W | T5 24W | 120 | 50/60 | 24 | 390 | 10 |
| LTT-T5 28W | T5 28W | 120 | 50/60 | 28 | 450 | 9 |
| LTT-T5 35W | T5 35W | 120 | 50/60 | 35 | 540 | 7 |
| LTT-T5 39W | T5 39W | 120 | 50/60 | 39 | 600 | 7 |
| LTT-T5 54W | T5 54W | 120 | 50/60 | 54 | 820 | 5 |