



LTT-T5 OPERATION-INSTALLATION-PARTS MANUAL

Measure the length of connecting cord before installation. The distance between the fixtures should not exceed the length of the connecting cord.

CONNECTING CORD(TO BE ORDERED SEPERATELY)


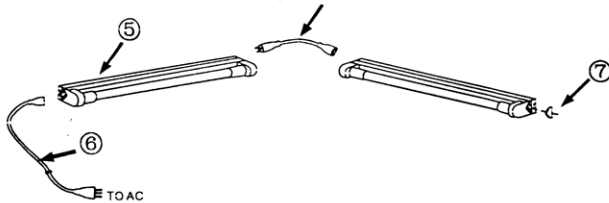


ITEM	DESCRIPTION	QTY
①	MOUNTING CLIP A	2
②	MOUNTING CLIP B	2
③	MOUNTING CLIP C	2
④	SCREW	4
⑤	FIXTURE	1
⑥	CORDSET	1
⑦	END CAP	1

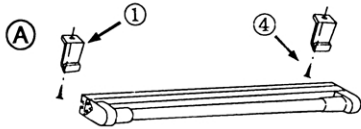

CLIP ① OR ②:

1. Fix one of the mounting clip (A or B) with a screw at proper position.
2. Slide the Fixture on to the middlemost, and fix the other mounting clip with a screw at proper distance.
3. Slide the Fixture to the other mounting clip and keep the two mounting clips at the middle of the slots both ends.

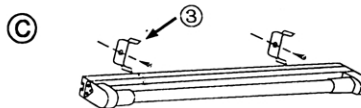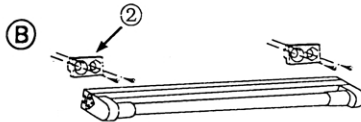

CLIP ③:

1. Fix the two mounting clips (C) at proper distance with screws.
2. Insert the Fixture into the mounting clips and keep the fixture at the center evenly.

Model No.	Applicable	Voltage	Frequency	Rated Power	Rated Current	Maximum Connectable Quantity
		AC (V)	(Hz)	(W)	(mA)	(pcs)
LTT-T5 6W	T5 6W	120	50/60	6	100	40
LTT-T5 8W	T5 8W	120	50/60	8	140	30
LTT-T5 13W	T5 13W	120	50/60	13	280	15
LTT-T5 14W	T5 14W	120	50/60	14	280	15
LTT-T5 21W	T5 21W	120	50/60	21	340	12
LTT-T5 24W	T5 24W	120	50/60	24	390	10
LTT-T5 28W	T5 28W	120	50/60	28	450	9
LTT-T5 35W	T5 35W	120	50/60	35	540	7
LTT-T5 39W	T5 39W	120	50/60	39	600	7
LTT-T5 54W	T5 54W	120	50/60	54	820	5