 


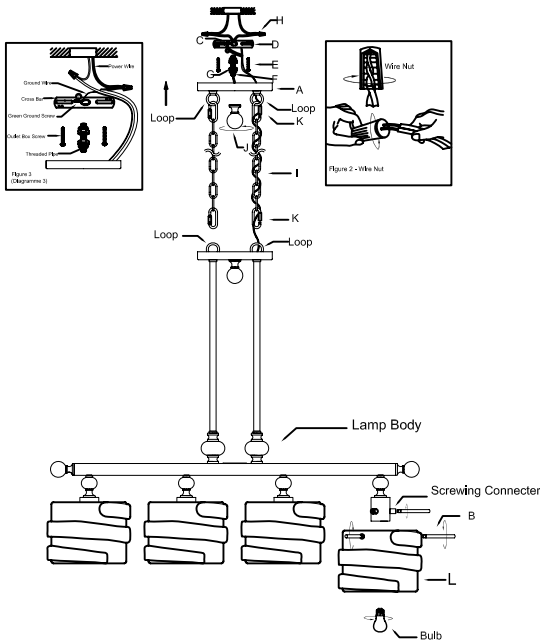

Illustration

STYLE NO.:21243



PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com

 


Assembly Instruction

STYLE NO.: 21243

LENGTHEN THE CHAIN INSTRUCTIONS

1. Take out the fixture wire from loop of ceiling pan carefully.
2. Open top end of the fixture chain.
3. Hook one end of extra chain into open link of fixture chain and close the link.
4. Open the other end of extra chain, hook the open link of extra chain into loop of ceiling pan and close the link.
5. Weave the fixture wires through the chain links up to the ceiling pan carefully.
6. Install complete.

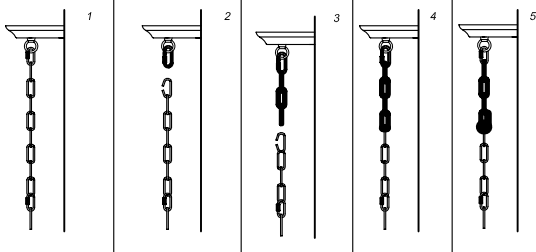

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com



STYLE NO.:21243

Parts and Hardware List

A.	Ceiling Assembly	1PC
B.	Screwing metal tube	12PCS
C.	Green Ground Screw	1P
D.	Cross Bar	1PC
E.	Outlet Box Screws	2pcs
F.	Pre-Threaded Pipe	1PC
G.	Hex Nut	3PCS
H.	Wire Nut	2PCS
I.	Chain	2PCS
J.	Ball Assembly	1PC
K.	Quick Links	4PCS
L.	Glass Shade	4PCS
M.	3" Length Extra Chain	2PCS

Please make sure that you have all the parts indicated before you begin assembly of this item

Please read **Wiring Instructions** before you begin assembling and installing your Chandelier

Assembly Instructions

1. Carefully remove the parts and hardware from the carton.
2. Install the ground wire in the Cross Bar (D) with the Green Ground Screw (C) supplied.
3. Place the white, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wire-See Figure 2)
4. After the wires are connected, tuck them carefully inside the outlet box.
5. Fasten the Cross Bar (D) to the outlet box using the Outlet Box Screws (E)
6. Insert the shorter end of the Pre-Threaded Pipe (F) into the pre-drilled hole in the Cross Bar (D) and secure with the Hex Nut (G). (See Figure 3)
7. Attach the Ceiling Assembly (A) to the exposed end of the Pre-Threaded Pipe (F) and secure with Ball Assembly (J). See Illustration.
8. Attach two Quick Links (K) on each end of the two Chains (I) to the two Loops on the top of the Lamp Body.
9. Attach the other two Quick Links (K) on the each other end of the two Chain (I) to the two Loops of Ceiling Assembly (A).
10. Take three Screwing Metal Tubes (B) through the holes of the Glass Shade (L) and attach to the socket by screwing into the Screwing Connector. See Illustration.
11. Install 60 Watt, Type A bulbs (sold separately) into the sockets of the fixture.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com