

UTTERMOST

STYLE NO.: 22491 PARTS LIST& Hardware List:

1	Universal Bar	1pc	4	Wire Connector	3pcs
2	Outlet Box Screw(1-1/8")	2pcs	5	Glass Shade	2pcs
3	Green Ground Screw	1pcs	6	Ball Finial with Nipple	2pcs

*Please make sure you have all the parts indicated above before you begin assembling this item. <u>Please read wiring instructions before you begin assembling and installing your Ceiling Lamp</u> WARNING:<u>BEFORE INSTALLING</u>,Make sure electricity supply is shut off to avoid a possible electric shock.

ASSEMBLY INSTRUCTIONS

1.Take the parts carefully out of the carton,Place them on a flat surface, and make sure the parts will not be damaged.

2.Attach the Universal Bar to the Outlet Box by using two Outlet Box Screws. (See Figure1)

3.Install the Ground Wire in the Universal Bar with the supplied Green Ground Screw.

4.Place the null wire ,White wire evenly against the null wire from the Outlet Box and place the live wire,Black wire evenly against the live wire from the Outlet Box,(Connecting the Wire---See Figure 2)

5.After the wires are connected,tuck them carefully inside the Outlet Box.Attach the Wall Sconce by using the Ball finial with nipple. (See Figure 1)

6.Install 2*60W,Type B bulbs,(Not Included) into the socket of the fixture.


7. Pressing the Clip and Place the Glass Shade.




Wall

Sconce

GLASS Shade

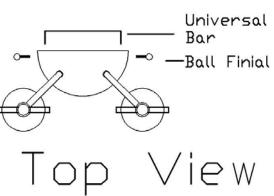

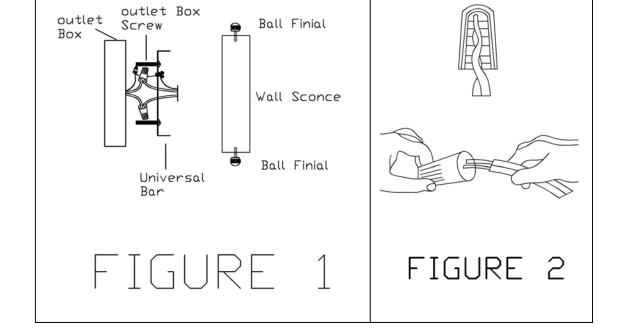

UTTERMOST



DECORATIVE ACCESSORIES AND ACCENT FURNITURE