




UTTERMOST

# ASSEMBLY INSTRUCTIONS

STYLE#: **28580**

## Careful unpack all lamp parts from the carton.

1. Carefully lay the assembled pieces on a soft surface
2. Take part A, slowly store the excess wire into the conjunction box.
3. After above is done, then put part A onto part B. and tighten the Hex nut, using the wrench attached.
4. Then put part B onto Part C, and tighten the Hex nut. Used the wrench.
5. Place the shade onto the harp, and then put finial disk onto the shade with tightening the finial.
6. Use ON/OFF 150W TYPE A bulb (not included).

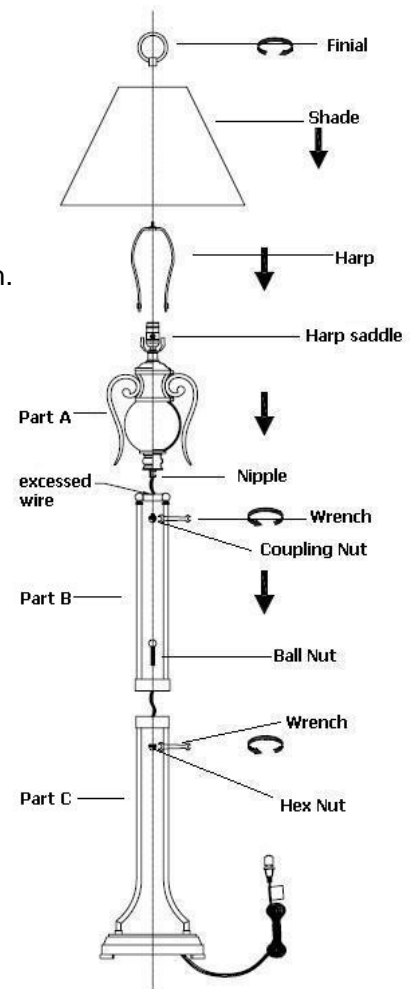

28580

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug ( one blade is wider than the other ) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the

outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted.

Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

[www.uttermost.com](http://www.uttermost.com)