



UTTERMOST

Thank you for purchasing an Uttermost lamp. We hope you are as proud to display this lamp as we were to make it.

- Each lamp is hand finished one at a time, therefore no two are exactly alike.

Again, thank you for purchasing an Uttermost lamp.

Assembly Instructions


1. Place harp onto saddle.
2. Place shade onto harp. Place Uttermost finial disk on top of shade. Fasten finial onto harp to fix shade.

Important Safety Instructions

This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com

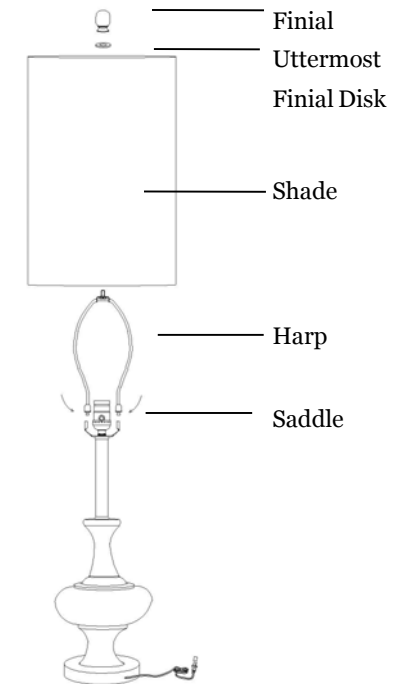

STYLE:29920-1