






UTTERMOST

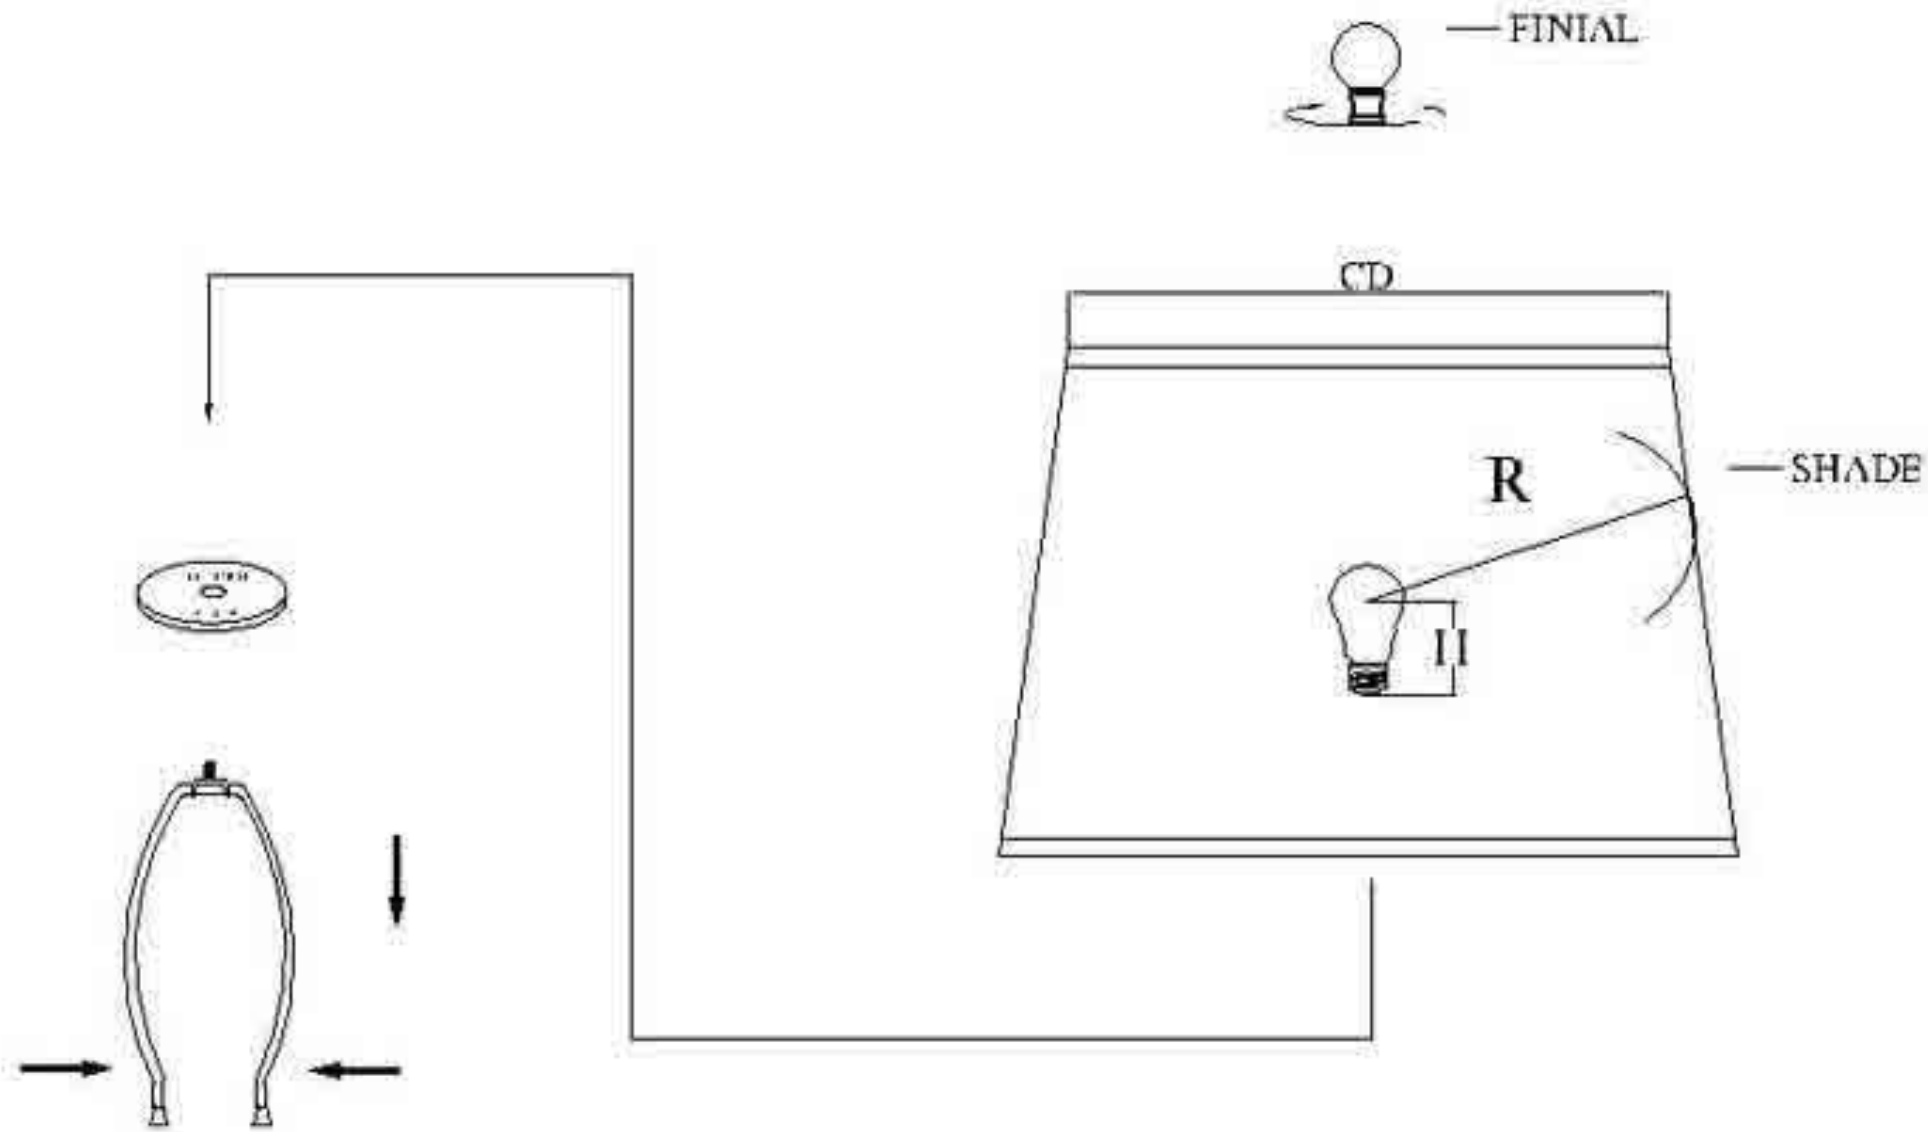

## Assembly Instruction

STYLE NO.:26993

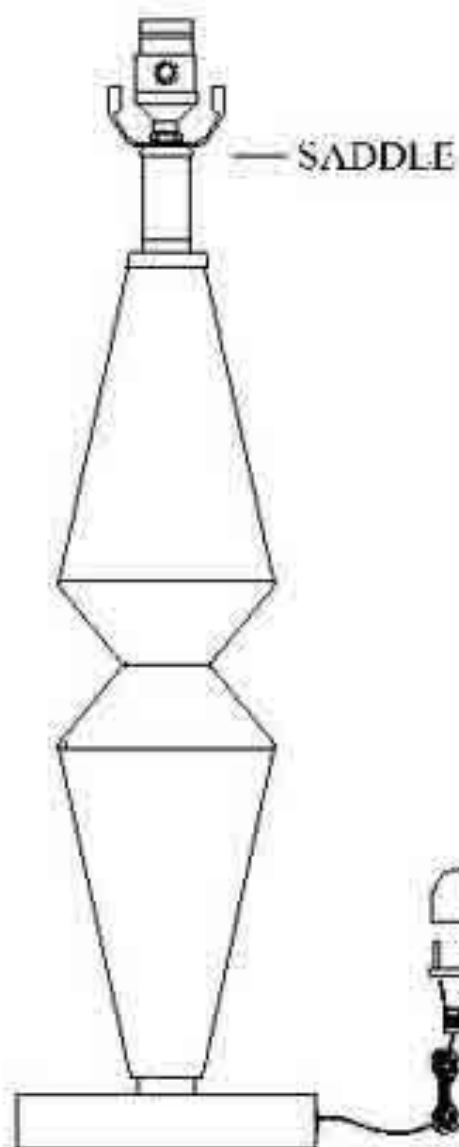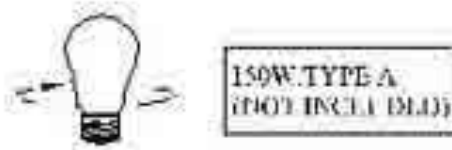

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.

2. Attach the harp onto the saddle as drawing.

3. Place the finial disc and shade onto the top of the harp, then tighten the finial clockwise until secure.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUAL TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 3-1/4".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.