


FLOOD LIGHT OUTDOOR LIGHT

LED-SL42

 
INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS
READ ALL INSTRUCTIONS



**IMPORTANT SAFETY
INSTRUCTIONS**

SAVE THESE INSTRUCTIONS

TOOLS AND MATERIALS REQUIRED:



Pliers



Phillips
Screwdriver



 
Wire Cutters

Wiring supplies
as required by
electrical code


SAFETY PRECAUTIONS:

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. THIS FIXTURE CAN ONLY BE MOUNTED ON A WEATHERPROOF OUTLET BOX AND IS PROVIDED WITH A GASKET.
4. ENSURE THAT THE OUTLET BOX IS MARKED "FOR USE IN WET LOCATIONS."
5. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX.


INSTALLATION:

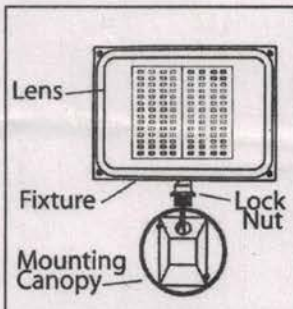

 
1. Assemble fixture. Secure the lens onto fixture using 4 screws provided. Twist the fixture onto the mounting bracket and secure with lock nut provided.

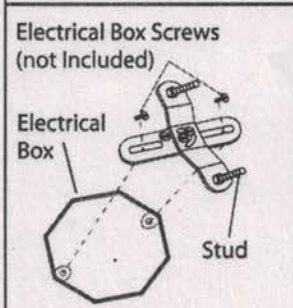

 
2. Mount the mounting bracket to outlet box using outlet box screws (not included). Make sure the studs on the mounting bracket are facing out from the outlet box.

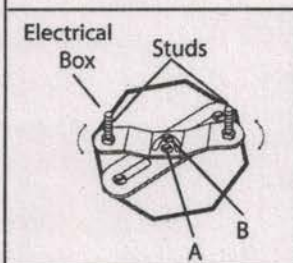

 3. Position mounting bracket so that the fixture will sit level once it is mounted to the wall. Tighten screws A and B to hold in place.

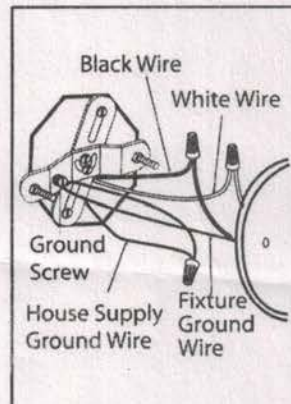

 4. Firmly attach the fixture ground wire (bare copper) to the mounting bracket with the ground screw (by wrapping around the ground screw) and then connect it to the house supply ground wire with a wire nut. Connect black wire from fixture to black wire in outlet box and connect the white wire from fixture to white wire in outlet box.

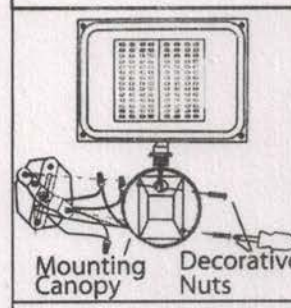


5. Attach mounting canopy to electrical box with decorative nuts.

6. Apply caulking around the fixture and its mounting surface to ensure a water tight seal.

NOTE:

 Use the O-Ring with the hole in the center to prevent flashing. Place the O-Ring over the red sensor lens located on the back of the LED Wall Pack. Use the O-Ring without a hole to cover the sensor for manual use with a switch.

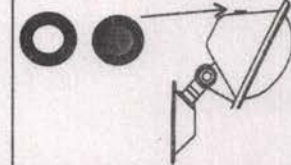

OPERATION:

Dusk to dawn feature is active when light switch is on. If light switch is off the light will not illuminate.

Fixture is approved to -25°C