



# LED OUTDOOR LIGHT

LED-SLR12WT  
LED-SLR12BZ



## TOOLS AND MATERIALS REQUIRED:



 
Pliers



Phillips  
Screwdriver



Wire Cutters




## SAFETY PRECAUTIONS:


1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL JUNCTION BOX

**NOTE: PRODUCT MAY NOT LOOK EXACTLY AS SHOWN IN FIGURES.**


## INSTALLATION:

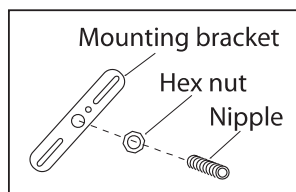


- 1 Attach nipple to mounting bracket. Adjust so it will clear hole in back of fixture and then lock nipple in place with hex nut.

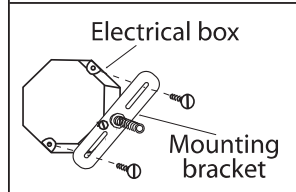


- 2 Attach mounting bracket to electrical box with electrical box screws (not included).

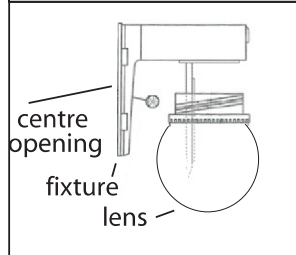


- 3 Twist to remove the lens from fixture.

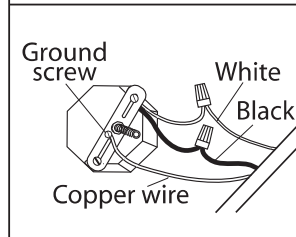


- 4 Connect electrical wires of fixture to wires in electrical box by connecting white to white wire, then black wire to black wire. Connect bare copper wire to ground screw on mounting bracket using green ground screw.

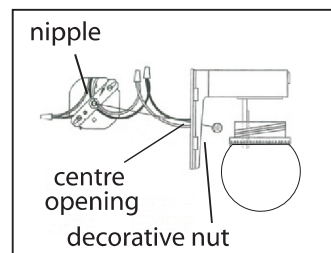

- 5 Insert the nipple through the center opening of the fixture. Secure with decorative nut provided. Place lens onto fixture.

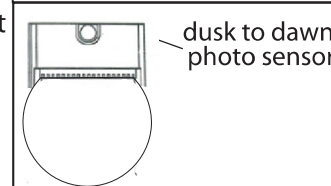

- 6 Apply caulking (not included in this unit) around the fixture and its mounting surface to ensure a water tight seal.

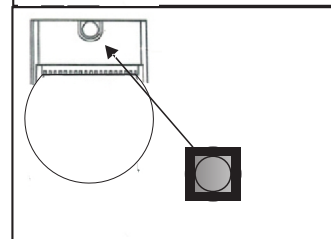

- 7 **NOTE:** Use the O-Ring without a hole to cover the sensor for manual use with a switch.

## OPERATION:

Dusk to dawn feature is active when light switch is on. If light switch is off the light will not illuminate.

Fixture is approved to -25°C

**Note:** The LED light may flicker during twilight for a period of 5 to 15 minutes.