



LED OUTDOOR LIGHT

LED-SL18WT
LED-SL18BZ

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS
READ ALL INSTRUCTIONS



IMPORTANT SAFETY INSTRUCTIONS
SAVE THESE INSTRUCTIONS

TOOLS AND MATERIALS REQUIRED:



Pliers



Phillips Screwdriver



Wire Cutters


Wiring supplies as required by electrical code

SAFETY PRECAUTIONS:


1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL JUNCTION BOX

NOTE: PRODUCT MAY NOT LOOK EXACTLY AS SHOWN IN FIGURES.


INSTALLATION:

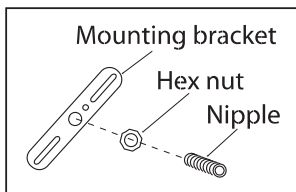


1. Attach nipple to mounting bracket. Adjust so it will clear hole in back of fixture and then lock nipple in place with hex nut.

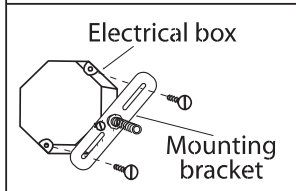


2. Attach mounting bracket to electrical box with electrical box screws (not included).

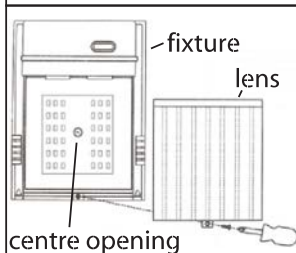


3. Use screwdriver to remove the lens from the fixture.

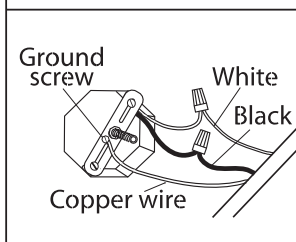

4. Connect electrical wires of fixture to wires in electrical box by connecting white to white wire, then black wire to black wire. Connect bare copper wire to ground screw on mounting bracket using green ground screw.

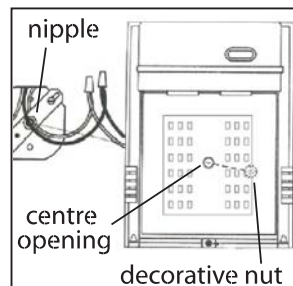

5. Insert the nipple through the center opening of the fixture. Secure with decorative nut provided.

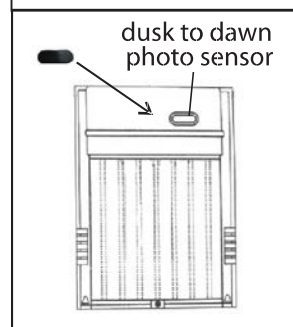

6. Place lens onto fixture and secure with screw provided. Apply caulking (not included in this unit) around the fixture and its mounting surface to ensure a water tight seal.

NOTE:

Use the black cover to cover the sensor for manual use with a switch.

OPERATION:

Dusk to dawn feature is active when light switch is on. If light switch is off the light will not illuminate.

Fixture is approved to -25°C

Note: The LED light may flicker during twilight for a period of 5 to 15 minutes.