Instruction/Installation Manual

Contents:

1 PCS

1 PCS

Height:

Diameter:

SKU	Description
LED-8085M30	60W 3000K
LED-8085M42	60W 4200K
LED-8085M57	60W 5700K

<u>Notes:</u>

LED-8085M

- 1. Before beginning installation of LED for HID lamp, please read the complete instructions list below. Keep this document for future reference
- 2. To avoid possible electric shock, power supply must be turned off at fuse box or circuit breaker before installing or servicing.
- 3. Dropping, over torqueing screw base or impacting lamp during installation may cause damage and may void warranty.
- 4. Risk of Fire: High voltage wiring connecting the fixture must have a temperature rated minimum of 194°F.
- Before installation of any LED for HID model into existing HID fixture, check your local electrical code. This code sets wiring standards for your area and should carefully studied before starting installation
- 6. Protect the lamp from dust and dirt, clean with soft damp cloth only, do not use chemical cleaners.
- 7. Ensure that outdoor fixture is sealed per manufacturers recommendations to reduce dust and insects from gaining entry.
- When installing 8000 series with external drivers within HID fixtures, ballast must be removed and replaced with supplied LED driver. LED driver must be connected properly per instructions below or non-repairable/warranteed damage to driver can occur.
- 9. 8000 series retrofits are UL damp rated, sealing the fixtures after installation will deliver best results.
- 10. The recessed luminaire can not use with through-branch wiring.

IMPORTANT SAFETY INSTRUCTIONS FOR LED RETROFIT CONVERSION: FOR USE ONLY WITH HID LUMINAIRES IN ACCORDANCE WITH THE INSTRUCTIONS PROVIDED WITH THIS RETROFIT KIT.

WARNING - RISK OF FIRE OR ELECTRICAL SHOCK. LED retrofit kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

WARNING - RISK OF FIRE OR ELECTRICAL SHOCK. Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.
WARNING - Do not make or alter any open holes in an enclosure of wiring or electrical

components during kit installation.

- **WARNING -** To prevent wiring damage or abrasion, do not expose wiring to sharp edges of housing or other sharp surface.
- **WARNING -** Suitable for wet environments. Not for use with HID ballast, Connect LED driver to 120-277VAC direct line voltage only. Follow wiring instructions below. Suitable for use with 0-10V, PWM, or resistive dimming methods. Suitable for enclosed fixtures.

THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS.



1 PCS 1 PCS	120-277V 50/60Hz E39 Mogul				Installation Manual				
REQUIREMENTS									
Input Voltage:	out Voltage: 120-277V								
Frequency:	50/60Hz								
Base:	E39 Mogul								
Approved Housings:	Recessed								
	Fully Enclosed								
nousings.	Open (indoor)								
Min. Hous	sing Size: (Inches)								





LED Retrofit lamp

Re-lamping label

10.7"

4.5"

LED-8085M



SKU LED-8085M30 LED-8085M42 LED-8085M57
 Description

 60W
 3000K

 60W
 4200K

 60W
 5700K

Installation:

- Step 1. Disconnect Electrical Power to fixture.
- Step 2. Remove existing ballast and install included LED driver in its place.Driver should be positioned within 50 meters of lamp in order to drive lamp to designed lumen output.
- Step 3. Connect the 2 common wires to the brown and blue wires on the driver. N - neutral wire from power source connects to ACN Blue wired on driver.
 - L Load wire from power source connects to ACL Brown Wire on driver).
- Step 4. Connect V+ (Red) wire from driver and V- (Black) wire to socket as shown below.
- Step 5. Where there still be a silver label?
- Step 6. If Dimming is to be utilized see diagram below.




LED-8085M

Instruction/Installation Manual



SKU LED-8085M30 LED-8085M42 LED-8085M57 Description60W3000K60W4200K60W5700K

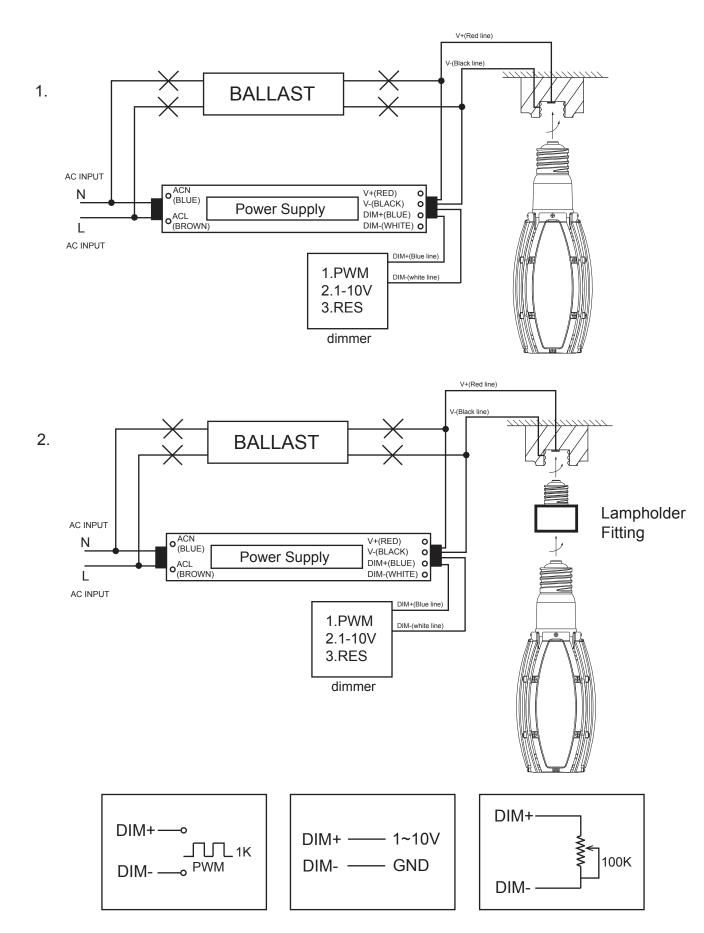

instruction/Installation Manual



SKU	Description					
LED-8085M30	60W 3000K					
LED-8085M42	60W 4200K					
LED-8085M57	60W 5700K					



※ Built-in 3 in 1 dimming function, output constant current level can be adjusted through output cable by 1 ~ 10Vdc, 10V PWM signal or resistance between DIM+ and DIM-.

※ Please DO NOT connect "DIM-" to "-V".

% Reference resistance value for output current adjustment (Typical)


Resistance	Single driver	10KΩ	20KΩ	30KΩ	40KΩ	50KΩ	60KΩ	70KΩ	80KΩ	90KΩ	100KΩ	OPEN	
	value	Multiple drivers (N=driver quantity for synchronized dimming operation)	10KΩ/N	20KΩ/N	30KΩ/N	40KΩ/N	50KΩ/N	60KΩ/N	70KΩ/N	80KΩ/N	90KΩ/N	100KΩ/N	
	Percentage	of rated current	10%	20%	30%	40%	50%	60%	70%	80%	90%	100%	95%~108%

※ 1 ~ 10V dimming function for output current adjustment (Typical)

•		•		•							
Dimming value	1V	2V	3V	4V	5V	6V	7V	8V	9V	10V	OPEN
Output current	10%	20%	30%	40%	50%	60%	70%	80%	90%	100%	95%~108%
涨 10V PWM signal	for output c	urrent ad	justment	(Typical)): Freque	ncy range	e :100Hz	~ 3KHz			
Duty value	10%	20%	30%	40%	50%	60%	70%	80%	90%	100%	OPEN
Output current	10%	20%	30%	40%	50%	60%	70%	80%	90%	100%	95%~108%

%Using the built-in dimming function on LPF-60D can't turn the lighting fixture totally dark. Please refer to the connection method below to achieve 0% brightness of the lighting fixture connecting to the LED power supply unit.

Dimming connection diagram for turning the lighting fixture ON/OFF :

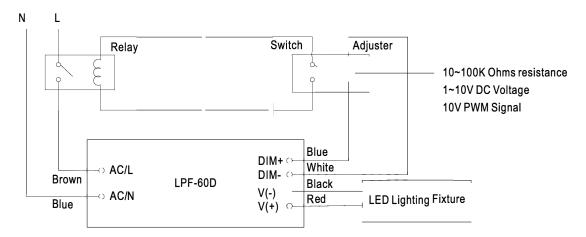

Using a switch and relay can turn ON/OFF the lighting fixture.

1.Output constant current level can be adjusted through output cable by connecting a resistor or 1~10Vdc or 10V PWM signal between DIM+ and DIM-. 2.The LED lighting fixture can be turned ON/OFF by the switch.

