 


INSTALLATION GUIDE MODEL #:

ET8-2140T-12 / ET8-2150T-12 / ET8-2140T-15 / ET8-2150T-15

Linear Series | T8 Class 4 ft. Bypass Ballast LED Tube

This LED lamp is intended to replace fluorescent t8 tube lamps with an ANSI designation 32W/48T8/RS, 32W/48T8



PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION

WARNINGS CAUTIONS · Risk of fire • Do not use with dimmers. · LED tube bypass ballast installation requires knowledge of • Do not look directly at the operating Bypass Ballast LED T8 Lamp. • Do not touch this product with wet hands. luminaire electrical systems. (If you are not a qualified electrician, please do not attempt installation.) • Do not disassemble, repair or alter lamp. • Risk of electric shock – turn-off power at source before installation · Designed for indoor applications only. • Do not make or alter any open holes in an enclosure of wiring or · Suitable for damp locations. electrical components during installation. • The luminaires shall be grounded. • If lamp or luminaire exhibits abnormal operation (buzzing, flickering, • Avoid contact with lamp pins during installation. • This Device is not intended for use with emergency exits or minimal light, etc.), turn off power, remove lamp and contact us. emergency lights. WHEN BYPASSING A BALLAST ALWAYS HAVE A QUALIFIED ELECTRICIAN DO YOUR ELECTRICAL WORK. BYPASS BALLAST INSTALLATION INSTRUCTIONS Single Ended Bypassing of Magnetic / Electronic Ballast 1. Turn-off power before installation. 2. Remove the existing ballast and existing starter (If present) 3. Replace fluorescent tube with LED Tube 4. Remove any pre-existing labels and replace them with the labels provided with this product. MAGNETIC BALLAST **ELECTRONIC BALLAST**

