



 
IMPORTANT: Read carefully before installing the fixture. SAVE THESE INSTRUCTIONS.


Product Specifications

| Model | Voltage | Power | CCT | Opening Size (mm) | Installation Method |
|-------------|------------------|-------|-------|----------------------|------------------------|
| MLVT22D3535 | 120-277V~50/60Hz | 35W | 3500K | 580x580 | Lay-In |
| MLVT22D3541 | 120-277V~50/60Hz | 35W | 4100K | 580x580 | Lay-In |
| MLVT22D3550 | 120-277V~50/60Hz | 35W | 5000K | 580x580 | Lay-In |
| MLVT24D4535 | 120-277V~50/60Hz | 45W | 3500K | 1180x580 | Lay-In |
| MLVT24D4541 | 120-277V~50/60Hz | 45W | 4100K | 1180x580 | Lay-In |
| MLVT24D4550 | 120-277V~50/60Hz | 45W | 5000K | 1180x580 | Lay-In |


Installation and Electrical Connection






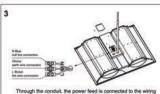


terminal; make sure the connection is solid and reliable.

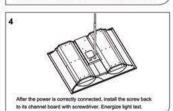

Installation and Electrical Connection

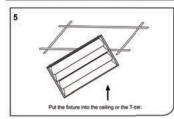



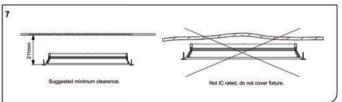

Warnings:

- 1. Don't use in high humidity condition.
- 2. Keep away from flammable and explosive environment.
- 3. Don't cover the fixture with insulation liner or similar material.
- Don't install where fixture is loose or only partially supported.
- 5. Don't impact or exert pressure on the fixture surface face or rear, as damage may occur.
- 6. Warranty period is 5 year for this products.
- If your fixture does not light, dim, or blinks rapidly; or any other fault, please contact with MaxLite service or local contact, do not try to repair by yourselves.