



ONE LAMP RAPID START BALLAST

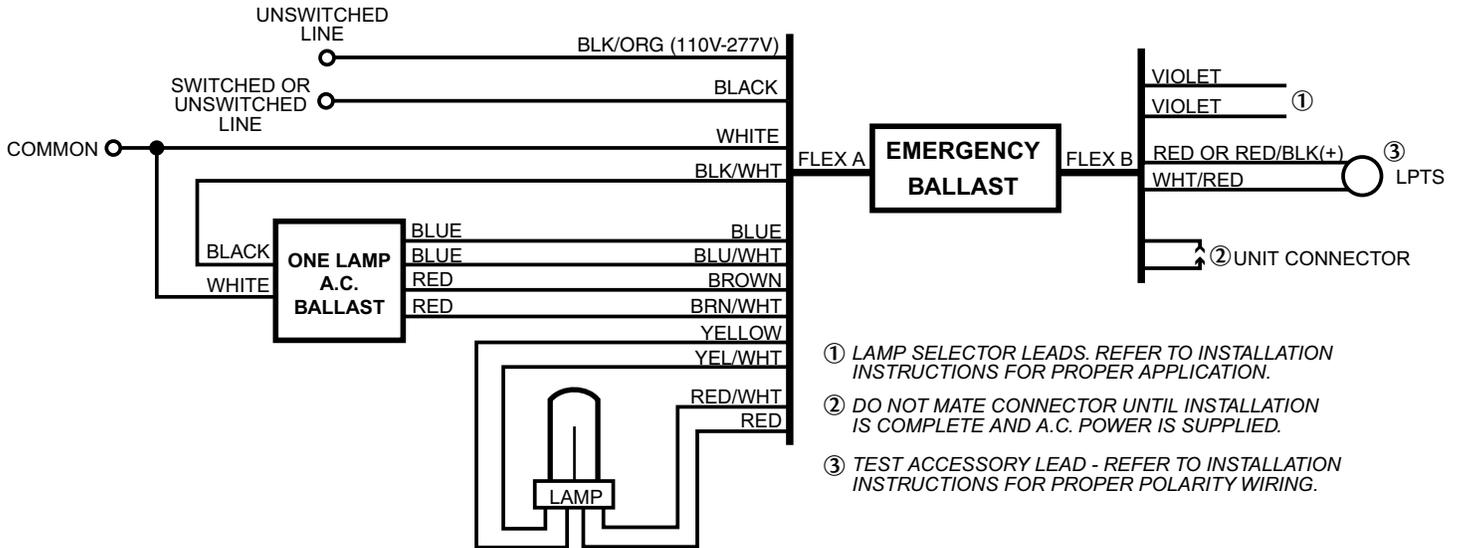

1LRSB_ISD420A_AC

NOTES

ONE LAMP RAPID START BALLAST

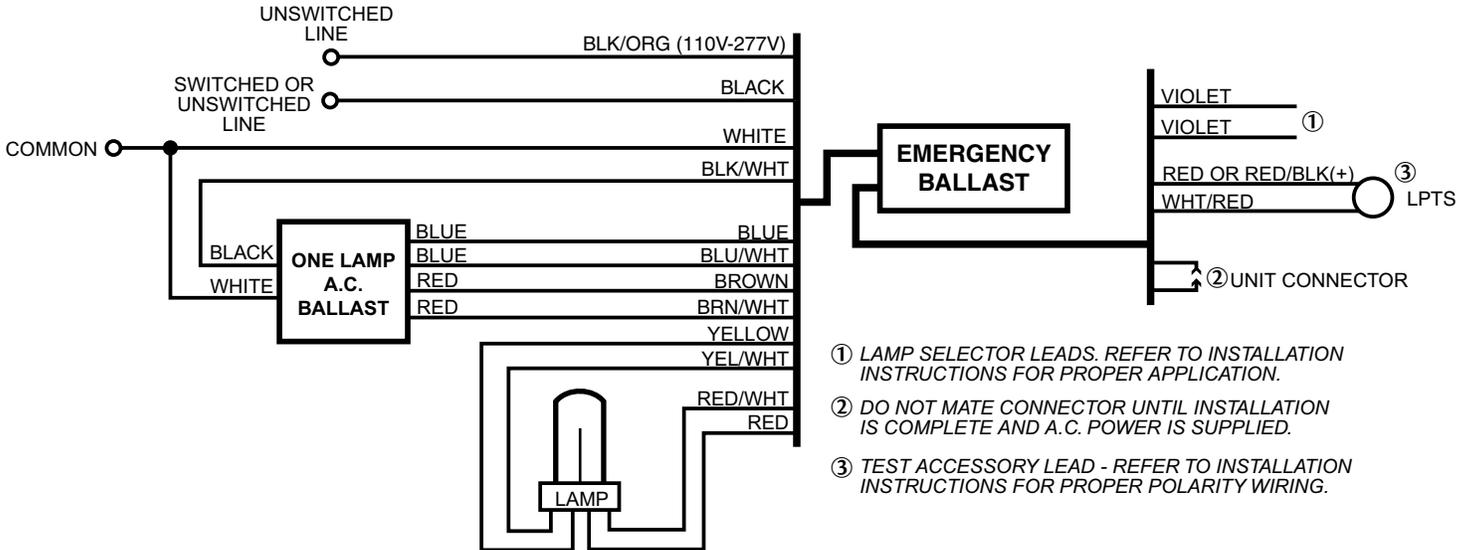


- ① LAMP SELECTOR LEADS. REFER TO INSTALLATION INSTRUCTIONS FOR PROPER APPLICATION.
- ② DO NOT MATE CONNECTOR UNTIL INSTALLATION IS COMPLETE AND A.C. POWER IS SUPPLIED.
- ③ TEST ACCESSORY LEAD - REFER TO INSTALLATION INSTRUCTIONS FOR PROPER POLARITY WIRING.

1LRSB_ISD420B_AC

NOTES


TWO LAMP RAPID START BALLAST

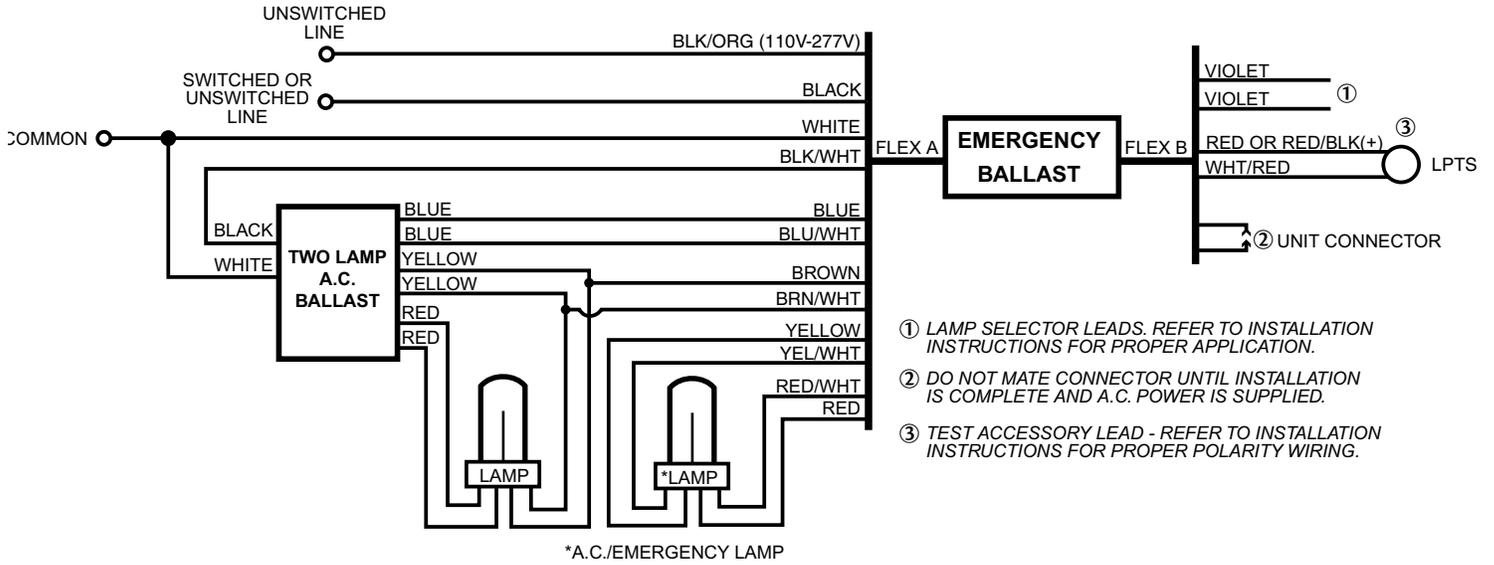

2LRSB_ISD420A_AC

NOTES

TWO LAMP RAPID START BALLAST

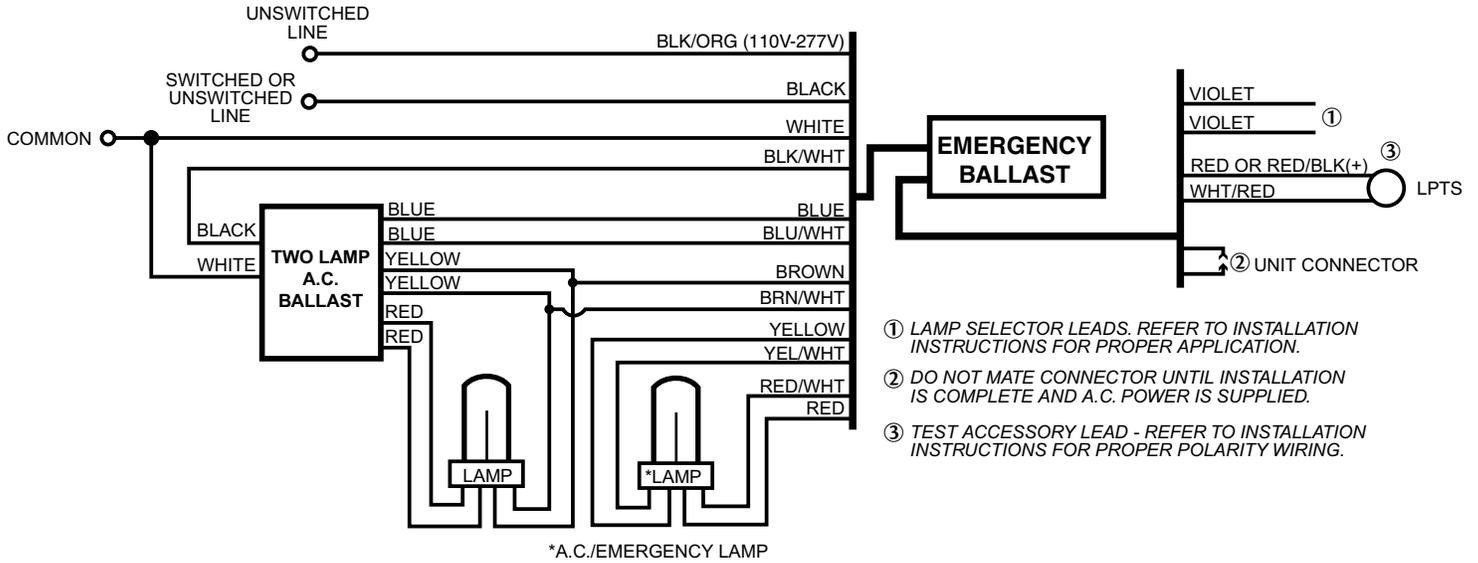

2LRSB_ISD420B_AC

NOTES