


This LED tube is intended to replace fluorescent tube lamps with an ANSI designation 32W/48T8/RS, 32W/48T8

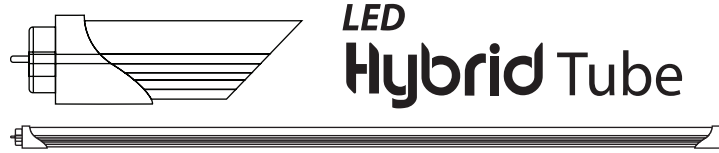

PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION

WARNINGS	CAUTIONS
<ul style="list-style-type: none"> Risk of fire / electrical shock 	<ul style="list-style-type: none"> Do not use with dimmers.
<ul style="list-style-type: none"> LED Hybrid Tube bypass ballast installation requires knowledge of luminaire electrical systems. (If you are not a qualified electrician, please do not attempt bypass ballast installation.) 	<ul style="list-style-type: none"> Do not look directly at the operating LED Hybrid Tube.
<ul style="list-style-type: none"> Risk of electric shock – disconnect power at source before installation 	<ul style="list-style-type: none"> Do not touch this product with wet hands.
<ul style="list-style-type: none"> Do not make or alter any open holes in an enclosure of wiring or electrical components during installation. 	<ul style="list-style-type: none"> Do not disassemble, repair or alter lamp.
<ul style="list-style-type: none"> If lamp or luminaire exhibits abnormal operation (buzzing, flickering, minimal light, etc.), turn off power, remove lamp and contact us. For more information please visit www.eurilighting.com or call our toll-free number 1-888-743-5766. 	<ul style="list-style-type: none"> Designed for indoor applications only. Suitable for damp locations. The luminaires shall be grounded. Be careful not to touch the lamp pins to the metal housing when installing. This Device is not intended for use with emergency exits or emergency lights.

WHEN BYPASSING A BALLAST ALWAYS HAVE A QUALIFIED ELECTRICIAN DO YOUR ELECTRICAL WORK.

DIRECT REPLACEMENT INSTALLATION INSTRUCTIONS

1. Turn-off power before installation | 2. Replace traditional fluorescent tube with LED Hybrid tube | 3. Turn-on power and enjoy your new LED Hybrid Tube.

BYPASS BALLAST INSTALLATION INSTRUCTIONS

Single Ended Bypassing of Magnetic / Electronic Ballast

1. Turn-off power before installation.
2. Remove the existing ballast and existing starter (if present)
3. Replace fluorescent tube with **LED Hybrid Tube**

