






IMPORTANT: READ BEFORE REMOVING FIXTURE FROM CARTON. RETIAN THE MANUAL FOR FUTURE REFERENCE.


SAFETY: This fixture must wired in accordance with the national electrical code and applicable local codes and ordinance. proper grounding is required to insure personal safety. Carefully observe grounding procedure under installation section. All work should be done by a qualified electrician.


- > Risk of electric shock-Disconnect power at fuse or circuit breaker before installing or servicing.
- Risk of burn-Disconnect power and allow fixture to cool before servicing.
 Risk of personal injury-Fixture may become damaged and/or unstable if not installed properly.
- > Tighten all fixture components to their recommended torque values.


WARNING: Make certain power is OFF before starting installation or attempting any maintenance. Contact manufacturer with any questions or concerns regarding installation of this luminaire.

Adjustable Slip Fitter-Suitable for max. tenon size 1 3/8"

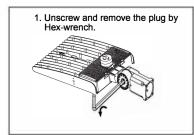

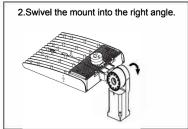


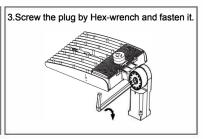


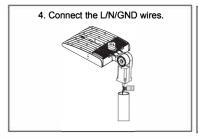





Round Pole Mount-Suitable for 4" to 6" pole and Straight Pole Mount-Suitable for 3" x3" or larger pole

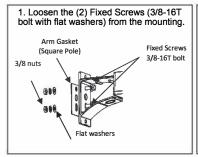

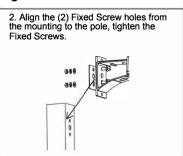

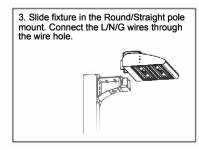

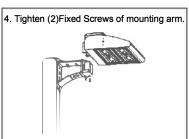









Trunion Installation

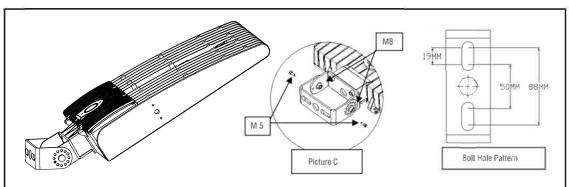


- Step 1: Mount the fixture to suitable flat surface with adequate hardware for that surface;
- Step 2: Hold top of fixture, loosen (2) M8 Trunnion Bolts and (2) M5 Positioning Screws;
- Step 3: Adjust the U Trunnion to suitable position;
- Step 4: Swivel the fixture until Positioning Screws are in one of the Positioning Holes;
- Step 5: Tighten the (2) M8 Trunnion Bolts and (2) M5 Positioning Screws (see picture C).

York Bracket Installation

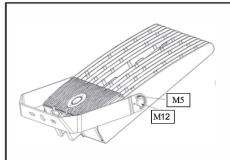

- Step 1: Loosen the (2)M12 and (4)M5 screws;
- Step 2: Adjust the fixture to required angle, and tighten (2) M5 positioning screws on one side;
- Step 3: Tighten the (2) M12 and the (2) M5 screws on the other side;
- Step 4: Connect the L/N/GND wides.

(provided shorting cap)

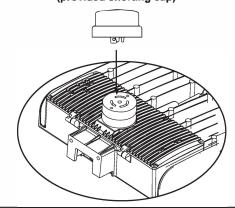

Remarks:

PLT AREA LIGHT UNITS come with receptacles installed on the the fixture, end-users can either twist in a 3pin photocell, or the provided shorting cap.