

Installation



- 1. Use the provided placement template to mark the hole positions. Drill the 2 holes with a 06mm drill bit.
- 2 Place wall anchors into the 2 drilled holes.
- 3. Insert the bottom screw into the wall anchors ensuring the screw protrudes out from the wall in order to attach the LED Solar Light.
- 4. Hang the LED Solar light on the screws and insert the top screw to secure the light in place.
- 5. Press the button until the desired mode is selected.

Notice:

This is an automatic light with an auto-adjusting operation. You only need to press the button once and the lamp will remain on. Allow 6 hours for charging for 4-5 nights of use.

Standby Time: 140 hrs

Please install this light in an area with plenty of direct sunlight. The lighting duration depends on amount of direct sunlight and weather conditions.

This light is equipped with an lithium battery, do not try and replace it yourself. Dispose of it properly according to your local law.