

LED MINI FLOOD

INSTALL INSTRUCTIONS

WARNING


PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Please read the instructions before you install and use the luminaire.

WARNING, CAUTIONS AND OPERATING INSTRUCTIONS

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- Suitable for operation in ambient temperatures ranging from -40°C to 45°C.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- In 75°C supply conductors.
- Suitable for mounting within 4 ft. (1.2 m) of the ground

INSTALLATION


GENERAL WIRING - CAUTION: Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.

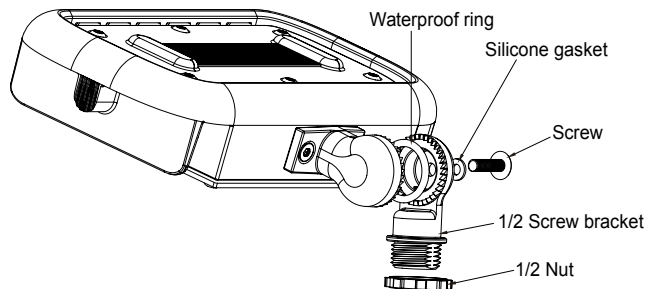

MOUNTING - 1/2" Knuckle Mount optional ground stake mount pole top fitter mount

1. Mount this fixture to any metal 1/2" NPS threaded mounting (not included). Please mount the fixture prior to connecting the wires.
2. Route electrical leads through the mounting hole.
3. Seal knuckle threads with sealing compound (not included). Secure the mounting fitter to fixture with lock nut.
4. Make wire connection (see wiring diagram to the right).
5. Adjust aiming angle of the fixture by loosening the pivot screw. Use visual angle indicators to set desired angle, then tighten pivot screw.

Wire Connection

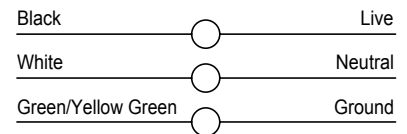

TROUBLESHOOTING

- Check that the line voltage at the fixture is correct. Refer to wiring directions.
- Is the fixture grounded properly.