




<b>R-2E75-S-TP</b>	
Brand Name	MARK III
Ballast Type	Magnetic
Starting Method	Instant Start
Lamp Connection	Series
Input Voltage	120
Input Frequency	60 HZ
Status	Active

### Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F.
* F60T12	2	50	0/-18	1.03	111	0.94	30	0.90	1.9	0.85
F64T12	2	52	0/-18	1.07	117	0.95	30	0.91	1.9	0.81
F72T12	2	57	0/-18	1.18	132	0.94	30	0.93	1.8	0.71
F84T12	2	70	50/10	1.28	147	0.95	30	0.96	1.8	0.65
F96T12	2	75	50/10	1.35	156	0.94	30	0.97	1.8	0.60
F96T12/ES	2	60	60/16	1.10	126	0.88	35	0.95	1.9	0.70

### Wiring Diagram

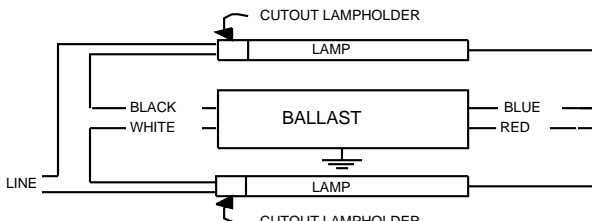


Diag. 12

The wiring diagram that appears above is for the lamp type denoted by the asterisk (\*)

### Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black	70		Yellow/Blue		
White	70		Blue/White		
Blue	46		Brown		
Red	46		Orange		
Yellow			Orange/Black		
Gray			Black/White		
Violet			Red/White		

### Enclosure

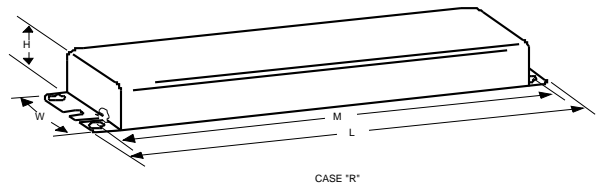

### Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
11.75 "	3.109375 "	1.78125 "	11.14062 "
11 3/4	3 7/64	1 25/32	11 9/64
29.8 cm	7.9 cm	4.5 cm	28.3 cm

Revised 08/01/2002



Data is based upon tests performed by Advance Transformer in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

### ADVANCE

O'HARE INTERNATIONAL CENTER · 10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018  
 Customer Support/Technical Service: Phone: 800-372-3331 · Fax: 630-307-3071  
 Corporate Offices: Phone: 800-322-2086