



LED SLIM WALL PACK-USER MANUAL

NOTE: Read carefully before installation.

This LED Wall-Pack light uses the latest in solid state lighting technology for long life, low maintenance, and high efficiency. An internal power-factor-corrected switch-mode supply allows it to be used from any nominal 100V-277V, 60Hz AC supply without any variation in light output.


Suitable for use in the following locations:


- Ambient Temp: -40~+45°C(-40~+113°F)
- Wet Locations

WARNING:


- To avoid the risk of fire, explosion, or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes.
- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaire must be connected to a wiring system with an equipment-grounding conductor.



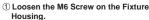


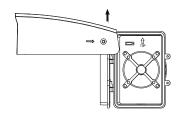


- 2 Remove the Housing to install the Wall Mounting box.
- a. Knock out appropriate holes when mounting to Junction Box(not provided)
- b. Use the Level Bubble in the Wall Mounting Box, level the Fixture and secure to a sturdy wall. (shown as Fig3)

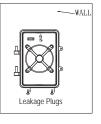


③ Place the Housing back to the Wall Mounting Box, and tighten the 2x M5 Flat Head Philips Screw. Remove the Leakage Plugs & check Door Gasket.

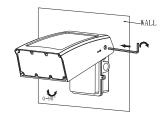

Adjust the Housing from 0-90° for desired beam angle via adjusting the M6 Screw.

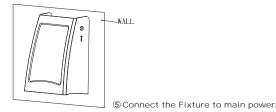

Installation:

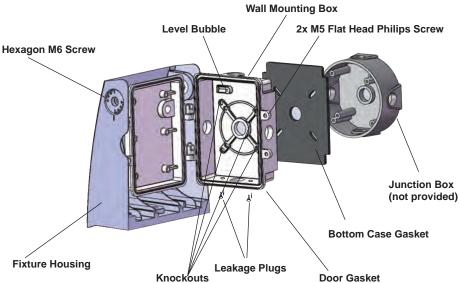

Wiring Diagram:

