
FIXTURE SENSOR INSTALLATION INSTRUCTION-EFS06R

TURN THE POWER OFF AT THE CIRCUIT BREAKER BEFORE INSTALLING THE SENSOR MAXIMUM CURRENT IS 10mA WHEN OPERATE AT 32V DC.

DIMENSION

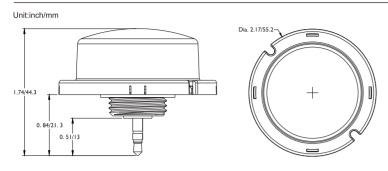

CONTROL MODES

TIME: 30s / 1min / 5min / 10min / 30min **DIM**: 10%-100%

MODE: A, B, C, D, E

FACTORY SETTING: TIME-10 min, DIM-50%, MODE-C

This sensor is operated and programed by a remote control.

When setting the Mode, Dimming level and Delay time, the light will blink twice each time the button is pushed to indicate the setup was successful. Note: The sensor will not respond while the light is blinking. The sensor has 5 selectable modes(A-E), each of which has preset parameter settings(see below). Once desired mode is selected, you have the ability to further customize the Dim level and Delay time settings by pressing one or more of the desired gray buttons.

TESTING

To verify sensor is working properly proceed with the steps below to conduct test:


1. Push "Test" button on remote controller.

2. The light will turn to full-ON while occupancy detected.

3. The light will dim to DIM level after 5s.


4. The light will turn OFF if no occupancy detected within another 3s.



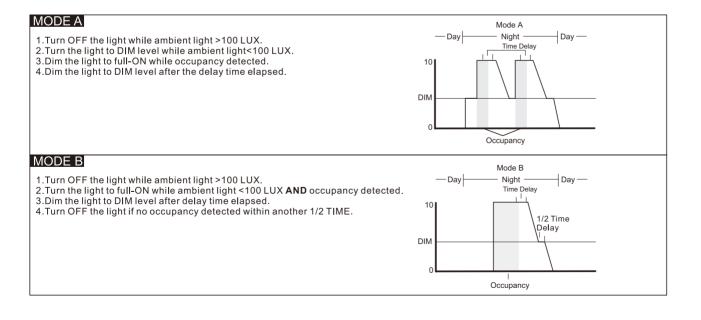



FIXTURE SENSOR INSTALLATION INSTRUCTION-EFS06R

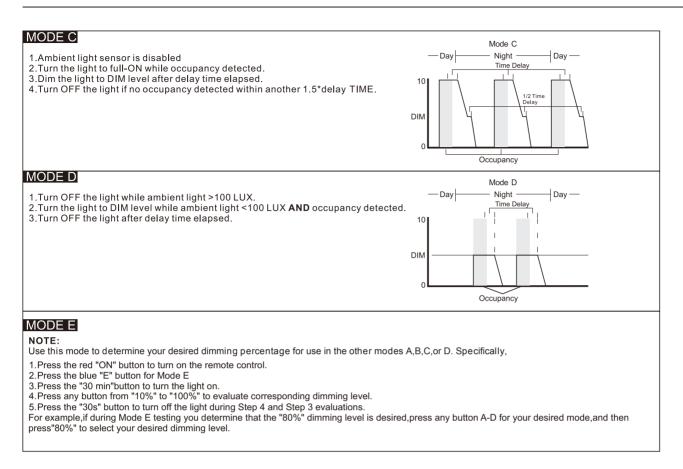

REMINDER:

One remote control (sold separately) can only control one fixture at one time:

Aim the remote at the fixture you wish to adjust, then target another fixture when you want to adjust or control another fixture.

One remote control can control many fixtures, no limit.

The remote needs to be less than 10 meters (or 33 feet) from the sensor / fixture to be adjusted or controlled, ultraviolet rays will affect the distance of remote control.

