



Questions?

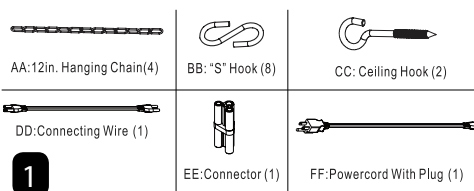
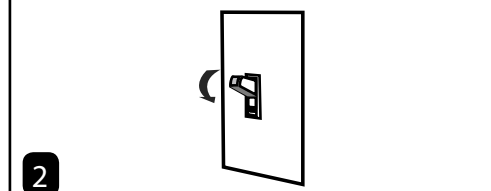
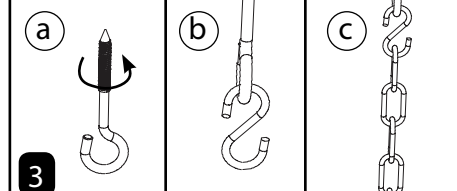
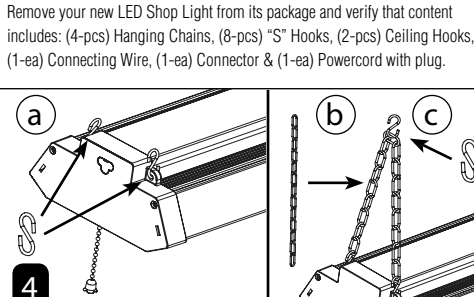
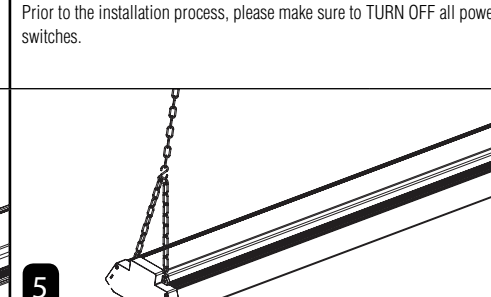
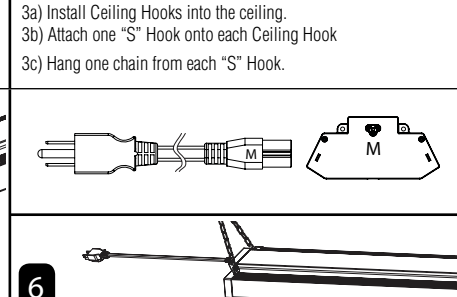
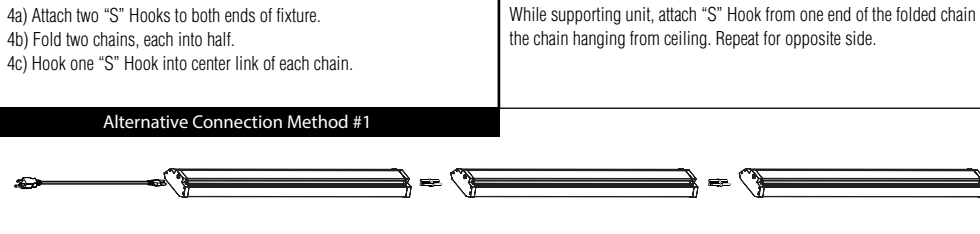
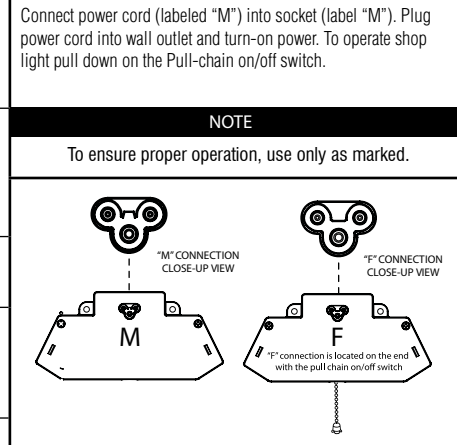
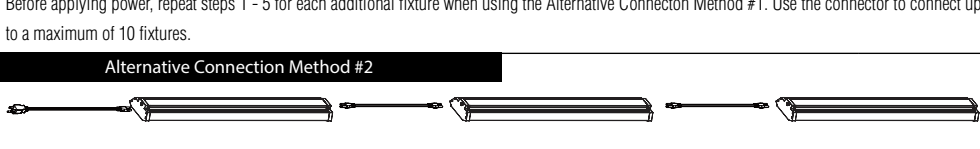
For customer service please call us at 1-888-743-5766
Office Hours: 8:00 a.m. – 5:00 p.m. PST Monday-Friday



PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION

WARNINGS	CAUTIONS
<ul style="list-style-type: none"> • Risk of fire / electrical shock. • Risk of electric shock – disconnect power at source before installation. • Do not make or alter any open holes in an enclosure of wiring or electrical components during installation. • Failure to comply with installation instruction could result in personal injury or property damage. • If fixture or luminaire exhibits abnormal operation (buzzing, flickering, minimal light, etc.), turn off power, remove fixture and contact us. For more information, please visit www.eurilighting.com or call our toll-free number 1-888-743-5766. 	<ul style="list-style-type: none"> • Do not look directly at the operating LED Shop Light. • Do not touch this product with wet hands. • Do not disassemble, repair or alter fixture. • Designed for indoor applications only. • Suitable for damp locations. • Do not allow fixture to hang from cord. • Do not use on dimming circuit. • Do not install on radiant-heating ceilings. • A maximum of 10 units can be connected in any configuration.

LED SHOP LIGHT INSTALLATION INSTRUCTIONS

 <p>AA: 12in. Hanging Chain (4) BB: "S" Hook (8) CC: Ceiling Hook (2) DD: Connecting Wire (1) EE: Connector (1) FF: Powercord With Plug (1)</p>	 <p>2</p>	 <p>3</p>
<p>Remove your new LED Shop Light from its package and verify that content includes: (4-pcs) Hanging Chains, (8-pcs) "S" Hooks, (2-pcs) Ceiling Hooks, (1-1ea) Connecting Wire, (1-1ea) Connector & (1-1ea) Powercord with plug.</p>	<p>Prior to the installation process, please make sure to TURN OFF all power switches.</p>	<p>3a) Install Ceiling Hooks into the ceiling. 3b) Attach one "S" Hook onto each Ceiling Hook 3c) Hang one chain from each "S" Hook.</p>
 <p>4</p>	 <p>5</p>	 <p>6</p>
<p>4a) Attach two "S" Hooks to both ends of fixture. 4b) Fold two chains, each into half. 4c) Hook one "S" Hook into center link of each chain.</p>	<p>While supporting unit, attach "S" Hook from one end of the folded chain to the chain hanging from ceiling. Repeat for opposite side.</p>	<p>Connect power cord (labeled "M") into socket (label "M"). Plug power cord into wall outlet and turn-on power. To operate shop light pull down on the Pull-chain on/off switch.</p>
<p>Alternative Connection Method #1</p>		<p>NOTE</p>
		<p>To ensure proper operation, use only as marked.</p>
<p>Before applying power, repeat steps 1 - 5 for each additional fixture when using the Alternative Connection Method #1. Use the connector to connect up to a maximum of 10 fixtures.</p>		 <p>"M" CONNECTION CLOSE-UP VIEW "F" CONNECTION CLOSE-UP VIEW "F" connection is located on the end with the pull chain on/off switch.</p>
<p>Alternative Connection Method #2</p>		
		
<p>Before applying power, repeat steps 1 - 5 for each additional fixture when using the Alternative Connection Method #2. Use the connecting wire to connect up to a maximum of 10 fixtures.</p>		<p>"F" Connection, end with the Pull-chain on/off switch.</p>

THIS PRODUCT IS NON DIMMABLE, AND SHALL NOT BE USED WITH ANY DIMMER.