



When working with electronic ballast please check the compatibility list first!
 If you couldn't find your ballast on the list then bypass the fixture, or contact us please!
 Do not install the LED tube with the ballast which is not on the ballast compatibility list, risk of firing!

BALLAST COMPATIBILITY LIST PLTP9933/PLTP9934/PLTP9935

Y: Compatible N: Incompatible N/T: Not tested

No.	Ballast Brand	Model No.	Start Type	Max Loading Qty	Compatibility (Y/N)			
					1 lamp	2 lamps	3 lamps	4 lamps
1	ACT	ACT3P32ISUNVE	Instant Start	3	Y	Y	Y	N/T
2	ACT	ACT4P32ISUNVE	Instant Start	4	Y	N/T	Y	Y
3	ADVANCE	VEL-4P32-SC	Instant Start	4	Y	N/T	Y	Y
4	DAMAR	1688B	Instant Start	2	Y	N	N/T	N/T
5	DAMAR	1688D	Instant Start	2	Y	Y	N/T	N/T
6	DAMAR	3654C	Instant Start	3	Y	Y	Y	N/T
7	EIKO	PM-2X32T8-UNV-IS	Instant Start	2	Y	Y	N/T	N/T
8	ESPEL	VE232MVHIPLE	Instant Start	2	Y	Y	N/T	N/T
9	ESPEL	VE2P32MVHIPLE 11068	Instant Start	2	Y	Y	N/T	N/T
10	ESPEL	VE2P32MVHIPLE 11069	Instant Start	2	Y	Y	N/T	N/T
11	ESPEL	VE2P32MVHPPE 11080	Programmed Start	2	Y	Y	N/T	N/T
12	ESPEL	VE332MVHIPLE	Instant Start	3	Y	Y	Y	N/T
13	ESPEL	VE3P32MVHIPLE 11070	Instant Start	3	Y	Y	Y	N/T
14	ESPEL	VE3P32MVHIPLE 11066	Instant Start	3	Y	Y	Y	N/T
15	ESPEL	VE3P32MVHPPE 11083	Programmed Start	3	Y	Y	Y	N/T
16	ESPEL	VE4P32MVHIPLE 11072	Instant Start	4	Y	N/T	Y	N
17	ESPEL	VE4P32MVHPHE 11073	Instant Start	4	N	N/T	Y	Y
18	ESPEL	VE4P32MVHIPLE 11057	Instant Start	4	Y	N/T	Y	Y
19	ESPEL	VE4P32MVHPPE 11086	Programmed Start	4	Y	N/T	Y	Y
20	FULHAM	FH12-UNV-1400L	Emergency	1	Y	N/T	N/T	N/T
21	GE	GE132MAX-G-N	Instant Start	1	Y	N/T	N/T	N/T
22	GE	GE132MAXP-L/ULTRA	Instant Start	1	Y	N/T	N/T	N/T
23	GE	GE132MAXP-N/ULTRA	Instant Start	1	Y	N/T	N/T	N/T
24	GE	GE-132-MV-N	Instant Start	1	Y	N/T	N/T	N/T
25	GE	GE132-MVPS-H	Programmed Start	1	Y	N/T	N/T	N/T
26	GE	GE-132-MV-PS-L	Programmed Start	1	Y	N/T	N/T	N/T
27	GE	GE232-120RES-B	Instant Start	2	Y	Y	N/T	N/T
28	GE	GE232MAX-G-N	Instant Start	2	Y	Y	N/T	N/T
29	GE	GE232MAX-G-N-DILY	Instant Start	2	Y	Y	N/T	N/T
30	GE	GE232MAX-G-N-DIYB	Instant Start	2	Y	Y	N/T	N/T
31	GE	GE232MAX-L/ULTRA	Instant Start	2	Y	Y	N/T	N/T
32	GE	GE232MAX-L/ULTRA	Instant Start	2	Y	Y	N/T	N/T
33	GE	GE232MAXP-H/ULTRA	Instant Start	2	N	Y	N/T	N/T
34	GE	GE232MAXP-L/ULTRA	Instant Start	2	Y	Y	N/T	N/T
35	GE	GE-232-MV-N	Instant Start	2	Y	Y	N/T	N/T
36	GE	GE-232-MV-PS-H	Instant Start	2	N	Y	N/T	N/T
37	GE	GE232-MVPS-L	Programmed Start	2	Y	Y	N/T	N/T
38	GE	GE232-MVPS-N	Programmed Start	2	Y	Y	N/T	N/T
39	GE	GE-232-MV-PS-N	Programmed Start	2	Y	Y	N/T	N/T
40	GE	GE232MVPSN-V03	1-10V Dimming	2	Y	Y	N/T	N/T
41	GE	GE-232-MVPS-XL	Programmed Start	2	Y	Y	N/T	N/T
42	GE	GE332MAX-G-H	Instant Start	3	N	Y	Y	N/T
43	GE	GE332MAX-G-N	Instant Start	3	Y	Y	Y	N/T
44	GE	GE332MAX-G-N-DIYB	Instant Start	3	Y	Y	Y	N/T
45	GE	GE332MAXP347-H	Instant Start	3	N	Y	Y	N/T
46	GE	GE332MAXP-H-42T	Instant Start	3	N	N	Y	N/T
47	GE	GE332MAXP-L/ULTRA	Instant Start	3	Y	Y	Y	N/T
48	GE	GE332MAXP-N/ULTRA	Instant Start	3	Y	Y	Y	N/T
49	GE	GE332MV-N-DIY	Instant Start	3	Y	Y	Y	N/T
50	GE	GE332-MVPS-L	Programmed Start	3	Y	Y	Y	N/T
51	GE	GE-332-MVPS-XL	Programmed Start	3	Y	Y	Y	N/T
52	GE	GE432MAX-G-N	Instant Start	4	Y	N/T	Y	Y
53	GE	GE432MAXG-N-DIYL	Instant Start	4	Y	N/T	Y	Y
54	GE	GE432MAX-L/ULtra	Instant Start	4	Y	N/T	Y	Y
55	GE	GE432MAXP347-H	Instant Start	4	N	N/T	N	Y
56	GE	GE432MAXP347-N	Instant Start	4	N	N/T	Y	Y
57	GE	GE432MAXPH/ULTRA	Instant Start	4	N	N/T	Y	Y
58	GE	GE432MAXP-H/ULTRA	Instant Start	4	N	N/T	Y	Y
59	GE	GE432MAXP-L/ULTRA	Instant Start	4	Y	N/T	Y	Y
60	HALCO	EP232IS/MV/HE	Instant Start	2	N	Y	N/T	N/T
61	HALCO	EP332IS/L/MV/HE	Instant Start	3	Y	Y	Y	N/T
62	HALCO	EP332IS/MV/HE	Instant Start	3	Y	Y	Y	N/T
63	HALCO	EP432IS/L/MV/HE	Instant Start	4	N	N/T	Y	Y

No.	Ballast Brand	Model No.	Start Type	Max Loading Qty	Compatibility (Y/N)			
					1 lamp	2 lamps	3 lamps	4 lamps
64	HOWARD	EP2/32IS/MV/MC/HE	Instant Start	2	Y	Y	N/T	N/T
65	HOWARD	EP4/32IS/MV/MC/HE	Instant Start	4	Y	N/T	Y	Y
66	HOWARD	EPH4/32IS/MV/SC/HE	Instant Start	4	N	N/T	Y	Y
67	HOWARD	EPL2/32IS/MV/MC/HE	Instant Start	2	Y	Y	N/T	N/T
68	HOWARD	EPL4/32IS/MV/MC/HE	Instant Start	4	N	N/T	Y	Y
69	KEYSTONE	KTEB-232-UV-IS-N-P	Instant Start	2	Y	Y	N/T	N/T
70	KEYSTONE	KTEB-332-UV-IS-N-P	Instant Start	3	Y	Y	Y	N/T
71	KEYSTONE	KTEB-432RIS-1-TP-SL	Instant Start	4	Y	N/T	Y	Y
72	KEYSTONE	KTEB-432-UV-IS-N-P	Instant Start	4	Y	N/T	Y	Y
73	KEYSTONE	KT-EMRG-1400	Emergency	2	Y	Y	N/T	N/T
74	KEYSTONE	KT-EMRG-500-SL	Emergency	1	Y	N/T	N/T	N/T
75	PHILIPS	ICN-2M32-MC	Instant Start	2	N	Y	N/T	N/T
76	PHILIPS	ICN-2P32-N	Instant Start	2	Y	Y	N/T	N/T
77	PHILIPS	ICN-2P32-SC	Instant Start	2	Y	Y	N/T	N/T
78	PHILIPS	ICN-4P32-N	Instant Start	4	Y	N/T	Y	Y
79	PHILIPS	IOP-2P32-HL-N	Instant Start	2	N	Y	N/T	N/T
80	PHILIPS	IOP-2P32-LW-N	Instant Start	2	Y	Y	N/T	N/T
81	PHILIPS	IOP-2P32-N	Instant Start	2	Y	Y	N/T	N/T
82	PHILIPS	IOP-2PSP32-LW-N	Programmed Start	2	Y	Y	N/T	N/T
83	PHILIPS	IOP-2PSP32-N	Programmed Start	2	Y	Y	N/T	N/T
84	PHILIPS	IOP-4P32-LW-N	Instant Start	4	Y	N/T	Y	Y
85	PHILIPS	IOP-4PSP32-LW-SC	Programmed Start	4	Y	N/T	Y	Y
86	PHILIPS	IOP-4PSP32-SC	Programmed Start	4	Y	N/T	Y	Y
87	PHILIPS	IOPA-1P32-LW-N	Instant Start	1	Y	N/T	N/T	N/T
88	PHILIPS	IOPA-2P32-LW-N	Instant Start	2	Y	Y	N/T	N/T
89	PHILIPS	IOPA-2P32-N	Instant Start	2	Y	Y	N/T	N/T
90	PHILIPS	IOPA-3P32-LW-N	Instant Start	3	Y	Y	Y	N/T
91	PHILIPS	IOPA-3P32-LW-SC	Instant Start	3	N	Y	Y	N/T
92	PHILIPS	IOPA-4P32-LW-N	Instant Start	4	N	N/T	Y	Y
93	PHILIPS	IOPA-4P32-N	Instant Start	4	Y	N/T	Y	Y
94	PHILIPS	RCN-2S32-SC	Instant Start	2	N	Y	N/T	N/T
95	PHILIPS	REL-2P32-SC	Instant Start	2	Y	Y	N/T	N/T
96	PHILIPS	IZT-2S32-SC	1-10V Dimming	2	Y	Y	N/T	N/T
97	PLUSRITE	BAF232PS/MV	Programmed Start	2	N	Y	N/T	N/T
98	PLUSRITE	BAF432IS/MV	Instant Start	4	Y	N/T	Y	Y
99	ROBERTSON	IEA432T8120N 3P20135	Instant Start	4	Y	N/T	Y	Y
100	SYLVANIA	QHE 1x32T8/UNV ISH HT-SC	Instant Start	1	Y	N/T	N/T	N/T
101	SYLVANIA	QHE 1X32T8/UNV ISN-SC	Instant Start	1	Y	N/T	N/T	N/T
102	SYLVANIA	QHE 2X32T8/347 ISL-SC	Instant Start	2	Y	Y	N/T	N/T
103	SYLVANIA	QHE 2x32T8/UNV ISH HT-SC	Instant Start	2	N/T	Y	N/T	N/T
104	SYLVANIA	QHE 2x32T8/UNV ISL-SC	Instant Start	2	N/T	Y	N/T	N/T
105	SYLVANIA	QHE 2X32T8/UNV ISL-SC-1	Instant Start	2	Y	Y	N/T	N/T
106	SYLVANIA	QHE 2x32T8/UNV ISN-SC	Instant Start	2	N/T	Y	N/T	N/T
107	SYLVANIA	QHE 2X32T8/UNV PSN-MC	Programmed Start	2	Y	Y	N/T	N/T
108	SYLVANIA	QHE 2X32T8/UNV PSX-MC	Programmed Start	2	Y	Y	N/T	N/T
109	SYLVANIA	QHE 3X32T8/UNV PSN-SC	Programmed Start	3	Y	Y	Y	N/T
110	SYLVANIA	QHE 3x32T8/UNV ISH HT-SC	Instant Start	3	N/T	N/T	Y	N/T
111	SYLVANIA	QHE 3x32T8/UNV ISL-SC	Instant Start	3	N/T	N/T	Y	N/T
112	SYLVANIA	QHE 3XLEDT8/UNV-ISN-SC	Instant Start	3	Y	Y	Y	N/T
113	SYLVANIA	QHE 4X32T8/UNV PSX-SC	Programmed Start	4	Y	N/T	Y	Y
114	SYLVANIA	QHE 4x32T8/UNV ISL-SC	Instant Start	4	Y	N/T	Y	Y
115	SYLVANIA	QHE 4x32T8/UNV ISN-SC	Instant Start	4	Y	N/T	Y	Y
116	SYLVANIA	QHE 4xLEDT8/UNV-ISN-SC	Instant Start	4	Y	N/T	Y	Y
117	SYLVANIA	QHES 2X32T8/UNV PSN-SC	Programmed Start	2	Y	N	N/T	N/T
118	SYLVANIA	QTP 1X32T8/UNV ISN-SC	Instant Start	1	Y	N/T	N/T	N/T
119	SYLVANIA	QTP 2X32T8/347 PSX-TC	Programmed Start	2	Y	Y	N/T	N/T
120	SYLVANIA	QTP 3X32T8/UNV ISN-SC	Instant Start	3	Y	Y	Y	N/T
121	SYLVANIA	QTP 4X32T8/UNV ISN-SC	Instant Start	4	Y	N/T	Y	Y
122	ULTRASAVE	UT232347	Instant Start	2	Y	Y	N/T	N/T
123	UNIVERSAL	B232IUNV-C	Instant Start	2	Y	Y	N/T	N/T
124	UNIVERSAL	B232IUNVEL-N	Instant Start	2	Y	Y	N/T	N/T
125	UNIVERSAL	B232IUNVHEH-A	Instant Start	2	N	Y	N/T	N/T
126	UNIVERSAL	B232IUNVHP-N	Instant Start	2	Y	Y	N/T	N/T
127	UNIVERSAL	B232PUNVHE-B	Programmed Start	2	Y	Y	N/T	N/T
128	UNIVERSAL	B332IUNVEL-A	Instant Start	3	Y	Y	Y	N/T
129	UNIVERSAL	B332IUNVHE-A	Instant Start	3	Y	Y	Y	N/T
130	UNIVERSAL	B332IUNVHP-A	Instant Start	3	Y	Y	Y	N/T
131	UNIVERSAL	B432IUNVHE-A	Instant Start	4	Y	N/T	Y	Y
132	UNIVERSAL	B432IUNVHP-A	Instant Start	4	Y	N/T	Y	Y
133	UNIVERSAL	B432PUNVHE-A	Programmed Start	4	Y	N/T	Y	Y