

# INSTALLATION GUIDE

 
MODEL #: DLC4S-10W205se / DLC6S-12W205se

Downlight Series | Fixed Class 4"& 6" LED Slim Downlight



## Questions?

For customer service please call us at 1-310-787-1100 Office Hours: 8:00 a.m. – 5:00 p.m. PST Monday-Friday www.eurilighting.com





#### PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION

### WARNINGS

When working with electrical components, make sure you turn off the power at the main breaker and that your eyes are properly protected. IMPORTANT: Please read carefully and save these instructions, as you may need them at a later date.

- Make all electrical and grounded connections in accordance with the National Electrical Code (NEC) and any applicable local code requirements.
- Installation and service of luminaires should be performed by a qualified licensed electrician.
- · Verify that supply voltage is correct by comparing it with luminaire label information.

#### READ AND FOLLOW BELOW SAFETY INSTRUCTIONS

- 1. To prevent wiring damage or abrasion do not expose wiring to edges of sheet metal or other sharp objects.
- 2. Supply conductors (power wires) connecting the fixture must be rated minimum 90°C. If uncertain consult an electrician.
- 3. Type IC Rated for direct contact with insulation.
- 4. Suitable for damp locations.
- 5. This light is dimmable. Please refer to compatible dimmer list.

These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's or owner's purposes, this matter should be referred to seller.

NOTE: Before beginning the installation, make sure all power is off, shutting power off in breaker box to areas where downlights are to be installed is recommended.

 
Required Tools (not included): Safety glasses and gloves, tape measure, saw, pencil/pen.

## INSTALLATION

#### UNPACKING

1. Thoroughly inspect the fixture for freight damage. Freight damage should be reported to the delivery carrier.

#### **STEPS FOR INSTALLATION**



#### 0

If there is an existing hole, make sure that it is the correct size (4.13" for 4" & 6.10" for 6") for the luminaire to properly fit. If applicable, remove any existing retrofit can.

If there is no existing hole, cut a new hole. Cut the opening with a saw (not included). Size of hole should not exceed 4 1/4 inches for 4 inch downlight; Size of hole should not exceed 6 1/4 inches for 6 inch downlight;

## 3

Open the cover of the remote driver box. Push and remove one of the knockouts on the side plate.

### 4


Locate power supply leads from remote driver box and connect to power source using quick wire connectors (provided).

### 6

Connect black wire to live wire, white wire to neutral wire, and green wire with ground (as shown) and secure using quick connectors. Close the cover of the box.

#### 6

Connect the remote driver box to the luminaire and tighten the nut connector by hand.

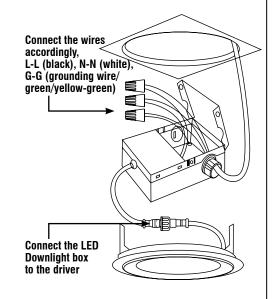

THIS PRODUCT MAY NOT BE COMPATIBLE WITH ALL DIMMERS, FOR MORE INFORMATION ABOUT DIMMER COMPATIBILITY PLEASE VISIT: WWW.EURILIGHTING.COM



# INSTALLATION GUIDE

 
MODEL #: DLC4S-10W205se / DLC6S-12W205se

Downlight Series | Fixed Class 4"& 6" LED Slim Downlight



## **Questions?**

For customer service please call us at 1-310-787-1100 Office Hours: 8:00 a.m. – 5:00 p.m. PST Monday-Friday www.eurilighting.com



4"& 6"LED Ultra Slim Downlight

#### PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION

