

## **A21 EMERGENCY LED LIGHT BULB**

Install Guide and Manual

Please read instructions carefully before use



### **Specification**


Input Power	110~120VAC, 60Hz
Output	800 Lumens
Power Consumption	8W
Color Temperature	3000K
Base	E26
Size	A21, Φ65*142 mm
Dimmable	None

### STANDARD USE

- 1. Turn the switch to the OFF position.
- 2. Screw the bulb into a 120V light fixture that accepts an E26 base.
- 3. Turn on the light switch. The bulb is now ready for standard use.
- 4. Once charged, the bulb is ready for emergency or portable use.

### In case of power outage:

**5.** When used in a 120V light fixture, the bulb will turn on automatically if the power goes out.

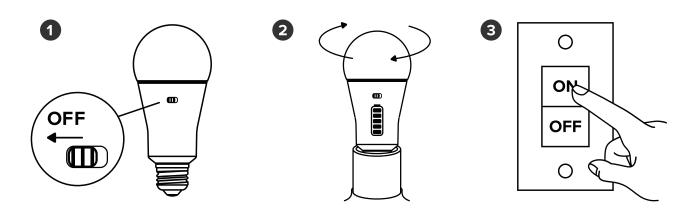

# **CAUTIONS**

- ♦ The A21 Emergency LED Light bulb lasts for 3-12 hours on a fully charged battery depending on the selected brightness setting.
- ◆ It takes 11 hours to fully charge the A21 Emergency LED Light Bulb
- ◆ Remember to recharge the bulb periodically if it is not connected to a light fixture.

#### WARNING

Switch on bulb base must be set to OFF when installed in a light fixture to avoid a short circuit


- ◆ DO NOT submerge bulb in water.
- ◆ When using cap with hook in portable applications hang the bulb in a secure place
- ◆ Abide by related regional and local laws or regulations.
- ◆ Check for damage during shipping prior to install. If the product is damaged do not use it.

#### **EMERGENCY SITUATION**

Battery	1800mAh
Volts	3.7V
Charging Time	11 Hours
Discharge Time	3-12 Hours


**Brightness:** 3 Levels Brightness Adjustment

200 lm /100 lm /50 lm (Toggle the switch repeatedly to toggle)

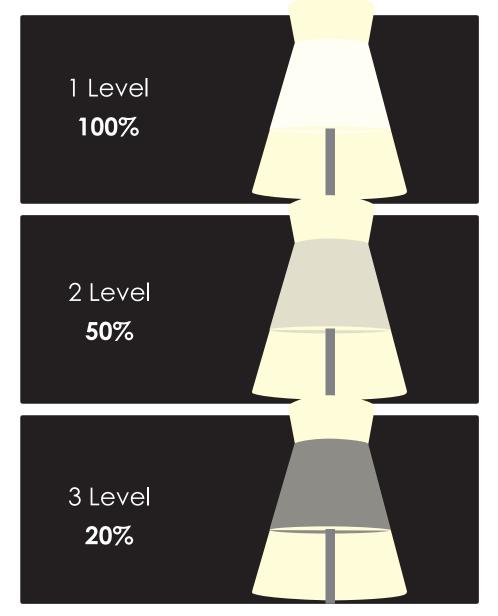

#### **PORTABLE USE**

- 1. Remove the fully charged light bulb from your light fixture.
- 2. Screw the light bulb into the provided cap with hook(optional).
- 3. Move the switch to the **ON** position to turn on the light.
- **4.** Use the hook to hang the bulb where needed (i.e., camping tent, closets, etc.)

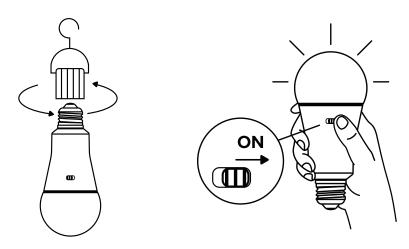

# **Brightness adjustment:**

- 1. In emergency mode, toggling the switch on and off within 5 seconds (fluctuating the red switch back and forth) will activate the dimming mode, with brightness levels of 100%, 50%, and 20%, cycling in sequence. If the switch is toggled for longer than 5 seconds, the brightness level will default to 100% with each switch. Note: If AC power is turned on once again in any brightness mode, the default brightness level will be 100% in emergency mode.
- **2.** During a power outage, brightness adjustment can be controlled using the power switch. For prolonged emergency lighting, it is recommended to adjust the brightness to the second or third level.