



COLOR/WATTAGE SELECTABLE LED UFO HIGH BAY W/ ADJUSTABLE BEAM ANGLE

WARNING, CAUTION, SAFETY AND INSTALLATION INSTRUCTIONS

WARNING

- Installation, service, and maintenance of luminaries should be performed by a qualified licensed electrician.
- Read the installation instructions carefully and verify that all accessories are included. Once confirmed, install the fixture according to the installation steps.
- Check fixture for damage. If damaged, contact the manufacturer immediately.

CAUTION

- Do not use an electric generator to test this fixture.
- If wire smoke or spark, turn off the power immediately and notify a qualified electrician.
- Use listed waterproof strain relief bushing when connecting the supply cord to the outlet box.

Installation Instructions

Suspension w/ Hook or Eyebolt

- Step 1. Screw the hook or eyebolt (included) into the fixture, then tighten the set screw. (Figure 1)
- Step 2. Hang the fixture on the ceiling hook or chain. (Figure 2)
- Step 3. After installation, connect the wires to the main power according to local wiring rules, ensuring the connection is stable and protected.



Figure 1

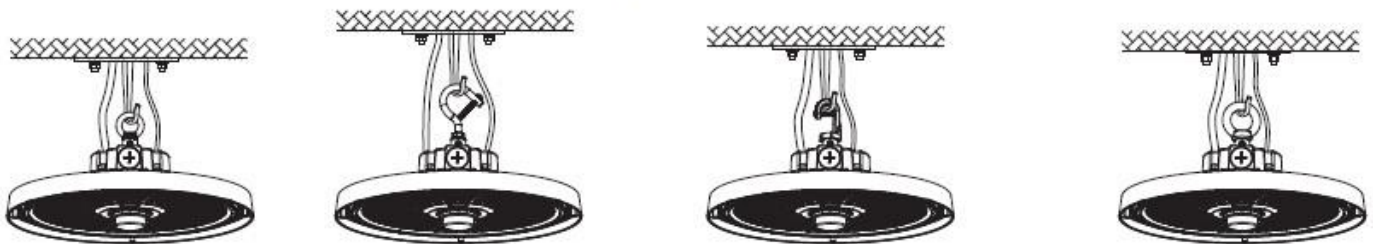


Figure 2



COLOR/WATTAGE SELECTABLE LED UFO HIGH BAY W/ ADJUSTABLE BEAM ANGLE

WARNING, CAUTION, SAFETY AND INSTALLATION INSTRUCTIONS

Surface Mount

Use the following compatible brackets: PLT-13534 w/ PLTS-12378, PLT-13535 w/ PLTS-12282

- Step 1. Use a pen or sharp tool to mark the bracket holes on the mounting surface, then drill them. (Figure 3)
- Step 2. Insert screw anchors into the holes using a hammer. (Figure 4)
- Step 3. Align the bracket holes with the screw holes (Figure 5), push the fixture to one side (Figure 6), and attach it with the screws.
- Step 4. After installation, connect the wires to the main power according to local wiring rules, ensuring the connection is stable and protected.
- Step 5. The fixture can be adjusted 50° to the left or right vertically by adjusting the bracket screws. (Figure 7)

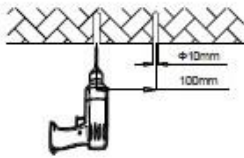


Figure 3

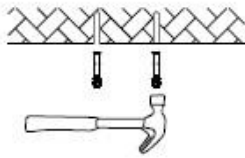


Figure 4



Figure 5

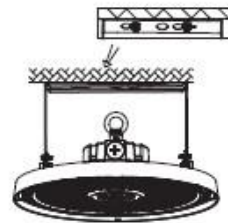


Figure 6

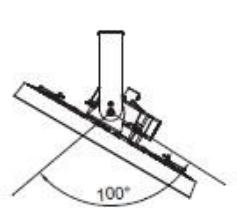


Figure 7

Pendant Mount

Use the following compatible brackets: PLT-13534 w/ PLTS-12378, PLT-13535 w/ PLTS-12282

- Step 1. Unscrew the nuts on the 1/2" NTP (not provided). (Figure 8)
- Step 2. Insert the 1/2" NTP stem into the bracket hole. (Figure 9)
- Step 3. Reattach the nuts (Figure 10). After installation, connect the wires to the main power according to local wiring rules, ensuring the connection is secure and protected.
- Step 4. The fixture can be adjusted 50° to the left or right vertically by adjusting the bracket screws.

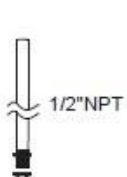



Figure 8



Figure 9



Figure 10

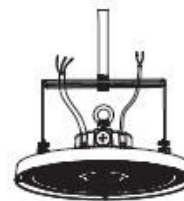



Optional Accessory Installation

DC Motion Sensor / PIR Sensor

(Both sensors use the same installation method; Compatible sensors: PLT-12844 & PLT-13121))

- Step 1. Use a screwdriver to remove the 1/2 plug from the sensor port. (Figure 12)
- Step 2. Twist-lock the sensor to the base. Use a compatible remote control (sold separately) to adjust the settings as needed. (Figure 13)



Figure 12

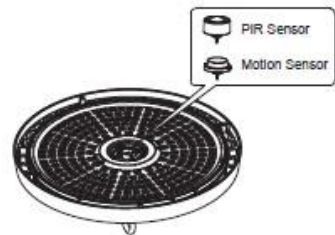


Figure 13

Safety Cable

- Step 1. Attach the safety cable to the fixture with screws. (Figure 15)
- Step 2. Attach the safety buckle on the rail, and installation is complete.

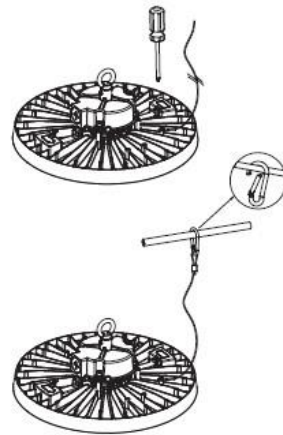


Figure 15

Wiring Diagram & Dimming

Dimming

This fixture can be dimmed using 0-10V dimmers. See the chart below for list of recommended dimmers.

Brand	Model
LUTRON	NTSTV-DV
LEVITON	DS710-10Z / IP710
LEGRAND	RH4FBL3PW



COLOR/WATTAGE SELECTABLE LED UFO HIGH BAY W/ ADJUSTABLE BEAM ANGLE

WARNING, CAUTION, SAFETY AND INSTALLATION INSTRUCTIONS



Wiring

- ACL: Black/Brown
- ACN: White/Blue
-  : Green/Yellow
- DIM+: Purple
- DIM-: Pink

(Check the product label for DIM+ and DIM- wire color.)

Dimming is optional for this fixture. If you decide not to use the dimming feature, cap the DIM+ and DIM- wires with wire nuts.

*NOTE – This product cannot be connected to a dimmer when it's equipped with the motion sensor.

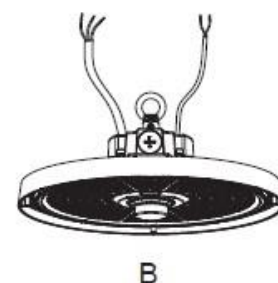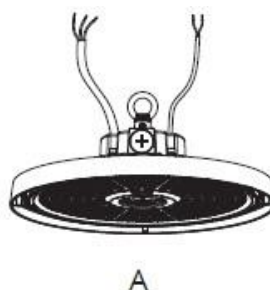


Wattage, CCT, and Beam Angle Selectable

This fixture is designed with three selectable CCTs, three selectable wattages, and three selectable beam angles that can be adjusted using the separate sliding switches.

Operation: Remove the plug, adjust the switches as indicated to select the desired CCT, wattage, or beam angle, then screw the plug back in.

Default Settings:

- PLT-13534: 150W, 5000K, 100° Beam Angle
- PLT-13535: 240W, 5000K, 100° Beam Angle

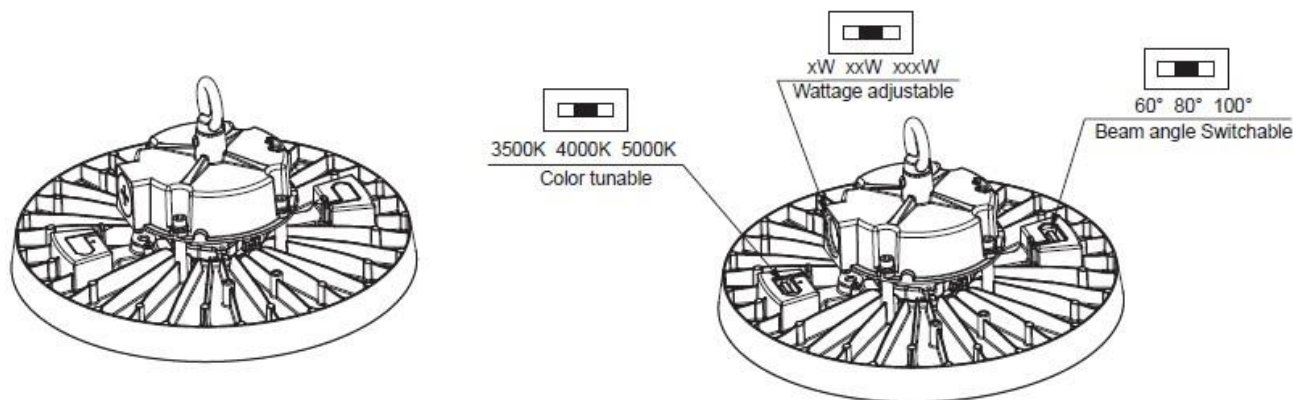

⚠ WARNING

- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.



COLOR/WATTAGE SELECTABLE LED UFO HIGH BAY W/ ADJUSTABLE BEAM ANGLE

WARNING, CAUTION, SAFETY AND INSTALLATION INSTRUCTIONS

- To reduce the risk of death, personal injury, or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards, read all warnings and instructions included with and on the fixture box and all fixture labels.
- Proper grounding is required to ensure safety.
- Power must be turned off at the breaker before installation or maintenance.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Wear gloves and eye protection at all times while installing, servicing, or performing maintenance on the luminaire, and avoid direct eye exposure to the light source while it is on.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not install damaged product. Inspect luminaire for damage that may have occurred during transit. If damaged, contact the manufacturer immediately.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's or owner's purposes, contact the manufacturer.

⚠ ADVERTENCIA

- Antes de instalar, reparar o realizar el mantenimiento de rutina de este equipo, siga estas precauciones generales.
- Para reducir el riesgo de muerte, lesiones personales o daños a la propiedad por fuego, descarga eléctrica, caída de piezas, cortes / abrasiones y otros peligros, lea todas las advertencias y instrucciones incluidas con y en la caja del dispositivo y todas las etiquetas del dispositivo.
- Se requiere una conexión a tierra adecuada para garantizar la seguridad.
- Se debe apagar la energía en el disyuntor antes de la instalación o el mantenimiento.
- Este producto debe ser instalado de acuerdo con el código de instalación aplicable por una persona familiarizada con la construcción y operación del producto y los peligros involucrados.
- Utilice guantes y protección para los ojos en todo momento durante la instalación, el servicio o el mantenimiento de la luminaria, y evite la exposición directa de los ojos a la fuente de luz mientras está encendida.
- Para evitar daños o abrasiones en el cableado, no exponga el cableado a bordes de láminas de metal u otros objetos afilados.
- No instale un producto dañado. Inspeccione la luminaria en busca de daños que puedan haber ocurrido durante el tránsito. Si está dañado, comuníquese con el fabricante de inmediato.
- Estas instrucciones no pretenden cubrir todos los detalles o variaciones en el equipo ni proporcionar todas las posibles contingencias a cumplir en relación con la instalación, operación o mantenimiento. Si desea obtener más información o si surgen problemas particulares que no están suficientemente cubiertos para los propósitos del comprador o propietario, comuníquese con el fabricante.