

INSTALLATION GUIDE

MODEL NO. EIN-VL19FR-3000e/ EIN-VL19FR-3001e/ EIN-VL19FR-3002e

LED Fixtures Indoor Vanity Series

3Wattage & 3CCT Selectable



Questions?

For customer service please call us at 1-310-787-1100 Office Hours: 8:00 a.m. - 5:00 p.m. PST Monday-Friday E-mail: info@eurilighting.com



PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS LISTED BELOW PRIOR TO PROPER INSTALLATION

WARNINGS & CAUTIONS

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNINGS & CAUTIONS: Risk of fire or electric shock, avoid fire or electric shock. Turn off the power at fuse or circuit breaker box before installation and maintenance to avoid electric shock. Before installation thoroughly review encolsed installation manual. Use for 120-277 Volt fused circuits, This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved. If you do not have sufficient electrical wiring experience, please consult a qualified electrician. Consult a qualified electrician to ensure correct branch circuit conductor. Do not make or alter any open holes in an enclosure of wiring or electrical components during installation. If the product is damaged, do not attempt installation and do not use. Not for mergency lighting. Operating temperature -20°C - 40°C(-4°F - 104°F). Suitable for damp locations.

*The lamp may not be compatible with all dimmers. MIN 90°C SUPPLY CONDUCTORS" & "LES FILS D'ALIMENTATION 90 °C MIN

COMPONENTS

Part	Item Name	Qty	Remark
Α	Lamp	1	
ВВ	Drywall Anchors	2	
CC	Wire Nut	5	
DD	4*4mm Screw	2	
EE	# 8-32 Screw	2	For Mounting on J-Box

INSTALLATION

1. Preparing for installation

- A. Disconnect electrical power at fuse or circuit breaker box before installing or servicing any part
- B. Carefully remove the fixture from the carton, and check that all parts are included, as shown

2. Mounting & Wiring (All wiring must take place inside junction box)

CAUTION: Make sure power is off at fuse or circuit breaker box. Check power wires for damage or scrapes. If power supply wires are within three inches of the ballast power supply, use wire suitable for at least 90°C (194°F).

Note: Most dwellings built before 1985 have supply wire rated to 60°C. Consult a qualified electrician before installing.

A.Pull the lens module out (5).

- B.Position the back plate mounting channel (1) against the wall covering the junction box (not included) and secure with the two screws included. Mark placement of mounting keyhole slots (2).
- C. Drill appropriate sized holes or install wall anchors (BB) to accept mounting screws.
- D. Connect the power source ground wire to the green or bare copper wire from the fixture
- E. Using wire nuts (CC), connect white supply wire to white fixture lead. Connect black supply wire to black fixture lead. Connect "Dim 0-10V" supply wire to Pink fixture lead. Connect "Dim ground" supply wire to Violet fixture lead. Do not mix wires. Pull on each wire lead to make sure connections are secure. Make certain no bare wires are exposed outside of wire connectors.
- F. Tuck all connections neatly into junction box (not included).
- G. Fasten channel securely to the wall.
- H. Assemble the lens module(4) back on the channel(3).

 I. This fixture allows the correlated color temperature (CCT) of the LEDs to be adjusted from warm white (3000K) to cool white (5000K) as desired. The wattage can also be adjusted to a lower level if a fixed lower light level is desired for fixture location. Before proceeding to the next step, the CCT switch (6) and Wattage switch (7) should be set to the desired positions by moving the toggle switch and following the position markings of each switch.

3. Restore power at fuse or circuit breaker box.

Care and maintenance - Use dry and clean cloth to wipe the surface of the fixture Replacement- This LED product has no bulb to replace.

Your installation is now complete. Return power and test the fixture.

