



A NEMA Lighting Systems Division Document

Incompatibility of T8 Ballasts (RS, PS, Dimming) and “Shunted” Bi-pin Lampholders

Prepared by

Lamp, Ballast, and Luminaire Sections
National Electrical Manufacturers Association
1300 North 17th Street, Suite 1847
Rosslyn, Virginia 22209
September 26, 2005

The requirements or guidelines presented in this document, a NEMA Lighting Systems Division white paper, are considered technically sound at the time they are approved for publication. They are not a substitute for a product seller's or user's own judgment with respect to the particular product discussed, and NEMA does not undertake to guarantee the performance of any individual manufacturer's products by virtue of this document or guide. Thus, NEMA expressly disclaims any responsibility for damages arising from the use, application, or reliance by others on the information contained in these white papers, standards, or guidelines.

Incompatibility of T8 Ballasts (RS, PS, Dimming) and “Shunted” Bi-pin Lampholders

Numerous ballast manufacturers have received and verified reports of incorrect applications of shunted bi-pin lampholders (tombstones) used with rapid-start (RS), programmed start (PS) and dimming ballasts. These incorrect applications have occurred in both new luminaires and field lamp and ballast retrofits.

For the purposes of this discussion, ballasts operating T8 rapid start lamps can be divided into two classifications; rapid-start and instant-start.

Rapid-start, programmed rapid-start, and dimming models provide lamp cathode power before striking the lamp (and sometimes after operation) and require that two wires be connected between the ballast and each lampholder.


Instant-start ballasts do not preheat the lamp cathodes and need only one wire between the ballast and each lampholder. Correct wiring of instant-start ballasts and rapid start lamps necessitates that the lampholder terminals be shorted together, either via wiring or the use of a shunted lamp holder. (See NEMA white paper LSD 2A, “Application Note: Wiring Requirements for T-8 Lamps with *Instant*-start Ballasts,” March 30, 1998)

There are two basic types of lampholders, normal (or non-shunted), and shunted. A normal lampholder does not short or shunt the two lamp contacts within the lampholder, whereas a shunted lampholder shorts the two lamp contacts within the lampholder. Other than possibly a manufacturer’s part number that is stamped or molded into the lampholder, it is very difficult to identify whether the lampholder is normal or shunted. These “shunted” lampholders were designed for instant start applications only.


The lampholder must be matched to the ballast type as shown below.

Correct application of lampholders

| Ballast type | Bi-pin lampholder type | |
|-------------------------------|------------------------------------|-------------------|
| | Normal (non-shunted) | Shunted |
| Rapid-start, programmed-start | Use | Do not use |
| Dimming | Use | Do not use |
| Instant-start | Can use with external wiring shunt | Use |

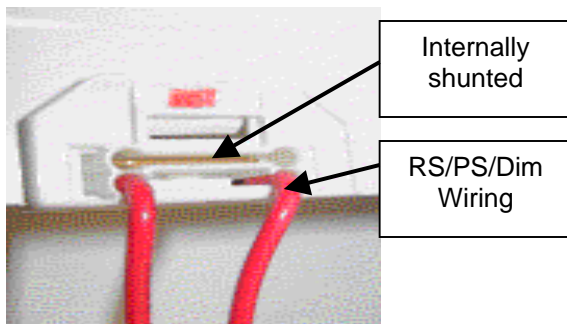

Incorrect application of shunted lampholder!

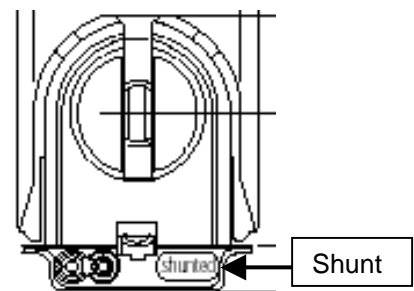

Example: Shunted lampholder

The incorrect application of lampholders can result in shortened lamp life ballast damage, and/or voiding lamp and ballast warranties.