




Questions?

For customer service please call us at 1-888-743-5766
Office Hours: 8:00 a.m. – 5:00 p.m. PST Monday-Friday



**Always have a qualified electrician do your electrical work.
Switch off power before starting the installation.**

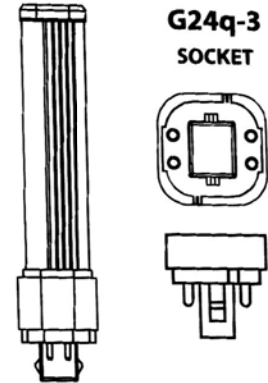

PLEASE REVIEW THE INSTRUCTIONS AND WARNINGS PRIOR TO STARTING THE INSTALLATION.

WARNINGS:

Risk of fire/ electrical shock

- LED CFL Retrofit installation requires knowledge of luminaire electrical systems. (If you are not a qualified electrician, please do not attempt installation and contact a qualified electrician.)
- Install this kit only in the luminaires that have the construction features and dimensions shown in the drawings.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during installation.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

CAUTIONS:

- Do not use with dimmers.
- Do not look directly at the operating LED Retrofit Lamp.
- Do not touch this product with wet hands.
- For indoor Application (Recommend)
- Use in dry locations.
- The luminaire shall be grounded.
- Do not disassemble, repair or alter.



INSTALLATION INSTRUCTIONS:

1. Switch off power before starting the installation.
2. Remove current fixture cover or diffuser (if fixture is being replaced).
3. Open/Remove wiring compartment cover.
4. Cut all remaining wires connected to the ballast.
5. Connect one wire from the socket to branch circuit (Hot) and onto the second socket. Connect the other wire to the branch circuit (Neutral).
6. Reinstall wiring compartment cover. Be careful not to pinch, crimp or bind wires.
7. Remove any existing labels and replace them with included EBG24-1100T Label.
8. Insert the LED CFL into the lamp socket.
9. Switch power on.

INSTRUCTION FOR MOUNTING:

Steps for removing a CFL lamp and inserting a LED CFL Retrofit.

RETROFIT LUMINAIRE WITH TWO LAMPS

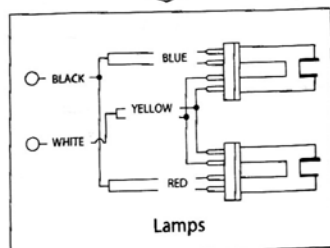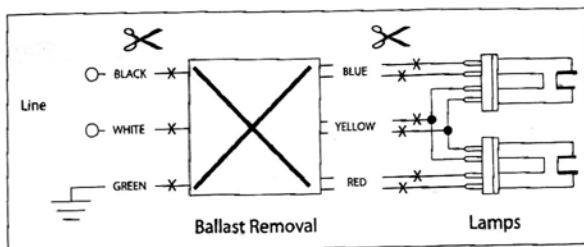

RETROFIT LUMINAIRE WITH ONE LAMP

