




UTTERMOST

Assembly Instruction

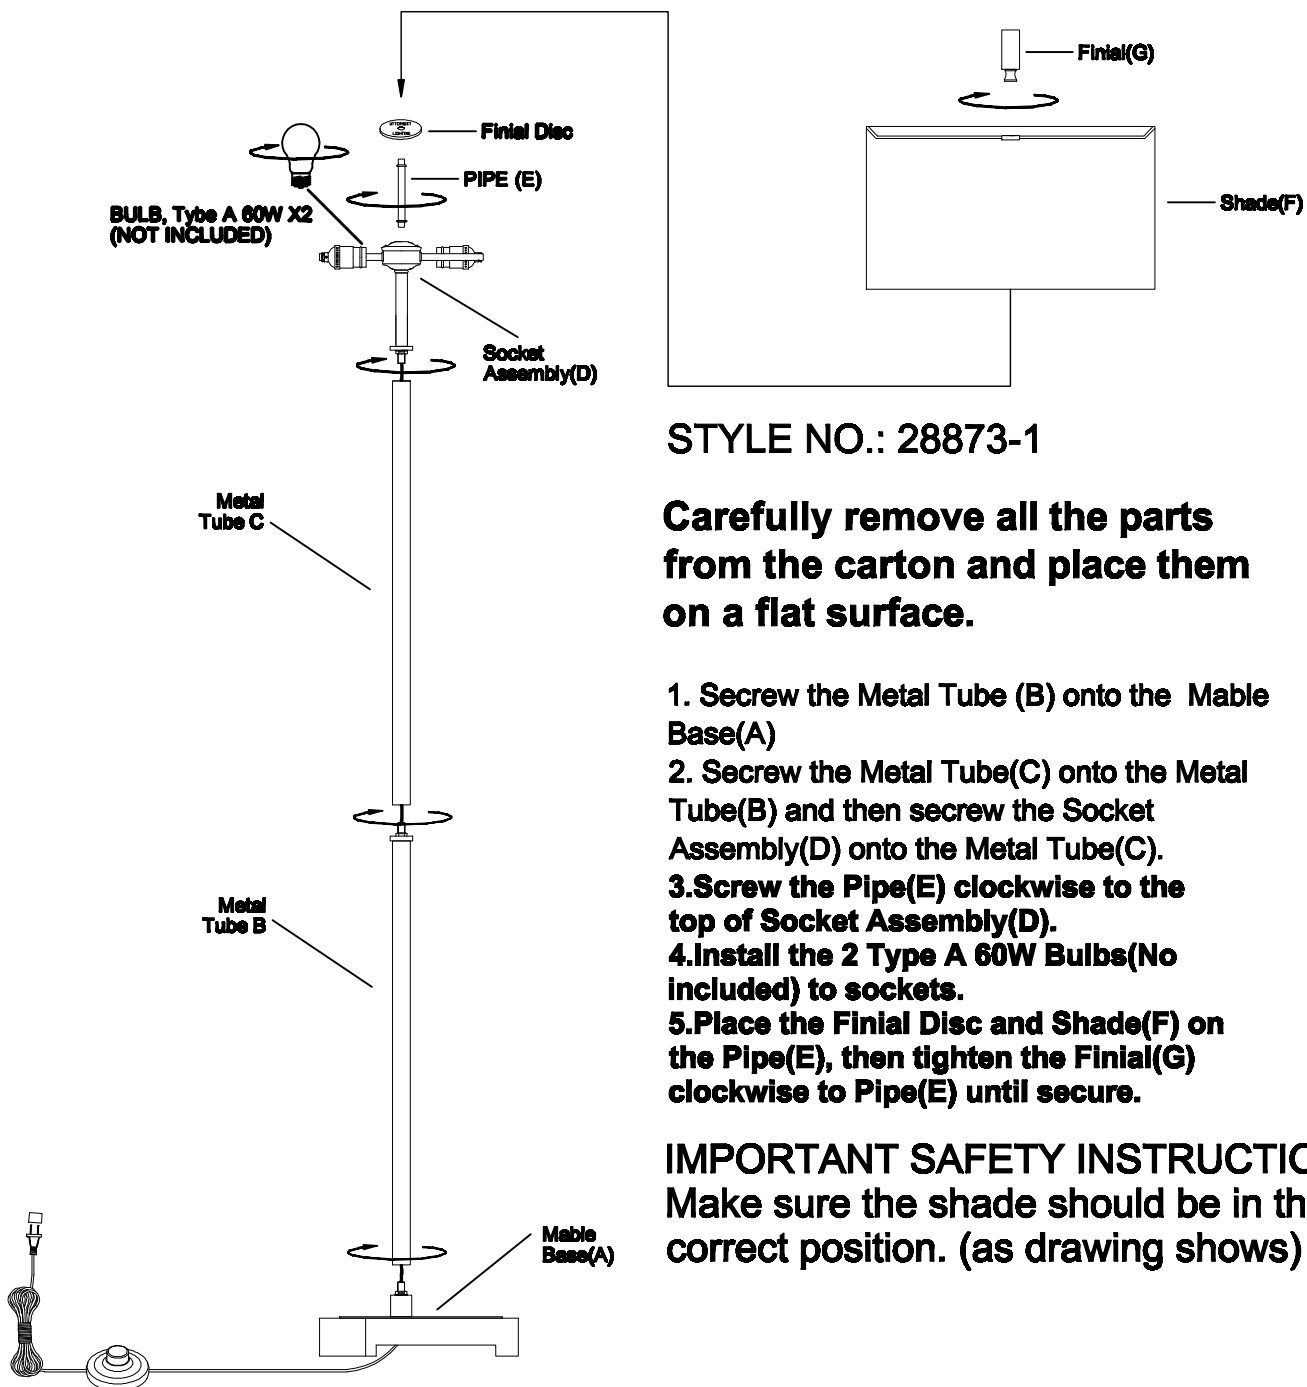

STYLE NO.: 28873-1

Carefully remove all the parts from the carton and place them on a flat surface.

1. Screw the Metal Tube (B) onto the Mable Base(A)
2. Screw the Metal Tube(C) onto the Metal Tube(B) and then screw the Socket Assembly(D) onto the Metal Tube(C).
3. Screw the Pipe(E) clockwise to the top of Socket Assembly(D).
4. Install the 2 Type A 60W Bulbs(No included) to sockets.
5. Place the Finial Disc and Shade(F) on the Pipe(E), then tighten the Finial(G) clockwise to Pipe(E) until secure.

IMPORTANT SAFETY INSTRUCTIONS:
 Make sure the shade should be in the correct position. (as drawing shows)