



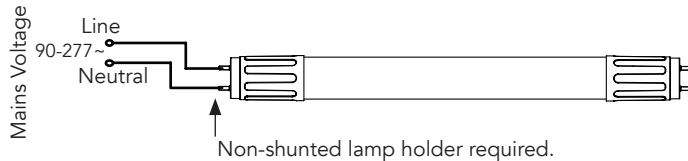

**READ FOLLOWING INSTRUCTIONS PRIOR TO INSTALLING THE KOBI LED T8 REWIRE TO ENSURE SAFETY AND PROPER OPERATION**

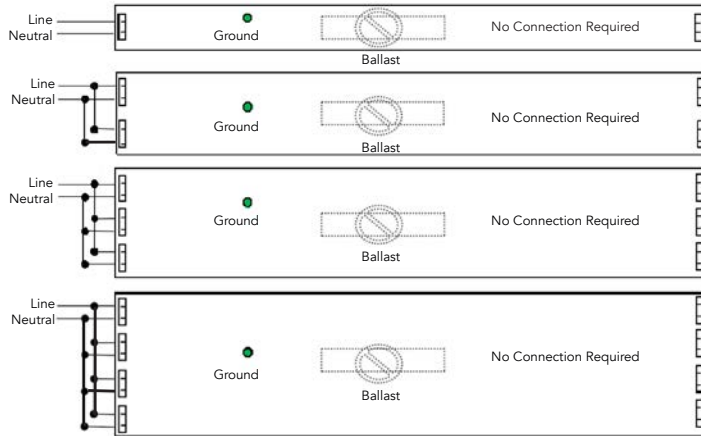

### Important Safety Notices:

1. In order to perform the installation, we recommend you contact a licensed electrician who will follow the NEC code, as well as local electrical codes.
2. Existing fluorescent tubes contain hazardous substances. Do not break the tubes. Safety glasses and gloves are recommended.
3. Never attempt to disassemble the Kobi Electric LED T8 Rewire. The product has no serviceable parts inside.

### Instructions

1. Turn off the circuit breaker and AC switch before working on the light.
2. If necessary, remove the cover from the light fixture according to the manufacturer's instructions.
3. Carefully remove the old glass tubes and dispose of them according to federal, state, and local laws.
4. Ensure the light fixture is designed to accommodate a bi-pin fluorescent tube before installing the Kobi Electric LED T8 Rewire. The Kobi Electric LED T8 Rewire is compatible with light fixtures designed for T8 and T12 diameter tubes.
5. Ensure that the fixture is not an emergency battery supplied fixture. If it is an emergency battery supplied fixture, disconnect the battery.
6. Remove the ballast.
7. Install the Kobi Electric T8 LED in the light fixture. Ensure that the tubes are seated firmly.
8. Put the cover back on the fixture according to the manufacturer's instructions.
9. Turn on the circuit breaker and AC switch.
10. Turn on the ON / OFF switch to verify proper operation.