


## ILB-CP WITH TBTS TEST ACCESSORY

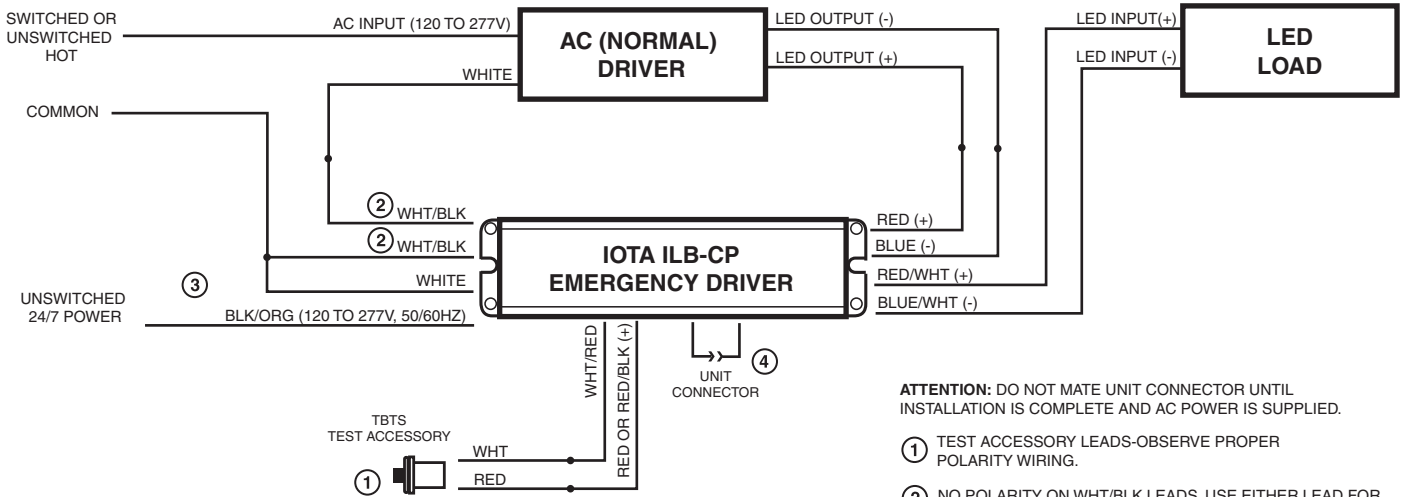

**ATTENTION:** DO NOT MATE UNIT CONNECTOR UNTIL INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED.

- ① TEST ACCESSORY LEADS-OBSERVE PROPER POLARITY WIRING.
- ② NO POLARITY ON WHT/BLK LEADS. USE EITHER LEAD FOR CONNECTION TO BUILDING COMMON (SWITCHED OR UNSWITCHED) AND OTHER FOR CONNECTION TO AC DRIVER.
- ③ CONNECT UNSWITCHED POWER. IF A SINGLE BUILDING COMMON IS PRESENT, CONNECT THE WHITE WIRE TO THE COMMON. IF A SEPERATE UNSWITCHED CONDUCTOR FEED IS PRESENT, CONNECT THE WHITE LEAD TO THE COMMON FROM THE UNSWITCHED FEED.
- ④ MATE UNIT CONNECTOR AFTER INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED

ILBCP\_TBTS.EPS

## NOTES