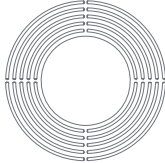
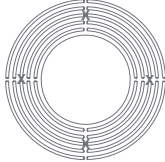
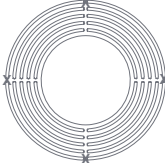


NEW CONSTRUCTION PLATE INSTALLATION GUIDE – WARNING

WARNING – Read all product labels and instructions before installing fixture.
WARNING – Wear safety gloves and other appropriate safety equipment.

DOWNLIGHT COMPATIBILITY & CIRCULAR KNOCKOUT (CKO) SIZING

Compatible Products	Circular Knockout (CKO) Instructions
<p>THINFIT 4" 8.5DLNC4DIM/xxx</p> <p>INNOFIT 4" 14CDLA4/xxx/277V</p>	 <p>Keep all CKOs</p>
<p>THINFIT 6" 11.6DLNC6DIM/xxx</p> <p>INNOFIT 6" 21CDLA6/xxx/277V</p>	 <p>Remove CKOs #1, #2 & #3</p>
<p>INNOFIT 8" 27CDLA8/xxx/277V</p>	 <p>Remove all CKOs</p>

Where xxx means 818-965 which indicates CRI and color Temperature

NEW CONSTRUCTION PLATE DRYWALL INSTALLATION

- Using cutting pliers, remove any CKO sections necessary to install the downlight. (fig. 1)
- Nail or screw the NCPLATE to the ceiling's studs/joists. Note NCPLATE allows a maximum spacing of 24". (fig. 2)
- Make appropriate electrical connection if required.
- Follow appropriate downlight installation instruction to complete the installation. (fig. 3 & 4)

fig. 1

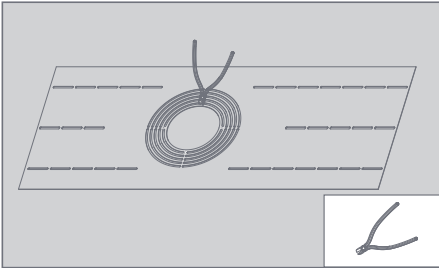


fig. 2

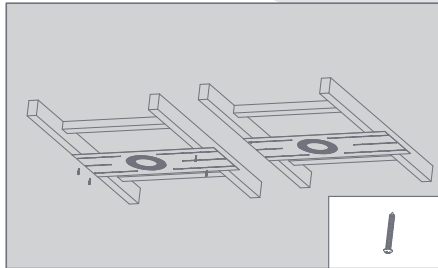


fig. 3


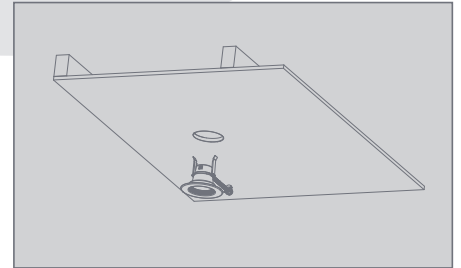


fig. 4

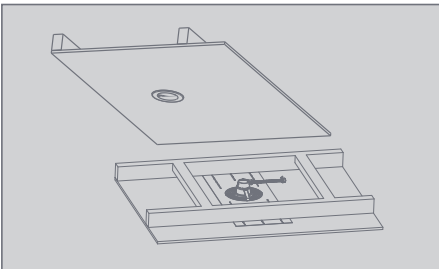

NEW CONSTRUCTION PLATE T-GRID INSTALLATION

1. Using cutting pliers, remove any CKO sections necessary to install the downlight. (fig. 1)
2. Place the NCPLATE/T on top of the T-Grid tile where the downlight will be installed. Screw the NCPLATE/T to the sides of the T-Grid through the plate's flange holes. (fig. 2)
3. Once the plate is attached to the T-Grid, cut a hole in the tile following the inside of the selected CKO. (fig. 3)
4. Follow appropriate downlight installation instruction to complete the installation. (fig. 4 & 5)

fig. 1

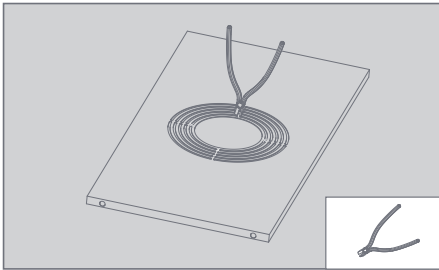


fig. 2

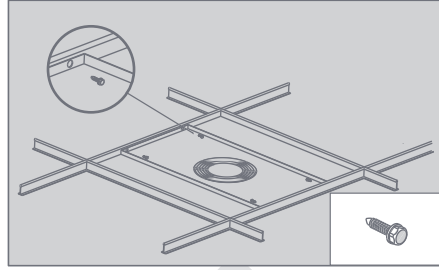


fig. 3

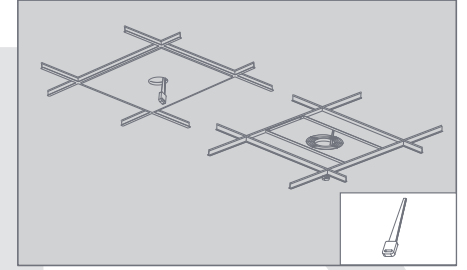


fig. 4

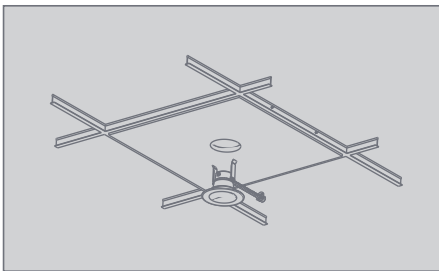


fig. 5

