


INSTALLATION INSTRUCTIONS FOR THE FLUORESCENT RB RETROFIT KIT

APPLICATION: Retrofit Lighting


Installation Instructions: 4RB, 8RB

- 1- Turn off power
- 2- Remove Kit from box and check parts list
- 3- Remove T12 ballast/wireway cover from existing strip fixture
- 4- Remove T12 lampholders and socket bars from existing strip housing
- 5- Remove ballast
- 6- Place 4RB or 8RB T8 board and ballast wireway cover to side of appropriate existing 4' or 8' channel
- 7- Attach existing black power line wire to black port in luminaire disconnect from driver
 - a. Must use 18-22 AWG Solid Wire or 16-12 AWG stranded < 19 Strands per pole
- 8- Attach existing white power line wire to white port in luminaire disconnect from driver
 - a. Must use 18-22 AWG Solid Wire or 16-12 AWG stranded < 19 Strands per pole
- 9- Attach green ground wire to green ground screw on existing channel
- 10- Place 4RB or 8RB T8 board and wired driver wirecover on appropriate existing 4' or 8' channel
- 11- Install supplied screw(s) in slot(s) on both ends and each side of new wireway cover into side of existing channel. For 8' channel also install screw(s) in center side slots
- 12- Turn on power

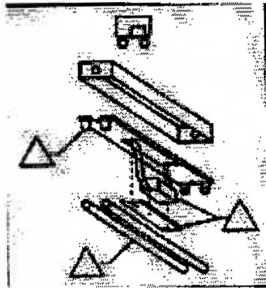


Strips Ballast Retrofit Kit

48 in. Ballast retrofit

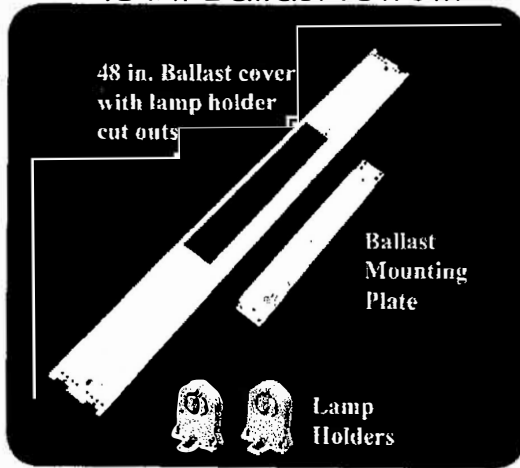


96 in. Ballast retrofit

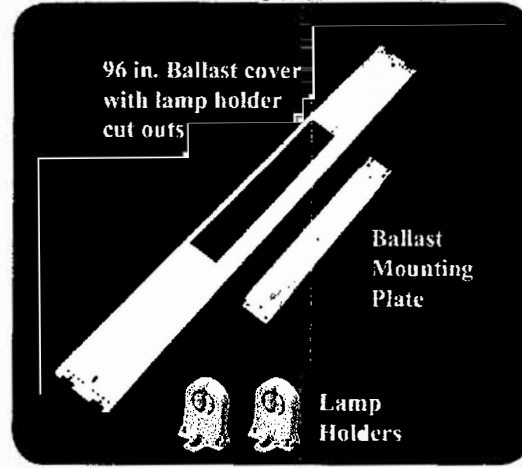


48in 2T12 to 2T8 Strip Retrofit Installation 4-1/4" or 5" Wide Strips

Before

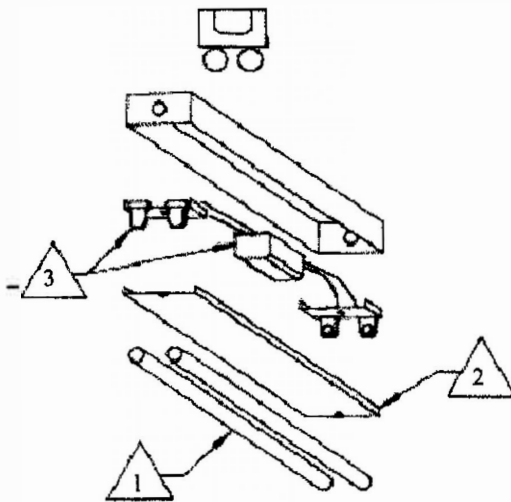

After

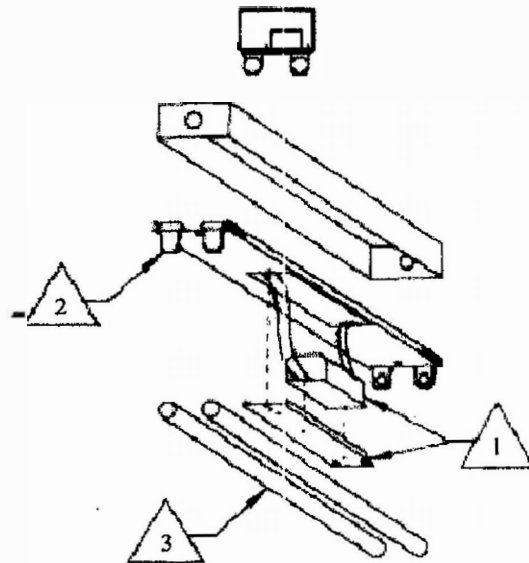

1. Remove existing T12 lamps.
2. Remove ballast cover.
3. Remove existing ballast, socket bar and lampholders

1. Install ballast to access plate with hardware provided. Install access plate to ballast cover with tek screw provided
2. Install new T8 lampholders into ballast cover and wire the ballast. Install ballast cover to fixture with tek screws provided
3. Install new T8 lamps.