

# PLT Installation Instructions

The retrofit kit includes an LED Lamp, an installation instruction and a Field-applied Label. Please check these items when unpackaging.

The units covered in this report are intended to retrofit Type IC or Non-IC covered ceiling recessed luminaire with through-branch wiring marked "Max. 8 of 12 AWG conductors" with instructions to remove the existing trim and diffuser.

## WARNING

**WARNING** - Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

**WARNING** - Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.

Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

**WARNING** - To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

Installers should not disconnect existing wires from lampholder terminals to make new connections at lampholder terminals. Instead installers should cut existing lampholder leads away from the lampholder and make new electrical connections to lampholder lead wires by employing applicable connectors.

"MIN. LAMP COMPARTMENT DIMENSIONS 163(DIA) X 185(H) mm" or "MIN.

LAMP COMPARTMENT DIMENSIONS 141(DIA) X 195(H) mm"

"DRY LOCATIONS ONLY" or "SUITABLE FOR DAMP LOCATIONS.

Or "SUITABLE FOR WET LOCATIONS"

**WARNING** -Risk of fire or electric shock. Do not alter, relocate, or remove wiring, lampholders, power supply, or any other electrical component.

THE RETROFIT KIT IS ACCEPTED AS A COMPONENT OF A LUMINAIRE WHERE THE SUITABILITY OF THE COMBINATION SHALL BE DETERMINED BY AUTHORITIES HAVING JURISDICTION.


THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS.

## Electrical parameters:


Model No.	Input Voltage (V)	Input Frequency (Hz)	Input Current (A)	Input Watts(W)
PLT-11656	120	60	0.085	10
PLT-11657	120	60	0.085	10
PLT-11658	120	60	0.085	10
PLT-11659	120	60	0.085	10
PLT-11660	120	60	0.130	14
PLT-11661	120	60	0.130	14
PLT-11662	120	60	0.130	14
PLT-11663	120	60	0.130	14

**Product size:**

**Unit: mm**

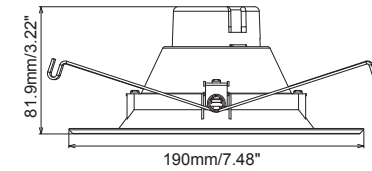

Dimension tolerance: ±1.5mm

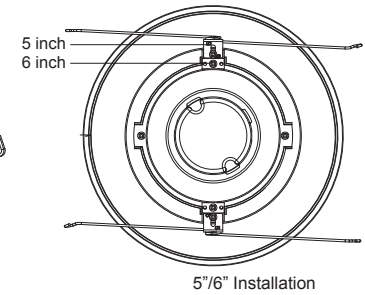

## Installation steps:


### STEP1:

Turn off the power before installation, Remove the diffuser existing bulb if necessary and remove the existing trim. Attach the relamping label to the inside of recessed luminaire housing.

### STEP2:

As shown in Figure 1

Twist the lamp base into the lamp holder.

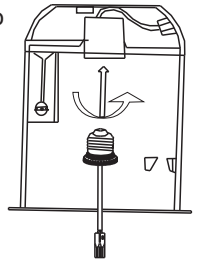


**Figure 1**

### STEP3:

As shown in Figure 2

Connect the lamp connector with lamp base connector.

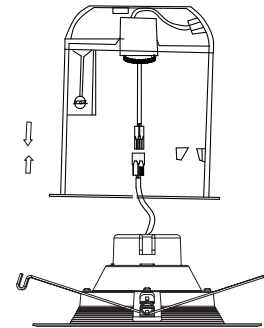


**Figure2**

### STEP4:

As shown in Figure 3

The lamp at both ends of the spring are arranged inside the lamp holder bayonet, (as shown in Figure 3) through the spring pressing on both sides, so that it can be on both sides of the bayonet.

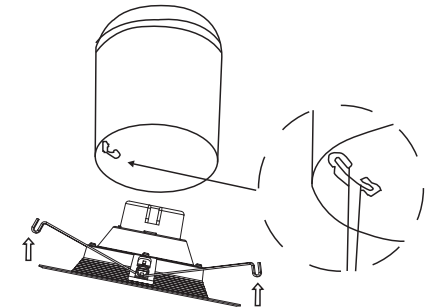


**Figure3**

### STEP5:

As shown in Figure 4

Push the LED retrofit trim into the recessed light fixture, allowing the torsion springs to pull the LED trim up into the recessed light fixture. Continue to push the LED trim until its outer edge is flush against the ceiling surface.

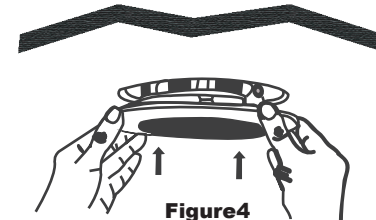

**Figure4**