

**CBT**

BACK-LIT LED TROFFER

NOTE: Components shown in images are representative only and may vary based on the configuration ordered.

**CAUTION**

Read instructions carefully and turn electricity off at main circuit breaker panel before beginning installation.

**WARNING**

If any special control devices are used with this luminaire, follow the instructions carefully to assure full compliance with NEC requirements. If there are any questions, contact a qualified electrical contractor.


**WARNING**

This product contains chemicals known to the State of California to cause cancer, birth defects and/or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.

**INSTALLATION METHOD 1: RECESSED MOUNTING**


**STEP 1**

Open access plate. Use knockouts to connect power using appropriately-sized electrical fittings.

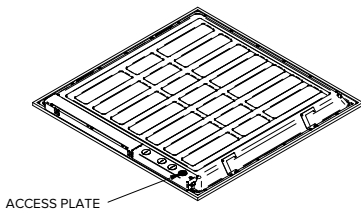


**STEP 2**

Set lumen output to desired level using lumen selector switch on gear tray.

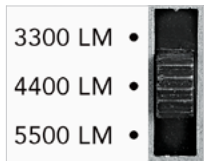


**STEP 3**

Raise unit into ceiling.

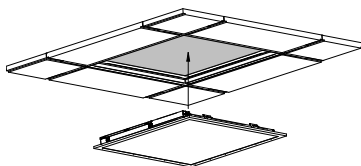


**STEP 4**

Make wiring connections.

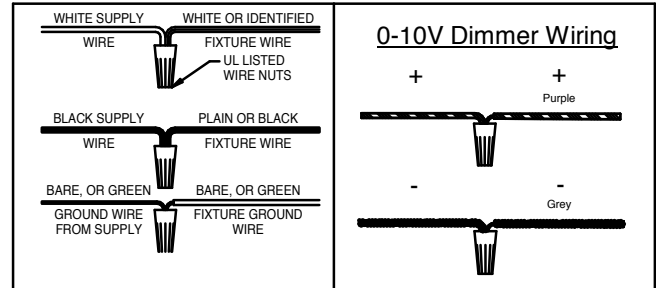

**STEP 5**

Bend T-bar clips into position.

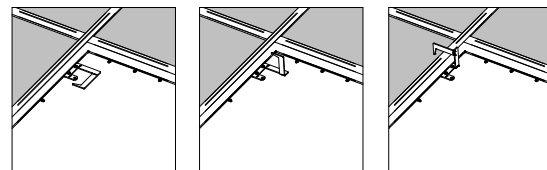


**CBT**

BACK-LIT LED TROFFER


**INSTALLATION METHOD 2: SURFACE MOUNTING**

**ACCESSORY PARTS**

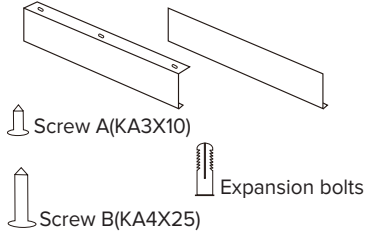


**STEP 1**

Assemble the four frames with screw A to a whole square.

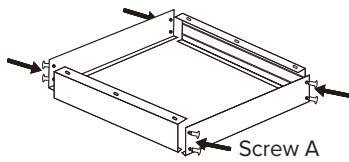


**STEP 2**

Fix the square frames to the ceiling with Screw B.

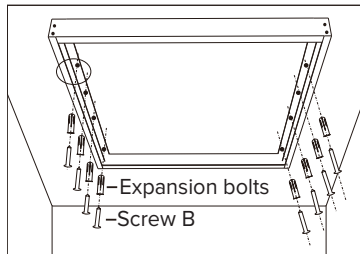


**STEP 3**

Demount one frame.

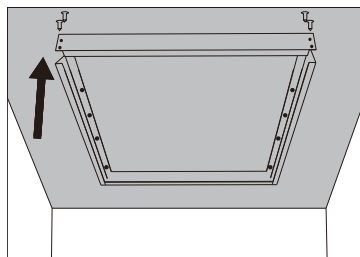

**STEP 4**

Put the panel into the frame square.

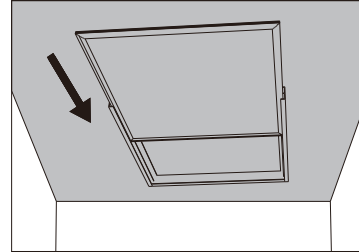

**STEP 5**

Fix the last frame with screw A.

