

Installation Instruction

Rev:A0


LED High Bay Retrofit Light Instructions

Do not use this LED High Bay Light in a dirty environment containing airborne sulphur, contaminants, or smoke.


Installation Instructions:

Warning: Please make sure the power is off before installation.


1. Turn off the power switch.
2. Unscrew the existing CFL, metal halide, or high pressure sodium bulb. See Figure 3 and 4
3. Screw in the LED High Bay Retrofit Light after removing or disconnecting any ballast, capacitor or ignitor that may be present. See Figure 1,3 and 4
4. Attach the provided security rope to the LED High Bay Retrofit Light and a nearby structural support. See Figure 2
5. Turn on the power switch.

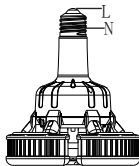


Figure(1)

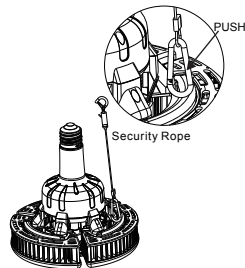

Figure(2)

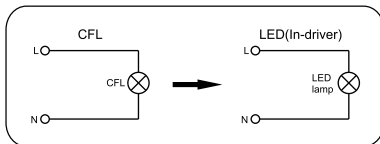

Figure(3)

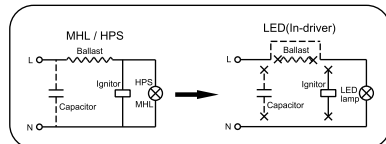

Figure(4)

WARNING:

**THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS
ADDED WEIGHT OF THE DEVICE MAY CAUSE INSTABILITY OF A
FREE-STANDING PORTABLE LUMINAIRE
USE ONLY WITH A PORTABLE TABLE LUMINAIRE THAT IS PROVIDED
WITH A SHADE**

AVERTISSEMENT:

**NE CONVIENT PAS AUX SORTIES DE SECOURS
LE DISPOSITIF CONSTITUE UN POIDS SUPPLÉMENTAIRE CE QUI PEUT
CAUSER L'INSTABILITÉ D'UN LUMINAIRE PORTATIF AUTONOME
UTILISER UNIQUEMENT AVEC UNE LAMPE DE TABLE DOTÉE D'UN
ABAT-JOUR**