

Single Pole (One location) or 3-Way (Multi-location)

Incandescent Slide Dimmer

Cat. No. IPIØ6-1L, 600W (Lighted) Cat. No. IPI10-1L, 1000W (Lighted) 120VAC, 60Hz



INSTALLATION INSTRUCTIONS

WARNINGS:

- To be installed and/or used in accordance with appropriate electrical codes and regulations.
- · If you are unsure about any part of these instructions, consult a qualified electrician.
- To avoid overheating and possible damage to this device and other equipment, do not install to control a receptacle, fluorescent lighting, a motor- or a transformer-operated appliance.
- · Use with incandescent or 120V halogen fixtures only.

CAUTIONS:

- Use only one (1) dimmer in a 3- or 4-way circuit. The switch(es) will turn the light on at the brightness level selected at the dimmer.
- Disconnect power at circuit breaker or fuse when servicing fixture.
- · Use this device only with copper or copper clad wire. With aluminum wire use only devices marked CO/ALR or CU/AL.

Tools needed to install your Dimmer:

Slotted/Phillips Screwdriver Pliers Cutters


Electrical Tape Pencil Ruler

Color Change Option:

If a color change kit is provided with your device, proceed with the following step if you need to change the color. Otherwise, proceed with the "Installing Dimmer by itself or with other devices" section.

Changing the color of your Dimmer

Your Dimmer includes color options. To change color of frame, proceed as follows:

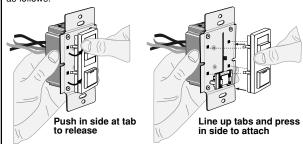


Move the slider up or down one full cycle to automatically engage the slider control mechanism.

Installing Dimmer by itself or with other devices:


If installing Dimmer in a single device application, proceed with the INSTALLING YOUR DIMMER section. If installing Dimmer in a multidevice application, proceed as follows:

MULTI-DEVICE APPLICATION

NOTE: You only need to remove side sections if installing with other dimmers or if it does not fit in wall box - not when installing with



forth to remove side section



When installing more than one dimmer in the same location, the side sections of the mounting strap must be removed. Use pliers to carefully bend side sections back and forth until they break off. The side sections dissipate heat, so removing them requires a derating of the dimmer's capacity (refer to chart).


| MAXIMUM LOAD PER DIMMER FOR MULTI-DEVICE | | | |
|--|--------|-------------|---------------------|
| Cat. No. | Single | Two Devices | More than 2 Devices |
| IPIØ6-1L | 600W | 500W | 400W |
| IPI1Ø-1L | 1000W | 800W | 700W |


INSTALLING YOUR DIMMER

NOTE: Use check boxes $\sqrt{}$ when Steps are completed.



WARNING: To avoid fire, shock, or death: TURN OFF POWER at circuit breaker or fuse and test that power is off before wiring!








Removing existing switch: Remove existing wallplate and switch mounting screws. Carefully pull switch from wall box. DO NOT remove wires attached to the switch at this time.



Identifying your wiring application (most common):

NOTE: If the wiring in the wall box does not resemble any of these configurations, consult a qualified electrician.



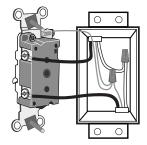


Single-Pole:

Press in slot and

pull out wire

Look at the back of your switch. If there are 2 wires connected to two screw terminals (not including a green or bare copper wire used for grounding), you have a Single-Pole switch.

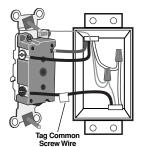


3-Wav:

Look at the back of your switch. If there are 3 wires connected to three screw terminals (not including a green or bare copper wire used for grounding), you have a 3-Way switch. Note that one of the screw terminals will usually be a different color (black) or labeled Common. Tag that wire with electrical tape to


Disconnecting switch wires and preparing wires:

- · Disconnect wires from screw terminals or Quickwire™ slots (shown). · Pull off pre-cut insulation from Dimmer leads.
- · Make sure that the ends of the wires from the wall box are straight (cut if necessary).
- Remove 5/8" (1.6 cm) of insulation from each wire in the wall box (shown).
- For Single-Pole Application, go to Step 5A.
- · For 3-Way Application, go to Step 5B.



Step 5a Single-Pole Wiring Application:

This wire is used in 3-way installations only.
For single pole installations, do not remove this insulating label. Insert wires straight then twist clockwise




Connect wires per WIRING DIAGRAM as follows:

Screw wire nuts on clockwise making sure no bare conductors show below the wire connectors. Secure each connector with electrical tape.

- · Green dimmer Ground lead to Green or bare copper wire in wall box.
- · Black dimmer lead to any wall box wire removed from old switch.
- · Red dimmer lead without insulating label to remaining wall box wire.
- · Remaining Red dimmer lead should have Red insulation label affixed.

NOTE: If insulating label is not affixed to Red lead, use a small wire nut or electrical tape to cap off. Proceed to Step 6.

Step 5b 3-Way Wiring Application:

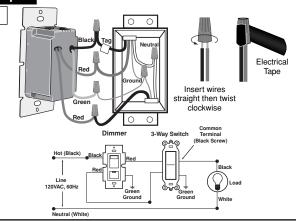


Connect wires per WIRING DIAGRAM as follows:

Screw wire nuts on clockwise making sure no bare conductors show below the wire connectors. Secure each connector with electrical tape.

- Green dimmer Ground lead to Green or bare copper wire in wall box.
- · Black dimmer lead to tagged (common) wall box wire identified when removing old switch.
- Remove Red insulating label from Red lead.
- Any Red dimmer lead to any of the remaining wall box wires.
- · Remaining Red dimmer lead to remaining wall box wire.


Step 6 Testing your Dimmer prior to mounting in wall

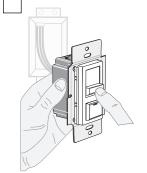

- · Restore power at circuit breaker or
- · Carefully holding Dimmer as shown, move slider control lever to highest position. Lights should turn ON to brightest level. If lights do not turn ON, depress push-button switch once. Lights should turn ON to brightest level.

If lights still do not turn ON, refer to the TROUBLESHOOTING section.

Minimum Brightness Adjustment: Step 7

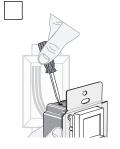

This Dimmer incorporates a minimum brightness adjustment that allows you to set the level of light when the slider control lever is in the lowest position.

Move slider to the lowest position. Using a small, insulated screwdriver, rotate the adjustment screw as shown until the desired level of minimum brightness is obtained.

Dimmer Mounting: Step 8

TURN OFF POWER AT CIRCUIT BREAKER OR FUSE.



Installation may now be completed by carefully positioning all wires to provide room in wall box for dimmer. Mount dimmer into box with mounting screws supplied. Attach wallplate.



Step 9 Restore Power: Restore power at circuit breaker or fuse. Installation is complete.

OPERATION

NOTE: The indicator light will illuminate when the dimmer is in the OFF position to facilitate access in the dark.

NOTE: If using the dimmer in a 3-way application, the lights will turn ON at brightness set on dimmer's slide control lever. The lighting level can be controlled from either the dimmer or the switch location.



ON/OFF:

Depress push-button switch to ON position - Lights will turn ON.

Depress push-button switch to OFF position - Lights will turn OFF.

BRIGHTEN & DIM:

Move slider control lever - Lights will BRIGHTEN or DIM.

TROUBLESHOOTING

- · Lights Flickering
 - Lamp has a bad connection.
 - Wires not secured firmly with wire connectors.
- · Light does not turn ON and ON/OFF LED does not turn ON
 - Circuit breaker or fuse has tripped.
 - Lamp is burned out.
 - Lamp Neutral connection is not wired.

NOTE: If further information is needed in identifying the HOT wire in a 3-Way application, go to Leviton's website at www.leviton.com.

For non-standard wiring applications, refer to Wire Nut and Conductor Size Chart

WIRE NUT / # OF COND. **COMBINATION CHART**

- 1- #12 w/ 1 to 3 #14. #16 or #18
- 2- #12 w/ 1 or 2 #16 or #18
- 1- #14 w/ 1 to 4 #16 or #18
- 2- #14 w/ 1 to 3 #16 or #18

PRODUCT INFORMATION

- For technical assistance, contact us at 1-800-824-3005
- Visit our website at www.leviton.com

LIMITED 5 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for five years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option, if within such five year period the product is returned prepaid, with proof of purchase date, and a description of the problem to Leviton Manufacturing Co., Inc., Att: Quality Assurance Department, 59-25 Little Neck Parkway, Little Neck, New York 11362-2591. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. There are no other or implied warranties of any kind, including merchantability and fitness for a particular purpose, but if any implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty, including merchantability and fitness for a particular purpose, is limited to five years. Leviton is not liable for incidental, indirect, special, or consequential damages, including without llimitation, damage to, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation. The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.