INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS



IMPORTANT:

The battery in this unit may not be fully charged. After electricity is connected to the unit for at least 24 hours, then normal operation of this unit should take effect. To check, press the "TEST" button. The LED lamps on the unit should turn on.

In accordance with NFPA 101, your emergency lighting system must be tested monthly for a minimum of 30 seconds and annually for 90 minutes. Refer to your local codes for any additional requirements that may apply.

When re-lamping, use only LED lamps specified in the fixture, using other lamp types may result in damage or unsafe conditions.

Note: Product complies with California Title 20. Product label is marked with (BC

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Do not use outdoors.
- Equipment should be mounted in locations and at heights where it will not be subject to tampering by unauthorized personnel.
- Do not mount near gas or electric heaters.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Do not use this equipment for anything other than its intended use.
- · Servicing of this equipment should be performed by qualified personnel.
- Disconnect AC power before servicing.


NOTE: Max mounting height is 8 ft to achieve at least 1 ft-candle of illuminance in emergency mode

J-BOX INSTALLATION (j-box not provided):

- 1. Before starting installation, make sure that AC power is turned OFF.
- 2. Remove unit's backplate by pushing through the two tabs at the bottom using a narrow screwdriver.
- 3. Ensure fixture leads are fed through back plate and connect to AC power leads coming into the junction box.
- 4. For 120V, connect the BLACK lead to HOT of the power supply and for 230V or 277V connect the RED lead. Connect the WHITE lead to NEUTRAL of the supply. Use a wirenut to cap off the unused lead.
- 5. When applicable, make wiring connections to the appropriate lamp heads using the YELLOW (+) and BLUE (-) remote leads on the charger board. Use wirenut(s) to cap off any unused remote lamp head lead(s).
- 6. Mount back plate on J-Box and secure with screws.
- 7. Connect battery only after continuous AC power can be provided to the unit.
- 8. Align tabs and push housing directly onto the backplate. Apply continuous AC power.

WALL/CEILING MOUNT INSTALLATION

- 1. Before starting installation, make sure that AC power is turned OFF.
- 2. Remove unit's backplate by pushing through the two tabs at the bottom using a narrow screwdriver.
- 3. Secure backplate to wall surface using keyhole knockouts on the back.
- 4. Ensure fixture leads are fed through back plate and connect to AC power leads. For 120V, connect the BLACK lead to HOT of the power supply and for 230V or 277V connect the RED lead. Connect the WHITE lead to NEUTRAL of the supply. Use a wirenut to cap off the unused lead.
- 5. When applicable, make wiring connections to the appropriate lamp heads using the YELLOW (+) and BLUE (-) remote leads on the charger board. Use wirenut(s) to cap off any unused remote lamp head lead(s).
- 6. Connect battery only after continuous AC power can be provided to the unit.
- 7. Align tabs and push housing directly onto the backplate. Apply continuous AC power.

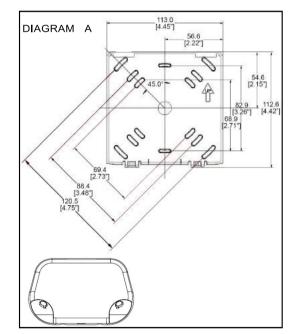

SAVE THESE INSTRUCTIONS and deliver to owner after installation

OPERATION

- 1. During an electrical power failure, the LED lamps will automatically come on for a minimum of 90 minutes.
- 2. To test, press the "TEST" switch. The emergency LED lamps will illuminate. When the switch is released, the lamps will go off.

LED STATUS INDICATOR KEY and TROUBLESHOOTING

Indication	Troubleshooting/Actions to Take
 Battery connection is not made. Battery has been diagnosed as dead or defective after 24 hours of continuous charging with AC power supplied. 	 Make connection; or if battery is connected, disconnect battery for eight seconds and then reconnect. Replace the battery.
Battery is connected, AC power has been supplied and fixture is in charging state.	This is the normal state. No action required.
AC power has not been supplied.	Supply AC power.
	 Battery connection is not made. Battery has been diagnosed as dead or defective after 24 hours of continuous charging with AC power supplied. Battery is connected, AC power has been supplied and fixture is in charging state.

WARNING

Caution: Always turn off AC power to the equipment before servicing. Servicing should be performed only by a qualified service technician. Use only MANUFACTURER supplied replacement parts.

Battery: The battery supplied with this unit requires no maintenance. However, it should be tested periodically and replaced when it no longer operates the lamp heads for the duration of 90 minutes.

The battery in this unit has a life expectancy of up to 4 years when used in a normal ambient temperature of 72°F.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS: When using electrical equipment, always adhere to basic safety precautions including the following :

WIRING DIAGRAMS

Note:

Unused input lead must be properly insulated with wire nut or other approved method.

