IESNA LM79-2008 Test Report



TÜV SÜD America

Photometric Testing and Evaluation in Accordance with LM79-2008

Report Prepared for:

David Delgado

Applications Engineer

Maxlite Inc.

1148 Ocean Circle Anaheim, CA 92806 United States

Telephone: (714) 678-5019

Sample Tested: Sample Description: Manufacturer:

Technical Report Number: Report Issue Date: Total Number of Pages:

Report Prepared by:

Supel Erans It

Byrd Evans TÜV SÜD Project Handler

L10T8SE341 10W 3-FT LED T8 4100K (LED Lamp) Maxlite, Inc.

Ji1409413-02-LM79 October 6th, 2014

8 (including this page)

Report Reviewed by:

Bryan Cubitt TÜV SÜD Program Manager



TÜV SÜD America is accredited under the NVLAP EEL program.

Telephone: 678-341-5900 www.tuvamerica.com

TÜV SÜD America, Inc.

Alpharetta GA 30005

5945 Cabot Parkway, Suite 100,

Page 1

NRG_F_10.04
Confidential Report





October 06, 2014

Summary of Key Test Results

Model# L10T8SE341

Manufacturer Maxlite Inc.

TÜV Sample# 1501-5

Date of Test October 1st, 2014

Notes: Tested in intended orientation (Lamp Base Horizontal - LBH)

Lamp end section shown in image:



Parameter	Measured Result
Luminous Flux	1,090 Lumens
Input Power	9.61 Watts
Efficacy	113.45 Lumens/Watt
C.C.T.	4153 K
C.R.I. (R _a)	82.7
Beam Angle	124.0° (V) / 99.9° (H)
Stabilization Time	30 minutes
In-Situ Temp Test (ISTMT) ^{**}	N/A

The above results are recorded / derived from measurements in accordance with LM79-08.

**ISTMT in accordance with "Energy Star Program Requirements for Luminaires – Version 1.2".

TÜV SÜD America, Inc. 5945 Cabot Parkway, Suite 100, Alpharetta GA 30005 Telephone: 678-341-5900 www.tuvamerica.com Page 2

NRG_F_10.04





TÜV SÜD America is accredited under the NVLAP EEL program.

NRG_F_10.04, Rev. 0, Effective: 2012-01-19





October 06, 2014

TABLE OF CONTENTS

Test Results	4
Spectral Flux and Chromaticity Diagram	5
Zonal Lumen Summary	
Iluminance Plots	6
Candela Plots	6
Photometric Testing Information	7
Equipment List:	8

Telephone: 678-341-5900 www.tuvamerica.com

Page 3

NRG_F_10.04

Confidential Report







October 06, 2014

Test Results –

The following results were obtained after stabilization of the sample in accordance with the requirements set forth in section 5.0 of IES LM79-2008. Stability is achieved when the variation of 3 readings of light output and electrical power over a period of 30 minutes, taken 15 minutes apart, is less than 0.5%.

Photometric Results	L10T8SE341
Photometric Results	Integrating Sphere
Total Luminous Flux (Lumens)	1,090
Luminous Efficacy (Lumens/Watt)	113.45
Total Radiant Flux (Watts)	3.26
Correlated Color Temperature (CCT)	4153
Color Rendering Index (CRI – R _a)	82.7
R ₉ Value	4.2
Chromaticity (Chroma x / Chroma y)	0.3741 / 0.3737
Chromaticity (Chroma u / Chroma v)	0.2222 / 0.3328
Chromaticity (Chroma u' / Chroma v')	0.2222 / 0.4993
Duv Value	0.00045

Electrical Results	L10T8SE341
(120V unless stated otherwise)	Integrating Sphere
Input Power (Watts)	9.61
Input Voltage (Volts AC)	120.01
Input Current (Amps)	0.081
Power Factor @120VAC	0.989
Input Frequency (Hertz)	60.0
A-THD @120VAC (Current %)	9.70%

Additional Parameters	L10T8SE341		
Autitional Parameters	Integrating Sphere	Goniophotometer	
Stabilization Time (Light and Power)	30 minutes	31 minutes	
Test Geometry Configuration	4π	Type C	
Ambient Temperature	25.2°C	24.8°C	
ISTMT (In-Situ Temperature Measurement)	N/A		
Spacing Criteria	1.32 (0° – 180°) / 1.18 (90° – 270°)		

Page 4

NRG_F_10.04

Confidential Report

TÜV SÜD America, Inc. 5945 Cabot Parkway, Suite 100, Alpharetta GA 30005

Telephone: 678-341-5900 www.tuvamerica.com

NRG_F_10.04, Rev. 0, Effective: 2012-01-19








October 06, 2014


Spectral Flux and Chromaticity Diagram

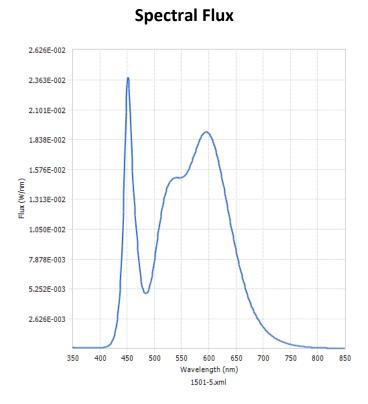

Spectral response of the Radiant Flux

(350nm to 850nm)

Chromaticity Diagram

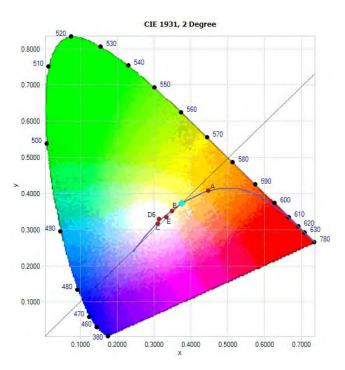

Tristimulus values (from page 4):

x / y = 0.3741 / 0.3737

The locations on the diagram of the tristimulus coordinates are indicated by the blue diamond.

Zonal Lumen Summary

unich Summary		
Zone	Lumens	% Lamp / Luminaire
0 - 60	672.2	66.6 %
60 - 90	256.7	25.4 %
0 - 90	928.9	92.1 %
90 - 180	79.7	7.9 %
0 - 180	1,008.6	100 %

Page 5

NRG_F_10.04

Confidential Report

TÜV SÜD America, Inc. 5945 Cabot Parkway, Suite 100, Alpharetta GA 30005

Telephone: 678-341-5900 www.tuvamerica.com

NRG_F_10.04, Rev. 0, Effective: 2012-01-19







October 06, 2014

Test Results – Illuminance Plots

The following images depict the illuminance characteristics of the luminaire.

	Illuminance at a Distance			
	Center Beam FC	FC Beam Width		
1.7ft —	109.80 fc	6.3ft	4.0ft	
3.3ft	27.45 fc	12.5ft	7.9ft	
5.0ft	12.20 fc	18.8ft	11.9ft	
6.7ft	6.86 fc	25.1ft	15.9ft	
8.3ft	4.39 fc	31.3ft	19.8ft	
10.0ft	3.05 fc	37.6ft	23.8ft	
Vert. Spread: 124.0° Horiz. Spread: 99.9°				

Illuminance at a Distance			
_	Center Beam FC	Field Width	
1.7ft-	109.80 fc	16.0ft	
3.3ft	27.45 fc	31.9ft	
5.0ft	12.20 fc	47.9ft	
6.7ft	6.86 fc	63.8ft	
8.3ft	4.39 fc	79.8ft	
10.0ft	3.05 fc	95.7ft	
Horiz. Spread: 156.4°			

Beam Angle = 124.0° (V) / 99.9° (H)


Field Angle = 156.4° (H)


Test Results – Candela Plots

The following images depict the luminous intensity distribution characteristics of the luminaire:

Page 6

NRG_F_10.04

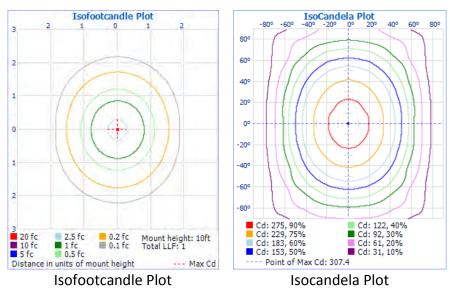

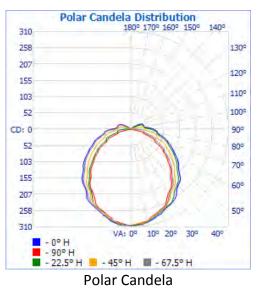

Maximum Candela = 307.4 at Horizontal: 67.5°, Vertical: 2.5°

TÜV SÜD America, Inc. 5945 Cabot Parkway, Suite 100, Alpharetta GA 30005

Telephone: 678-341-5900 www.tuvamerica.com

vamerica.com Confidential Report







October 06, 2014

TÜV SÜD Photometric Testing Information

Testing is performed in accordance with the procedures outlined in IESNA LM79-2008. The sample is evaluated for photometric and electrical characteristics using an integrating sphere and a goniophotometer, located in an accredited, temperature and humidity-controlled, draft free photometric laboratory.

Sphere Geometry

The integrating spheres used for measurement utilize a " 4π geometry" configuration in accordance with section 9 of IES LM-79-2008 and is applicable for all types of SSL products (directional and non-directional light projections). The spectroradiometer is an array-type detector manufactured and calibrated by Labsphere (Model# CDS1100).

Self-Absorption Correction

The integrating sphere uses self-absorption correction to eliminate errors due to mismatches between the standard reference lamp and the test samples being measured. This auxiliary correction lamp is a halogen type lamp powered by a calibrated Lamp Power Supply manufactured and calibrated by Labsphere (model LPS150). Ambient temperature is measured using a thermocouple located inside the integrating sphere at the same height as the sample under test (UUT) and not more than 1 meter in horizontal distance away from the sample (section 2.2 of LM79-2008). The thermocouple is located behind a baffle in order to eliminate any direct optical radiation from the sample under test.

Sample Stabilization

The sample (UUT) is placed inside the integrating sphere and powered by a regulated and conditioned alternating or direct current supply. The stabilization times shown on the results pages of this report denote the time of the 3rd measurement (of the 3 consecutive readings) since this is the minimum time that the sample is assumed to have taken to reach stabilization in accordance with section 5.0 of LM79-2008.

Sphere Calibration

The integrating sphere is calibrated using a quartzline halogen lamp with the following specifications:

Manufacturer: EYE Lighting International Model# J94/JD28V75W Voltage = 28.0 Volts DC Wattage = 75.0 Watts Calibration Current = 2.679 Amperes Luminous Flux = 1685 Lumens Calibration Date = 2-17-2011 (calibrated by Labsphere – NIST traceable).

Continued.....


TÜV SÜD America, Inc. 5945 Cabot Parkway, Suite 100, Alpharetta GA 30005 Page 7

NRG_F_10.04 Confidential Report

Telephone: 678-341-5900 www.tuvamerica.com

NVLAP

Lab Code: 500065-0







October 06, 2014

TÜV SÜD Photometric Testing Information (continued)

Goniophotometer

The Goniophotometer is a Mirror based Type C optical measurement system in accordance with section 9.3.1 of IESNA LM79-2008.

Goniophotometer Calibration

The Goniophotometer is calibrated using a frosted tungsten filament FDS/DZE lamp with the following specifications:

Manufacturer: General Electric Part Number: CSB-110 Lamp Number: 112-A Voltage: 16.52 Volts DC Wattage: 150.0 Watts Calibration Current: 4.816 Amperes Luminous Intensity: 151.5 Candelas Calibration Date: 02-13-2011 (NIST traceable)

TÜV SÜD Test Equipment List:

TÜV SÜD Sphere System – contains the following:			
Description	Manufacturer / Model#	TÜV SÜD Ref#	Calibration Due Date
Integrating Sphere	Labsphere LM760	SPH004	weekly
Spectroradiometer	Labsphere CDS1100	ATLE0094	11/7/2014
Power Analyzer	Yokogawa WT210	ATLE0059	4/17/2015
Power Source	Chroma 61602	AC003	N/A
Thermometer	Fluke 52-II	ATLE0118	1/16/2015
Timer	Control Company 5009	ATLE0055	1/16/2015
TÜV SÜD Mirror Goniophotometer System – contains the following:			
Goniophotometer	M.E. GONC02	GON002	Weekly
Spectroradiometer	Gigahertz Optik P9801	GIG002	Weekly
Power Analyzer	Yokogawa WT210	ATLE0031	11/21/2014
Power Source	Chroma 61603	AC007	N/A

This technical report may only be quoted in full. Any use for advertising purposes must be granted in writing. This report is the result of a single examination of the object in question and is not generally applicable evaluation of the quality of other products in regular production.

This report must not be used by the client to claim product certification, approval, or endorsement by NVLAP, NIST, or any agency of the Federal Government

TÜV SÜD America, Inc. 5945 Cabot Parkway, Suite 100, Alpharetta GA 30005

Telephone: 678-341-5900 www.tuvamerica.com

Page 8 NRG_F_10.04

Confidential Report



TÜV SÜD America is accredited under the NVLAP EEL program.

Lab Code: 500065-0

NRG_F_10.04, Rev. 0, Effective: 2012-01-19

