

P/N 030-1072

**Electronic Switch with Radio Frequency Receiver**

MRF2-8ANS-120 120 V~ 60 Hz 8 A Light / 1/4 HP (5.8 A) Motor (Single-Pole or Multi-Location)  
 MRF2-6ANS 120 V~ 60 Hz 6 A Light / 1/4 HP (3 A) Motor (Single-Pole or Multi-Location)  
 MRF2-6ANS-277 277 V~ 60 Hz 6 A Light (Single-Pole or Multi-Location)

**Companion Switch**

MA-AS 120 V~ 60 Hz 8.3 A MSC-AS 120 V~ 60 Hz 8.3 A (For use with MRF2-6ANS and MRF2-8ANS-120)  
 MA-AS-277 277 V~ 60 Hz 8.3 A MSC-AS-277 277 V~ 60 Hz 8.3 A (For use with MRF2-6ANS-277)

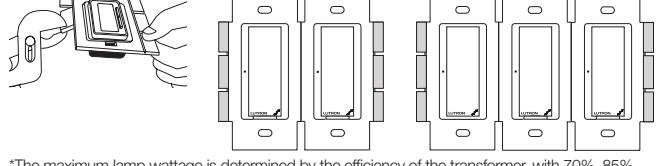
**Important Notes. Please read before installing.**

- CAUTION!** To reduce the risk of overheating and possible damage to other equipment, **DO NOT** use to control receptacles.
- Install in accordance with all national and local electrical codes.
- These electronic switches require a neutral wire for operation. If no neutral wire is present, contact a licensed electrician for installation. No neutral wire is necessary for the installation of the Companion Switch.
- When "no ground means" exist within the wallbox, then the NECe 2008, Article 409.4 allows a switch without a grounding connection to be installed as a replacement, as long as a plastic, noncombustible wallplate is used. For this type of installation, twist a wire connector onto the green ground wire or remove the green ground wire on the electronic switch and use an appropriate wallplate such as Claro® or Satin Colors® series wallplates by Lutron.
- Do not paint the Electronic Switches or the Companion Switches.
- The Electronic Switches are not compatible with standard 3-way or 4-way switches. Use only with Maestro® Companion Switches.
- In any 3-way/4-way circuit use only one Electronic Switch with up to 9 Companion Switches.
- DO NOT** use where the total load is greater than the rating indicated in the Derating Chart below.
- DO NOT** use where total load is less than 25 W.
- Operate between 32 °F (0 °C) and 104 °F (40 °C).
- Indoor use only.
- It is normal for the Electronic Switches to feel warm to the touch during operation.
- Recommended minimum wallbox depth is 2.5 in (64 mm).
- Maximum wire length between the Electronic Switch and the furthest Companion Switch is 250 ft (76 m).
- When controlling a combined fan and light load with the MRF2-6ANS or MRF2-8ANS-120 Electronic Switch, the total load may not exceed the general purpose fan rating. Refer to the Derating Chart below.
- Clean with a **soft damp cloth only**. Do not use any chemical cleaners.
- DO NOT** mix MRF and MRF2 lighting controls products within the same system. Products are **NOT compatible**, contact **Lutron Technical Support Center**.
- Controls must be mounted vertically. See stamp on control for correct positioning.
- DO NOT** wire while circuit breaker is on. Permanent damage to the Electronic Switch may result.
- Up to 10 Maestro Wireless controls can be configured to work together.

**Multigang Installations**

When installing more than one control in the same wallbox, the maximum load capacity is reduced. No derating is required for Companion Switches.

Refer to the Derating Chart below.



\*The maximum lamp wattage is determined by the efficiency of the transformer, with 70%-85% as typical. For actual transformer efficiency, contact either the fixture or transformer manufacturer. The total VA rating of the transformer(s) shall not exceed the VA rating of the switch.

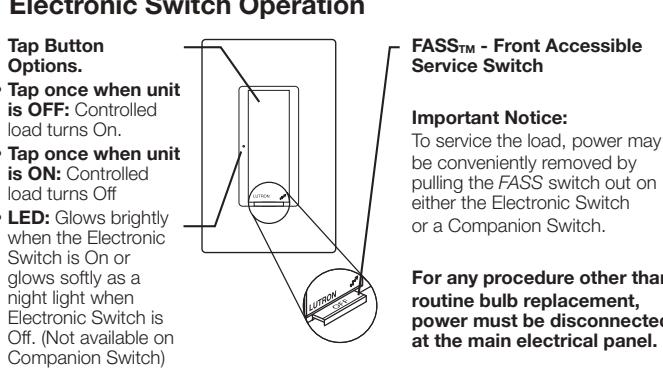
\*The Maestro Wireless Switch is UL® listed for use with all magnetic fluorescent ballasts.

Please contact **Lutron Technical Support Center** for a complete list of recommended electronic fluorescent ballasts.

The combined inrush of electronic fluorescent ballasts cannot exceed 90 A.

The continuous operating current must remain below the rating indicated in the Derating Chart.

Note: Not all models listed will have fins.

**Electronic Switch Operation****FASS™ - Front Accessible Service Switch**

**Important Notice:** To service the load, power may be conveniently removed by pulling the FASS switch out on either the Electronic Switch or a Companion Switch.

For any procedure other than routine bulb replacement, power must be disconnected at the main electrical panel.

**Set-Up**

**Important:** Set up Wireless Controller or Sensor to a Electronic Switch before use.

- Press and hold the Electronic Switch's Tap Button (Figure 1) for approximately 6 seconds. Once the LED starts to blink slowly, release the Tap Button and go to step 2.
- Press and hold the Off Button on the Wireless Controller (Figure 2) or Sensor (Figure 3) for approximately 6 seconds.
- Once the Electronic Switch learns the Wireless Controller or Sensor, its LED and load will flash 3 times and the Switch will exit Set-Up mode.
- Repeat steps 1–3 to set up multiple Wireless Controllers or Sensors to a single Electronic Switch. Repeat steps 1–3 to set up a single Wireless Controller or Sensor to multiple Electronic Switches.

**Technical Assistance**

For questions concerning the installation or operation of this product, call the **Lutron Technical Support Center**.

Please provide exact model number when calling.

**U.S.A. and Canada (24 hrs / 7days)**

1.800.523.9466

Fax +1.610.282.6311

Mexico 1.888.235.2910

Otros países 8am – 8pm (Hora del Este)

+1.610.282.3800 www.lutron.com

**Troubleshooting**

Symptoms	Possible Causes
Load does not turn on or LED does not light up.	<ul style="list-style-type: none"> <li>FASS switch on the Electronic Switch (or Companion Switch) is in the Off position.</li> <li>Light bulb(s) burned out.</li> <li>Breaker is OFF or tripped.</li> <li>Fan not turned on.</li> <li>Load not properly installed.</li> <li>Wiring error; Call Lutron Technical Support Center for help.</li> </ul>
Light does not respond to Radio Frequency Wireless Controller or Sensor.	<ul style="list-style-type: none"> <li>The Electronic Switch failed to learn Wireless Controller or Sensor, see <i>Set-Up</i>.</li> <li>The Electronic Switch has already received and responded to a command, or is already at the Light Setting the Wireless Controller or Sensor is using.</li> <li>The Wireless Controller or Sensor is outside the operating range.</li> <li>The Wireless Controller or Sensor batteries are low.</li> <li>The Wireless Controller or Sensor batteries are installed incorrectly.</li> </ul>
When in Set-Up mode the LED flashes when trying to setup with the Wireless Controller or Sensor.	<ul style="list-style-type: none"> <li>The maximum number of Wireless Controllers or Sensors have been set up to the Electronic Switch (you cannot add any more Wireless Controllers or Sensors). To remove a previous set-up Wireless Controller or Sensor tap the Wireless Controller or Sensor's On button three times, or the third tap hold for 3 seconds and then tap 3 more times. This will remove all Electronic Switches or Dimmers it was previously setup with.</li> </ul>
Light does not remain on, LED glows dimly or blinks.	<ul style="list-style-type: none"> <li>Blue screw terminal is miswired to neutral or touching ground.</li> </ul>

**FCC Information:**

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio and television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by Lutron Electronics Co. could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Limited Warranty**

(Valid only in U.S.A., Canada, Puerto Rico, and the Caribbean.)

Lutron will, at its option, repair or replace any unit that is defective in materials or manufacture within one year after purchase. For a limited warranty, see *Set-Up*.

**THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES, AND THE IMPLIED WARRANTY OF MERCHANTABILITY IS LIMITED TO ONE YEAR FROM PURCHASE. THIS WARRANTY DOES NOT COVER THE COST OF INSTALLATION, REMOVAL, OR REINSTALLATION, OR DAMAGE RESULTING FROM MISUSE, ABUSE, OR DAMAGE FROM IMPROPER WIRING OR INSTALLATION. THIS WARRANTY DOES NOT COVER INCIDENTAL OR CONSEQUENTIAL DAMAGES. LUTRON'S LIABILITY ON ANY CLAIM FOR DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE MANUFACTURE, SALE, INSTALLATION, DELIVERY, OR USE OF UNIT SHALL NEVER EXCEED THE PURCHASE PRICE OF THE UNIT.**

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. Some states do not allow limitations on implied warranties, so these limitations may not apply to you.

This product is covered under one or more of the following U.S. patents: 7,362,285; 7,365,282;

7,408,525; 7,548,216 and corresponding foreign patents. U.S. and foreign patent pending. Lutron, Claro, Maestro, Maestro Wireless, The Sunburst Logo and Satin Colors are registered trademarks and FASS is a trademark of Lutron Electronics Co., Inc. NEC is a registered trademark of National Fire Protection Association, Quincy, Massachusetts. © 2009 Lutron Electronics Co., Inc.

Made and printed in the U.S.A. 6/09 P/N 030-1072 Rev. B

P/N 030-1072

**Interruptor Electrónico con Receptor de Radiofrecuencia**

MRF2-8ANS-120 Luz de 120 V~ 60 Hz 8 A / Motor de 1/4 HP (5.8 A) (Unipolar o de ubicaciones múltiples)  
 MRF2-6ANS Luz de 120 V~ 60 Hz 6 A / Motor de 1/4 HP (3 A) (Unipolar o de ubicaciones múltiples)  
 MRF2-6ANS-277 Luz de 277 V~ 60 Hz 6 A (Unipolar o de ubicaciones múltiples)

**Interruptor Accesorio**

MA-AS 120 V~ 60 Hz 8.3 A MSC-AS 120 V~ 60 Hz 8.3 A (Para usar con MRF2-6ANS y MRF2-8ANS-120)

MA-AS-277 277 V~ 60 Hz 8.3 A MSC-AS-277 277 V~ 60 Hz 8.3 A (Para usar con MRF2-6ANS-277)

**Notas importantes. Por favor lea antes de instalar.**

- PRECAUCIÓN!** Para reducir el riesgo de sobrecalentamiento y posibles daños a otros equipos, **NO** los use para controlar tomas de corriente.
- La instalación se debe realizar de acuerdo con todas las reglamentaciones de los códigos eléctricos nacionales y locales.
- Los interruptores electrónicos requieren un cable neutro para su funcionamiento. Si no hay cable neutro presente, contacte a un electricista calificado para la instalación.
- No es necesario un cable neutro para la instalación del Interruptor Accesorio.
- Cuando dentro de la caja de empotrar no hay "medios de conexión a tierra" el artículo 404.9 de NECe 2008 permite la instalación de un interruptor sin conexión a tierra como reemplazo, siempre y cuando se utilice una placa plástica e incombustible. Para efectuar este tipo de instalación, enrosque un cable neutro al cable a tierra a tierra, o retire el cable verde del interruptor electrónico y use una placa adecuada como las de la serie Claro™ o Satin Colors™ de Lutron.
- No pinte los interruptores Electrónicos o los interruptores Accesorios.
- Los interruptores Electrónicos no son compatibles con interruptores estándar de 3 o 4 puntos. Use solamente con interruptores Maestro® Accesorio.
- En los circuitos de 3 o 4 vías utilice solamente un interruptor Electrónico con un máximo de 9 interruptores Accesorios.
- No use** donde la carga total sea mayor que la nominal indicada en la Tabla de Reducción de la Potencia Nominal a continuación.
- No use** cuando la carga total es menor al 25 W.
- Monte a una temperatura entre 0 °C (32 °F) y 40 °C (104 °F).
- Sólo para uso en interiores.
- Es normal que los interruptores Electrónicos se sientan calientes al tacto durante su funcionamiento.
- La preflamabilidad mínima recomendada de la caja de empotrar es 64 mm (2,5 pulgadas).
- El máximo largo de cable entre el Interruptor Electrónico y el Interruptor Accesorio más lejano es de 76 m (250 pies).
- Cuando controle una carga combinada de ventilador y luz con un interruptor Electrónico MRF2-6ANS o MRF2-8ANS-120, la carga total de la caja de empotrar debe ser menor que la nominal indicada en el Cuadro de Reducción de la Potencia Nominal.
- Reduzca el valor de la carga nominal en el interruptor.
- Los controles deben montarse verticalmente. Vea el grabado en el control para la posición correcta.
- No** use el cableado con el disyuntor conectado. El interruptor puede sufrir daños permanentes.
- Hasta 10 controles Maestro Wireless pueden ser configurados para funcionar en conjunto.

P/N 030-1072

**MSC-AS 120 V~ 60 Hz 8.3 A (Para usar con MRF2-6ANS y MRF2-8ANS-120)****MSC-AS-277 277 V~ 60 Hz 8.3 A (Para usar con MRF2-6ANS-277)****Notas importantes. Por favor lea antes de instalar.**

- ATTENTION!** Pour éviter tout risque de surchauffe et d'endommagement à d'autres équipements, **NE PAS** utiliser pour commander les prises de courant.
- Installer conformément à tous les codes d'électricité locaux et nationaux.
- L'interrupteur électrique requiert un fil de neutre pour fonctionner. Si un fil de neutre n'est pas présent, contacter un électricien certifié pour l'installation. Aucun fil de neutre n'est nécessaire pour l'installation de l'interrupteur Auxiliaire.
- En cas "d'absence de mise à la terre" dans la boîte murale, l'article 404.9 du code NECe 2008 permet l'installation d'un interrupteur sans raccordement à la terre pourvu qu'une plaque murale en plastique incombustible soit utilisée. Pour ce genre d'installation, visser un connecteur sur le fil de terre vert ou retirer le fil de terre vert de l'interrupteur électrique et utiliser une plaque murale adéquate, telles que les plaques de la série Claro™ ou les plaques murales de la série Satin Colors™ de Lutron.
- Ne pas peindre les interrupteurs Électriques ni les interrupteurs Auxiliaires.
- Les interrupteurs Électriques ne sont pas compatibles avec les interrupteurs réguliers à 3 ou 4-voies. Utiliser seulement avec les interrupteurs Auxiliaires Maestro™.
- Sur tout circuit à 3 ou 4 voies, utiliser un seul Interrupteur Électrique avec jusqu'à 9 interrupteurs Accesorios.
- Ne pas utiliser** là où la charge totale est supérieure à l'indice indiqué au Tableau de Déclassement ci-dessous.
- Ne pas utiliser** là où la charge totale est inférieure à 25 W.
- Fonctionne entre 0 °C (32 °F) et 40 °C (104 °F).
- Pour utilisation en intérieur seulement.
- Il est normal que l'Interrupteur Électrique soit chaud au toucher pendant le fonctionnement.
- La profondeur minimale recommandée de la boîte murale est de 64 mm (2,5 po).
- La longueur maximale du fil entre l'Interrupteur Électrique et l'Interrupteur Auxiliaire plus épaisse est de 76 m (250 pi).
- Lorsque l'on contrôle la charge combinée du ventilateur et de la lampe avec l'Interrupteur Électrique MRF2-6ANS ou MRF2-8ANS-120, la charge totale ne doit pas excéder la puissance maximale admissible pour le Ventilateur d'Usage Général.
- Nettoyage avec un lingé doux et humide. N'utiliser aucun nettoyant chimique.
- NE PAS** utiliser les produits de commande d'éclairage MRF et MRF2 à l'intérieur d'un même système. Ces produits **NE SONT PAS compatibles**, contactez le Centre de Support Technique de Lutron.
- Monter les contrôles à la verticale. Voir l'estampage du contrôle pour un positionnement exact.
- NE PAS** procéder au câblage si le disjoncteur n'est pas couplé (on). Des dommages permanents au gradateur peuvent en résulter.
- Jusqu'à 10 contrôles de Maestro Wireless peuvent être configurés à fonctionner ensemble.

P/N 030-1072

**Instalaciones con varios dispositivos**

Cuando instale más de un control en la misma caja de empotrar, se reduce la capacidad máxima de carga. No se requiere reducción de la potencia nominal para los interruptores Accesorios. Consulte el Cuadro de Reducción de la potencia nominal más abajo.

**Tabla de reducción de la potencia nominal**

Modelo	Tipo de carga	Dispositivo único	Fin de la agrupación	Mitad de la agrupación
MRF2-6ANS	I-Halógeno/Incandescente / Baja voltaje electrónico	720 W	600 W	450 W
	Baja voltaje magnético*	720 VA / 550 W	600 VA / 450 W	450 VA / 300 W
	Fluorescente**	6 A	5 A	3,5 A
	Ventilador para usos generales	1/10 HP (		

**Installation**

**1 Turning Power OFF**  
Turn power OFF at circuit breaker (or remove fuse).

**2 Removing Wallplate and Switch**  
Remove the wallplate and switch mounting screws. Carefully remove the switch from the wall (**do not remove the wires**).

**3 Identifying the Circuit Type and Tagging the Wire on the COMMON Terminal of the Switches**

**3a - Single Location Control**

**One switch controlling a light fixture:**  
This switch will be a single-pole. The switch will have insulated wires connected to two screws of the same color plus a green ground screw.

**3b - Two-Location Control**

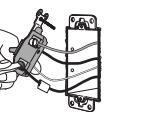
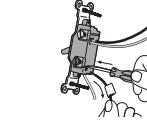
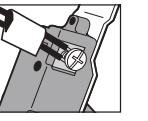
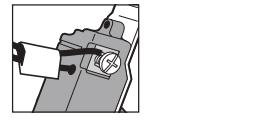
**Two switches controlling a light fixture:**  
Both switches will be 3-way. Each switch will have insulated wires connected to three screws plus a green ground screw. One of these wires is connected to a screw of a different color (not green) or labeled COMMON. Tag this wire on both switches to identify when rewiring.

**3c - Three or More-Location Control**

**Three or more switches controlling a light fixture:**  
Two switches will be 3-way and any others will be 4-way. Tag the two 3-way switches as in the Two-Location diagram above. The 4-way switch will have insulated wires connected to four screws plus a green ground screw. Tag the two same-color insulated wires that are connected to opposite colored screws. Follow this procedure for each 4-way switch.

**4 Disconnecting the Switch Wires**

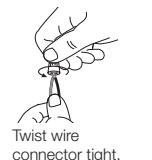
**Important Note:** The wall switch may have two wires attached to the same screw (see illustrations below for examples). Tape these two wires together before disconnecting. When rewiring, connect wires to the Dimmer the same way they were connected to the switch.

**5 Wiring**

When making wire connections, follow the recommended strip lengths and combinations for the supplied wire connector. **Note:** All wire connectors provided are suitable for **copper wire only**. For aluminum wire, consult an electrician.

Trim or strip wallbox wires to the length indicated by the strip gauge on the back of the Dimmer.

**Wire connector:**  
Use solid 14 AWG (1.5 mm<sup>2</sup>) or 12 AWG (2.5 mm<sup>2</sup>) ground wire to 18 AWG (0.75 mm<sup>2</sup>) Dimmer ground wire.



**Push-in terminals:**  
Insert wire fully.  
Note: Push-in terminals are for use with 14 AWG (1.5 mm<sup>2</sup>) **solid copper wire only**. DO NOT use stranded or twisted wire.



**Screw terminals:**  
Tighten securely.  
Note: Screw terminals are for use with 12 AWG (2.5 mm<sup>2</sup>) or 14 AWG (1.5 mm<sup>2</sup>) **solid copper wire only**. DO NOT use stranded or twisted wire.



**Twist wire connector right:**  
Insert wire fully.  
Note: Push-in terminals are for use with 14 AWG (1.5 mm<sup>2</sup>) **solid copper wire only**. DO NOT use stranded or twisted wire.

- For installations involving more than one control in a wallbox, refer to Multigang Installations before beginning.
- Use the screw or push-in terminals when making connections on the Dimmer or Companion Dimmer.
- Wire all controls before mounting.

**5a - Single-Location Control**

**Wiring the Switch:**  
• Connect the green ground wire on the Electronic Switch to the **bare copper or green** ground wire in the wallbox. (See Important Note 4 on other side.)  
• Connect the neutral wire in the wallbox to the **silver** screw terminal on the Electronic Switch.  
• If a **neutral wire is not available** in the wallbox, contact a licensed electrician for a **neutral wire extension**.  
• Connect one of the remaining wires to the **brass** screw terminal and the remaining wire to the **black** screw.  
• Tighten the blue screw terminal on the Electronic Switch.  
**The blue screw is not used in a single-pole circuit.**

**Note:** If the wires connected to the **black** and **brass** screws are reversed, the unit will not operate. It may be necessary to swap the connections to ensure that the **brass** screw is connected to the load.

**5b - Two-Location Control**

**Note:** The Switch must be installed on the load side of multi-location wiring.  
**Wiring the Switch on the load side:**  
• Connect the green ground wire on the Switch to the **bare copper or green** ground wire in the wallbox. See Important Note 5 on other side.  
• Connect the tagged wire removed from the switch in step 3b to the **brass** screw terminal on the Switch.  
• Connect one of the remaining wires removed from the switch to the **black** screw terminal on the Switch.  
• Connect the neutral wire in the wallbox to the **silver** screw terminal on the Switch.  
• Connect the remaining wire removed from the switch (note wire color) to the **blue** screw terminal on the Switch.

**Wiring the Companion Switch (MA-R) on the Line Side:**  
• Connect the green ground wire on the Companion Switch to the **bare copper or green** ground wire in the wallbox. See Important Note 5 on other side.  
• Connect the wire tagged in step 3b to the **black** screw terminal on the Companion Switch.  
• Connect the same color wire connected to the **blue** screw terminal on the Switch (wire color noted above) to the **blue** screw terminal on the Companion Switch.  
• Connect the remaining wire removed from the switch to the **brass** screw terminal on the Companion Switch.

**5c - Three or more-Location Control**  
One location will be replaced with a Switch and the others with Companion Switches. Only one Switch can be used with up to nine Companion Switches.

**Replace the two switches:**  
• Both 3-way switches must be replaced with Companion Switches.  
• Connect the green ground wire on the Companion Switch to the **bare copper or green** ground wire in the wallbox. (See Important Note 5 on other side.)  
• Connect the wire tagged in step 3c to the **black** screw terminal on the Companion Switch.  
• Connect the same color wire connected to the **blue** screw terminal on the Switch (wire color noted above) to the **blue** screw terminal on the Companion Switch.  
• Connect the remaining wire removed from the switch to the **brass** screw terminal on the Companion Switch.

**Wiring the Switch on the Load Side:**  
• Connect the green ground wire on the Switch to the **bare copper or green** ground wire in the wallbox. (See Important Note 5 on other side.)  
• Connect the wire tagged in step 3b to the **brass** screw terminal on the Switch.

• Connect the same color wire connected to the **blue** screw terminal on the Switch replaced a 4-way switch (wire color noted above) to the **blue** screw terminal on the Companion Switch.

• Connect the neutral wire in the wallbox to the **silver** screw terminal on the Switch.

• Connect the remaining wire removed from the switch to the **black** screw terminal on the Switch.

**Wiring the Companion Switch (MA-R) on the Line Side:**  
• Connect the green ground wire on the Companion Switch to the **bare copper or green** ground wire in the wallbox. (See Important Note 5 on other side.)  
• Connect the wire tagged in step 3b to the **black** screw terminal on the Companion Switch.

• Connect the same color wire connected to the **blue** screw terminal on the Switch (wire color noted above) to the **blue** screw terminal on the Companion Switch.

• Connect the remaining wire removed from the switch to the **brass** screw terminal on the Companion Switch.

**Wiring the Switch on the Load Side:**  
• Connect the green ground wire on the Switch to the **bare copper or green** ground wire in the wallbox. (See Important Note 5 on other side.)  
• Connect the wire tagged in step 3b to the **brass** screw terminal on the Switch.

• Connect the same color wire connected to the **blue** screw terminal on the Switch replaced a 4-way switch (wire color noted above) to the **blue** screw terminal on the Companion Switch.

• Connect the neutral wire in the wallbox to the **silver** screw terminal on the Switch.

• Connect the remaining wire removed from the switch to the **black** screw terminal on the Switch.

**6 Mounting Switches to Wallbox**

Form wires carefully into the wallbox, mount and align Electronic Switch (and Companion Switches).

Attach Claro or Satin Colors® Wallplate(s) (sold separately).



**7 Turning Power ON**  
Turn power ON at circuit breaker (or replace fuse).

**Instalación**

**1 Desconectar la alimentación.**  
Desconecte la alimentación en el cortacircuito (o quite el fusible).

**2 Remoción de la Placa de Pared y el Interruptor**  
Retire la placa de pared y los tornillos de montaje del interruptor.  
Retire el interruptor de la pared con cuidado (**no saque los cables**).

**3 Identificación del Tipo de Circuito y etiquetado del Cable en el Borne "COMÚN" de los Interruptores.**

**3a - Control de ubicación única**

**Cuando un interruptor controla una luminaria:**  
Este interruptor será unipolar. El interruptor tendrá conectados cables aislados a dos tornillos del mismo color más un tornillo verde a tierra.

**3b - Control de dos ubicaciones**

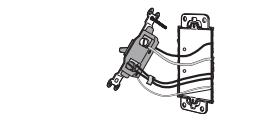
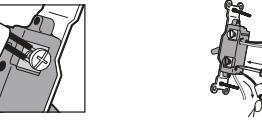
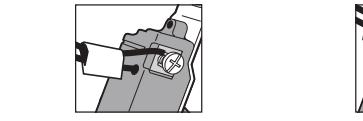
**Dos interruptores controlan una luminaria:**  
Ambos interruptores serán de 3 vías. Cada interruptor tendrá cables aislados conectados con tres tornillos más un tornillo a tierra de color verde. Uno de estos cables está conectado con un tornillo de distinto color (no verde) o etiquetado como COMÚN. Etiquete este cable en ambos interruptores para poder distinguirlo cuando vuelva a cablear.

**3c - Control de tres o más ubicaciones**

**Tres interruptores o más controlan una luminaria:**  
Los interruptores serán de 3 puntos y los otros de 4. Etiquete los dos interruptores de 3 puntos tal como se muestra en el diagrama de Dos Ubicaciones arriba. El interruptor de 4 puntos tendrá cables aislados conectados con cuatro tornillos, además de un tornillo de tierra de color verde. Etiquete los dos cables aislados del mismo color que estarán conectados con los tornillos de colores opuestos. Siga este procedimiento para cada interruptor de 4 puntos.

**4 Desconexión de los cables del interruptor.**

**Nota Importante:** Su interruptor de pared puede tener dos cables conectados al mismo borne de tornillo (vea los ejemplos ilustrados a continuación). Una ambos cables con cinta adhesiva antes de desconectarlos. Cuando realice el cableado nuevamente, conecte los cables al Atenuador de la misma forma que estaban conectados al interruptor que se reemplaza.

**5 Cableado**

Cuando se hagan las conexiones de los cables, la sección sin aislamiento debe respetar las combinaciones y longitudes recomendadas para el conector de cable provisto. **Nota:** Todos los conectores de cable ya provistos son para **cable de cobre solamente**. Para cable de aluminio, consulte a un electricista.

Recorte o pele los cables de la caja de empotrar hasta la medida indicada en el reverso del Atenuador.

**Conector de cable:**  
Use el conector de cable de latón de 1,5 mm<sup>2</sup> (14 AWG) o 2,5 mm<sup>2</sup> (12 AWG) al cable de tierra del Atenuador. 0,75 mm<sup>2</sup> (18 AWG).

**Terminales a presión:**  
Alinee en forma segura. **Nota:** Los bornes a presión sólo se utilizan con cables de 1,5 mm<sup>2</sup> (14 AWG) o 1,5 mm<sup>2</sup> (14 AWG) de **cobre sólido**. NO utilice cable retorcido ni trenzado.

**Terminales de tornillo:**  
Alinee en forma segura. **Nota:** Los bornes de tornillo se deben usar con cable de 2,5 mm<sup>2</sup> (12 AWG) o 2,5 mm<sup>2</sup> (12 AWG) de **cobre sólido solamente**. NO use cable trenzado o retorcido.

- Para instalaciones que involucran más de un control en una caja, consulte a Multigang Installations antes de comenzar.
- Use los bornes de tornillo o de empujar cuando hace las conexiones en el Atenuador o el Atenuador Accesorio.
- Realice el cableado de todos los controles antes del montaje.

**5a - Control de ubicación única**

**Cableado del Interruptor:**  
• Conecte el cable a tierra **verde** del Interruptor Electrónico al cable de **cobre desnudo** o cable a tierra **verde** de la caja de empotrar. (Vea la nota importante 4 del otro lado.)

• Conecte el cable neutro de la caja de empotrar al borne de tornillo **plateado** en el Interruptor Electrónico.

**Si no hay disponible un cable neutro en la caja de empotrar, contacte a un electricista calificado para la instalación.**  
• Conecte uno de los cables restantes al borne de tornillo de **latón** y el otro cable al **negro**.

• Ajuste el borne de tornillo **azul** del Interruptor Electrónico.  
**El tornillo azul no se usa en un circuito unipolar.**

**Nota:** Si los cables conectados a los tornillos **negro** y **latón** se invierten, la unidad no funcionará. Puede ser necesario cambiar las conexiones para asegurar que el tornillo de **latón** esté conectado a la carga.

**5b - Control desde dos lugares**

**Nota:** El interruptor debe ser instalado del lado de la carga del cableado para múltiples posiciones.

**Cableado del interruptor del lado de la carga:**

• Conecte el cable de tierra **verde** del interruptor al cable de **cobre desnudo** o cable a tierra **verde** de la caja de empotrar.

• Conecte el cable neutro de la caja de empotrar al borne de tornillo **plateado** del interruptor.

**Cableado del interruptor accesorio (MA-R) en el lado de linea:**

**Cableado del interruptor:**  
• Conectar el fil **vert** de mala a la tierra de la caja de empotrar al fil **de cobre nu** o vert de la caja de empotrar.

**Si un fil neutro no es accesible en la boîte murale, contacte a un electricien.**

**Bornes a presión:**

• Serrinar los bornes a presión.

**Bornes a tierra:**

• Serrinar los bornes a tierra.

**Bornes a viv:**

• Serrinar los bornes a viv.

**Bornes a vis:**

• Serrinar los bornes a vis.

**Bornes a neut:**

• Serrinar los bornes a neut.

**Bornes a tierra:**

• Serrinar los bornes a tierra.

**Bornes a viv:**

• Serrinar los bornes a viv.</p