













**CN-RDMSB** 

**CNA-RDMSW** 





PROJECT NAME:_	
NOTES:	

FIXTURE SCHEDULE:

# **Round Control Node**







**CN-RDMSW** 



CNA-RDMSW

#### **Features**

- Simple "Plug-and-Play" Connection Easy to install in the field with pre-installed USB-C receptacle in controls ready fixtures
- Control Technology: PIR for motion sensing + Photocell

CAT. #:

- Includes locking screw to resist vandalism and withstand vibration (Requires M1.5 Allen wrench)
- Easy Programming with IR Remote (CN-REMOTE sold separately) Save and store settings to minimize commissioning time
- 0-10V Dimming Method with dim-to-off capability
- Bi-Level Dimming
- Ability to Set High Trim
- Daylight Harvesting via Continuous Adjustment Mode for Indoor applications

**CN-RDMSW** 

- Photocontrol via on/off mode for Outdoor applications
- Check <a href="https://www.maxlite.com/cmax/">https://www.maxlite.com/cmax/</a> for c-Max fixture compatibility
- 5 Year Warranty

**Specifications** 

## **Ordering Information**

MODEL NUMBER	ORDER CODE	FINISH
CN-RDMSW	105565	WHITE
CN-RDMSB	105566	BRONZE
CNA-RDMSW	108689	WHITE
CN-REMOTE	105567	BLACK

ON C	OFF	TEST	
	5%	100%	DIM+
OFF L	ow	HIGH	DIM-
30s	5m	15m	30m
0% 1	0%	30%	50%
The state of the s	5m	15m	CAM
30m 6	0m	<b>∞</b>	SEND
LOW N	(ED	HIGH	OFF
M1	VI2	МЗ	M4
-	ME A NEW	XL WAVE OF	Te

OPERATING VOLTAGE	12-20VDC	
OPERATING CURRENT	max 12mA	
SINKING CURRENT	max 25mA	
SENSOR TECHNOLOGY	Passive Infrared, Photoelectric	
CONTROL OUTPUT	0-10V	
MAXIMUM MOUNTING HEIGHT	40ft / 12m	
DETECTION ANGLE	120°	
CONNECTOR INTERFACE	USB-C	Audio Jack 3.5mm
COMMISIONING PROTOCOL	IR	
IP RATING	IP66	
CERTIFICATIONS/ STANDARD	cULus Listed E511069, California Title 20 Compliant, FCC Part 15 Subpart B Class A	
OPERATING TEMPERATURE	-40°F to 130°F / -40°C to 55°C	
PHOTOCELL	LOW(1FC) / MEDIUM(20FC) / HIGH(50FC) (PC 0FF)	
HIGH TRIM	50%, 75%, 100%	
OVERALL DIMENSIONS	2.48" x 1.42" / 63mm x 36	mm
COLOR	White, Bronze	
WEIGHT	<b>WEIGHT</b> 1.44oz/41g	

Requires at least one CN-REMOTE per project for commissioning

(remote control sold separately)



5-year standard warranty (further details available at <a href="www.maxlite.com/warranties">www.maxlite.com/warranties</a>) Product may be eligible for a warranty extension to 10 years, for an additional fee. Contact MaxLite for details.





















# **Round Control Node**

#### **Product Dimensions**

#### **CN-RDMS**x TOP

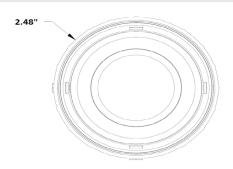


#### **CNA-RDMSW TOP**

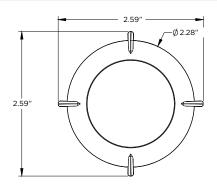


#### \*Requires M1.5 Allen wrench

#### **CN-RDMS**x SIDE

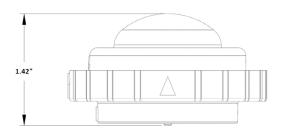


#### **CNA-RDMSW SIDE**

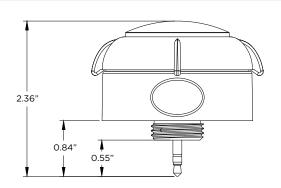


# Sensor Detection Coverage for CN-RD/ CNA-RDMSW Models

SIDE VIEW

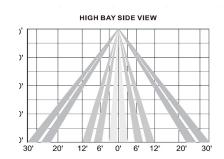

#### TOP VIEW

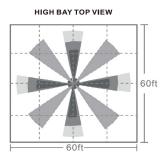

MOUNTING	ft	10'	20'	30'	40'
HEIGHT	(m)	(3)	(6)	(9.1)	(12.2)
MAX COVERAGE	ft	20'	40'	60'	80'
DIAMETER	(m)	(6)	(12.2)	(18.3)	(24.4)

Click on  $\underline{www.maxlite.com/cmax}$  for c-Max fixture compatibility and installation video.



Fax: 973-244-7333 Phone: 1-800-555-5629 Web: www.maxlite.com E-mail: info@maxlite.com Rev: 02/28/23

















# **Basic Control Remote - Quick Guide**



Check out the remote commissioning video here.



# **Remote Settings**

FEATURE	DEFINITION	SETTINGS
HIGH MODE	Set High Trim or Maximum light output setting	SET MAXIMUM THRESHOLD VALUE 50/75/100%. (SENSOR DEFAULT = 100%)
SENSITIVITY	Set motion detection sensitivity	OFF (NO OCCUPANCY) / LOW (50%) / HIGH (100%) (SENSOR DEFAULT=HIGH)
HOLD TIME	Time luminaire stays at the High Trim threshold when no motion detected before going into Standby Dim level.	30S/5M/15M/30M (SENSOR DEFAULT=5MIN)
STANDBY DIM	With no motion detected and hold time elapsed, light output is reduced to this level	0/10/30/50% (SENSOR DEFAULT=50%)
STANDBY TIME	With no motion detected, length of time luminaire stays at the Standby Dim level before turning OFF.	10S / 5MIN / 15MIN / 30MIN / 60MIN / ∞ (SENSOR DEFAULT=30MIN)
PHOTOCELL	Turns luminaire ON/OFF based on photosensor settings. (Outdoor application)	LOW(1FC) / MEDIUM(20FC) / HIGH(50FC) (SENSOR DEFAULT = PC OFF)

Default settings can be changed during commissioning For Standby Dim, "0%" means on/off control. There is no standby dimming level. For Standby time "\infty" means bi-level dimming control. Luminaire will never turn off.

### **Memory Mode (Commissioning)**

To begin commissioning, follow the steps below:

- 1. Select either M1, M2, M3, or M4.
- 2. Indicator lights on the remote will illuminate to indicate the current saved settings.
- Settings can be changed by pressing appropriate buttons in the highlighted gray area of the remote. (HIGH, SENSITIVITY, HOLD TIME, STANDBY DIM, STANDBY TIME, and PHOTOCELL). Review selected settings and make changes as necessary.
- 4. Point remote to desired luminaire to commission and press "SEND".
- 5. If configuration is successful, luminaire will flash suggesting settings are saved.

Note that any changes made to the sensor settings are automatically saved to the memory banks M1, M2, M3 or M4 and will override previous settings.

If commissioning multiple luminaires, select the configured memory mode M1/M2/M3/M4 then follow steps 4 and 5.

#### **Test Mode**

Press "TEST" to enter test mode. Luminaire will flash two times. Test mode will last five (5) minutes then return to previous setting.

HOLD TIME	2 Seconds
STANDBY DIM	50%
STANDBY TIME	2 Seconds

## **To Turn Lights ON**

Press "ON" to turn luminaire on.

## **To Turn Lights OFF**

Press "OFF" to turn luminaire off.

# **Manual Dimming Mode**

Press "ON", luminaire will blink, then press DIM+ or DIM- to adjust dimming level.

# Continuous Adjustment Mode or CAM (Daylight Harvesting for Indoor Applications)

Continuously adjusts dim levels in response to changes in ambient light.

- 1. Point IR remote to desired luminaire
- 2. Enter Manual Dimming Mode Press "ON", luminaire will blink, then press DIM+ or DIM- to adjust the desired light level.
- Press "CAM", indicator lights on the remote will indicate current saved settings. Note: only HIGH, SENSITIVITY, and HOLD TIME can be selected for CAM settings. (Sensitivity should be set to either LOW or HIGH)
- Review selected settings and make changes as necessary. Press "SEND".
- 5. If configuration is successful, luminaire will blink to confirm setting saved.

If configurating multiple luminaires, repeat steps 1-5 above to configure CAM settings. Light levels has to be configured for each luminaire individually

#### **Reset Mode**

Press "RESET" to enter reset mode. Luminaire will blink to indicate reset is complete. Sensor will default to original settings shown in the above table.

Phone: 1-800-555-5629 Fax: 973-244-7333 Web: www.maxlite.com E-mail: info@maxlite.com Rev: 02/28/23